

Rangehood

Installation Instructions



Australia:

- ozmyhomeappliances@gmail.com
- 📭 www.gaslandchef.com.au



INTRODUCTION

Thank you for choosing this range hood.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

The range hood use high quality materials, and is made with a streamlined design.

Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.

SAFETY PRECAUTION

Never let the children operate the machine.

The range hood is for home use only, not suitable for barbecue, roast shop and other commercial purpose.

The range hood and its filter should be clean regularly in order to keep in good working condition.

Clean the range hood according to the instruction manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.

Forbid the direct baking from the gas cooker.

Please keep the kitchen room a good convection.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.

The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

Regulations concerning the discharge of air have to be fulfilled.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. If they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Do not flame under the range hood.

Accessible parts may become hot when used with cooking appliance.

The warning shall be in the same part of the instructions that include details of how to mount the equipment.

ELECTRICAL SHOCK HAZARD

Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified engineer.


Failure to follow these instructions can result in death, fire, or electrical shock.

WALL MOUNTINGINSTALLATION

Prepare for installation:

a. If you have an outlet to the outside, your range hood can be connected as below picture by means of an pipe (with an interior diameter of 150mm). If you don't have an outlet to the outside, you can go with recirculation mode by using carbon filter.(Pic.1)

Note: Not included carbon filter

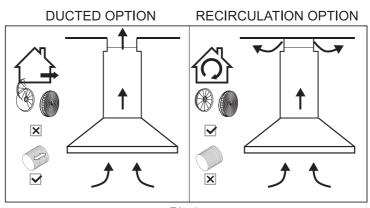

Pic.1














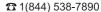









- b. Before installation, turn the unit off and unplug it from the outlet.(Pic.2)
- c. The cooker hood should be placed at a distance of 650~750 mm above the cooktop for the best effect.(Pic.3)

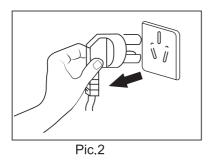

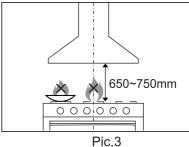


Note: No open flames directly approach to the range hood.

WALL MOUNTING MODEL INSTALLATION

For RH10360 / RH10390 / RH50160 / RH50190 / RH30190 / RH30190B / RH30160B / RH30160-Eco / RH30190-Eco

Prepare pencil, electric drill, plastic wall anchors and level before installation.
 Recommended installation height:700mm.Required minimum installation height: 650mm.(Pic.4)

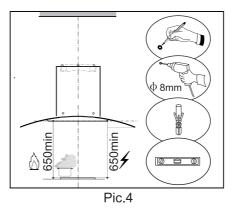













• Drill 3 x 8mm holes to accommodate the bracket. Screw and tighten the hook onto the wall with the screws & plastic wall anchors provided.(Pic.5)

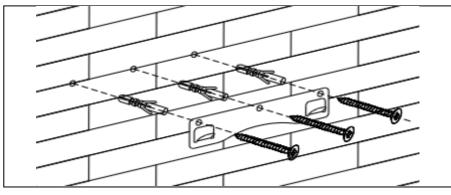

Pic.5

• Lift the cooker hood and hang onto the wall hook.(Pic.6)

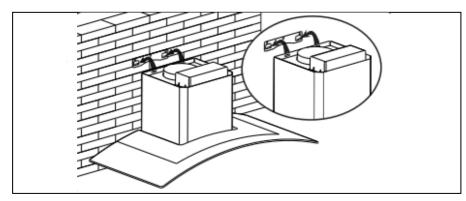


Pic.6








 Need to drill 2x8mm extra holes & fixing screws & plastic wall anchors before installation.(Pic.7)

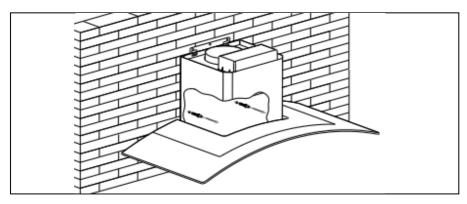

Pic.7

• Mark down the position and drill 2 holes for each chimney bracket and tighten the bracket with screws.(Pic.8)

Note: The longer bracket is upper chimney bracket.

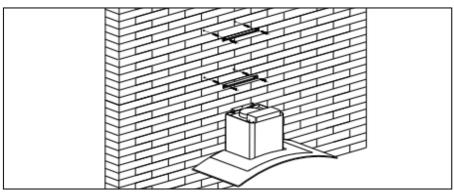

Pic.8

















• Fix the one-way-value to the air outlet of the range hood, and then attached the pipe onto the air outlet as picture.(Pic.9)

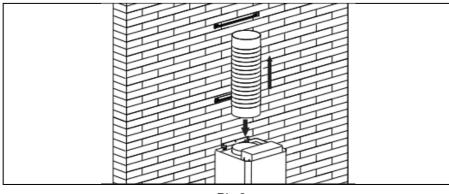

Pic.9

• Put the upper chimney into lower chimney .Then pulling out the upper chimney upwards. Adjust to reach the height required.(Pic.10)

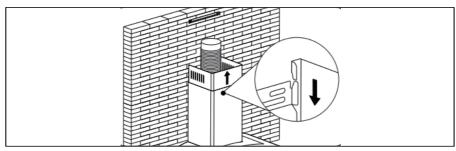


Pic.10








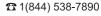



- There are 2 methods for installing the chimney cover. Please check the below pictuire for reference.
- 1. After drilling the 2 holes and fixing the bracket, hang the chimney cover by matching the both side lock.(Pic.11)
- 2. After drilling the 2 holes and fixing the bracket, install the chimney cover by locking with 2 screws in both side holes.(Pic.12)

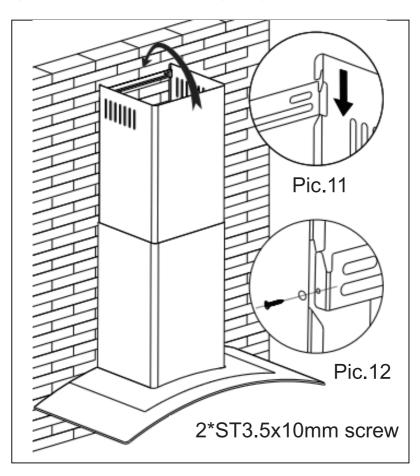



SLIM MODEL INSTALLATION


For RH90590

Two methods of ventilation (A&B)

Vertical ventilation:

Method A: connect the 120mm air outlet to the top vent of slim hood.


Method B: cover the top vent of slim hood with outlet cover provided and remove the back square metal plate with tool.(Pic.13)

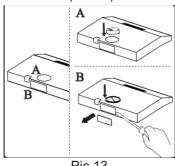

Pic 13

Two ways for installation(A&B) Way A (Wall mounted):

According to the center distance of hole in the back of the slim hood, measure the position and then drill 2pcs Ø8mm holes on the wall. Insert the plastic wall anchors into each hole and tighten 2pcs ST4.2X30mm screws into the plastic wall anchors. Place the slim hood onto the tighten screws. Fix the range hood with safety screw. The two safety screw vents are positioned on the back casing, with diameter of 6mm.Put the one-way-valve onto the hood to finish installation.(Pic.14)

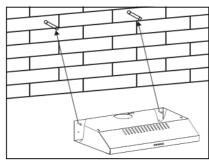

Pic.14













1 1(844) 538-7890








Way B (Cabinet only):

Measure the postion and drill 4 holes into the bottom of cabinet and cut the vent hole in cabinet. Align the slim hood to the hole in the bottom of cabinet and screw in with 4 pcs ST4.2X30mm screws as the picture.(Pic.15)

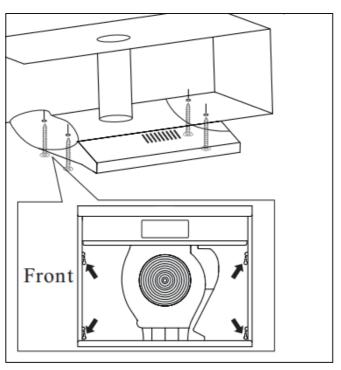

Pic.15

Note:

- 1. Take off protection film before installation.
- 2. There are 2 methods for ventilation, including horizontal ventilation and vertical ventilation. Please pay attention to the ventilation method when installation.

Air ventilation setting


Outdoor exhausting:

Turn the adjuster to outdoor position, install the outlet, turn on the range hood, then the air will be vented from the outside outlet.

Recycling:

The recycling mode with carbon filter, Turn the adjuster to indoor position, install the outlet cover, turn on the range hood, then the air can be vented from the inside outlet. (Pic. 16)

Note: Not included carbon filter

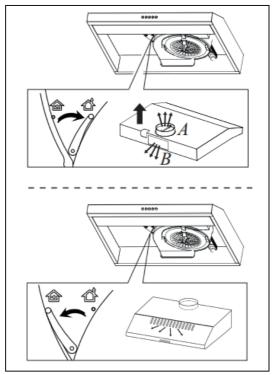

Pic.16

WARNING:

The charcoal cannot be washed or recycled. It should be changed at most after 120 hours using. The carbon filter shouldn't be exposed to heat.














TELESCOPIC MODEL INSTALLATION

For RH90660

Two ways for installation(A&B)

Way A:

To install onto the wall drill 2 holes of Ø8mm on a suitable place according with the centre distance of hole in the back of the range hood. Fix the range hood with safety screw. The two safety vents are positioned on the back casing, with diameter of 6mm. Put the one way valve onto the range hood. Insert the nut into the holes. Insert the screws into the nuts and tight. Put the range hood onto the tighten screws.(Pic.17)

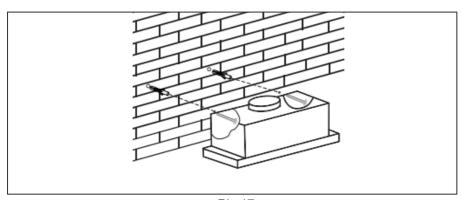

Pic.17

Way B:

Drill 4 holes of 6mm diameter at the bottom of the hanging cupboard .Put the one way valve on the range hood, then install the cooker hood on the bottom of the hanging cupboard, tighten the hood with enclosed 4 screws.(Pic.18)













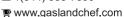



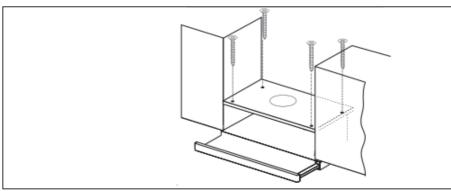

Pic.18

Note:

- 1. The extensible pipe are optional accessory, not supplied.
- 2. Take off protection film before installation.

OPERATION

For RH30190 /RH30190B /RH30160B /RH30160-Eco /RH30190-Eco /RH90590 Push Button



- OFF Button
 Turn off the fan.
- Low Speed Button
 Starts the fan at low speed .
 It is suitable for simmering and cooking.



















Medium Speed Button

Starts the fan at medium speed.

This is ideal for ventilation during standard cooking operation.

* High Speed Button

Starts the fan at high speed.

This is ideal for when a high density of smoke or steam has been produced.

☼ Light Button

Used for turning on/off the light.

For RH90660 Mechanical Rocker Button It just appear in TELESCOPIC MODEL:

2 Speed Rocker



Light button on the left side of hood.




Speed button on the right side of hood.

"=": high speed level.

" — ": Low speed level.

For RH50160 /RH50190 /RH10360 /RH10390 Touch control

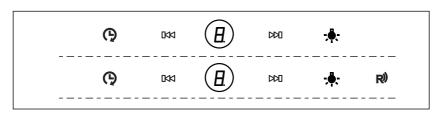







- (I) Digital display key
- **™** Power down key
- **▶** Power up key
- (Delay key

On stand-by and working condition, press this key for 3s, the digital display blinks, we can set the delay power off time from 1 minute to 9 minutes; press the key again to save the setting. If 10s no pressing, then the setting would be saved automatically. When the motor is on and the delay setting is saved ,we can still adjust the setting, and the display window will display the countdown time. When the motor is not working, can just set the delay time, does not have countdown function. The delay time would turn to countdown time when the motor is working.

R) Remote function refer to remote panel (Only for RH10360 /RH10390)



Note:

Digital Display: On working condition, the display would off if 2 minutes without pressing, press again, the key lights on.









GØSLAND









MAINTENANCE


Before cleaning, switch the unit off and pull out the plug.

1. Regular Cleaning


Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

2. Bulb Replacement

- 1. Switch the unit off and unplug the appliance.
- 2.Remove the lamp cover by unscrewing the 2 screws.
- 3. Unscrew the LED Light.
- 4. Replace with the same type and rated bulb/lamp.
- 2*1.5W LED Light(For RH10360 / /RH10390 /RH50160)
 1*2W LED Light(For RH30160-Eco /RH30160B /RH30190-Eco /RH30190 /RH30190B /RH90590).(Pic.19)
- The light may be hot, leave it 10 minutes before replacement.(Pic.20)

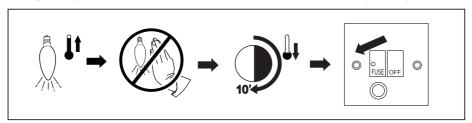

Pic.19

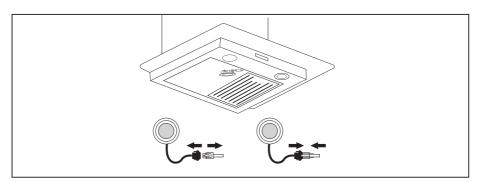

Pic.20






3. Aluminium and charcoal filters replacement

In order to install the carbon filter, the grease filter should be detached first. Press the lock and pull it downward.(Pic.21)


Aluminium filters: To avoid fires, clean thoroughly once a month or whenever the display pilot lights up (if fitted). To do so,remove the filters and soak in hot water and detergent for an hour. If using a dishwasher,position the filters vertically to improve the cleaning process.

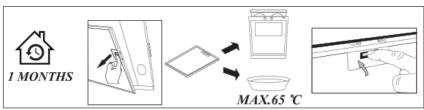

Pic 21

4. Charcoal filter life time

Suggest changing to new one every 3 months (According to different kitchen condition, the life time of charcoal filter might be longer or shorter than 3 months). Installation: Fix carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.(Pic.22)

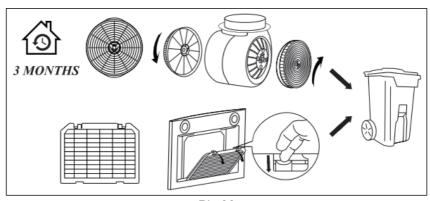

Pic.22

Important Notice:

- 1. Make sure the filter is securely locked. Otherwise, it would loosen and cause abnormal noise and danger.
- 2. Using charcoal filter would reduce the air flow of the range hood.
- 3. Not included carbon filter.












United States:

1 1(844) 538-7890

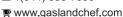



TROUBLE-SHOOTING

Fault	Cause	Solution
Light on,but fan does not work	The fan blade is jammed.	Switch off the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	Light bulb burn.	Replace the LED light with correct rating.
	Power cord is loose.	Plug into the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch off the unit and repair by qualified service personnel only.
	The fan motor is not fixed tightly.	
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too far distance between the unit and the cooktop.	Readjust the distance between 650-750mm.



ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

WARRANTY

The appliance comes with 1 year limited warranty, provided it has been operated and maintained as per the manufacturer's specifications outlined in the instruction manual.

In the event of defects arising from faulty workmanship and/or materials for a period of 1 year from the date of purchase, GASLAND chef will replace or repair the appliance free of charge. In accordance with Australian Consumer law, you are entitled to a refund or a replacement in the event of a major failure, and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the unit replaced or repaired if it fails to be of acceptable quality and the failure does not amount to a major failure.












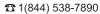







GØSLAND chef



United States:

1 (844) 538-7890

