

MAX^{PRO}



MANUAL
SILK BRUSH

ABOUT | MAX PRO SILK BRUSH

Create a smooth, frizz-free look with the Max Pro Silk Brush. The perfect straightening brush that combines the heat of a straightener and the structure of a paddle brush for silky smooth hair in minutes. This straightening brush can be used to create a straight or wavy hairstyle. The ergonomic design makes the brush comfortable to use, while the multi-row heating teeth helps the hair glide through the brush without damaging the hair.

Due to the protected teeth, you are allowed to reach closer to the roots without burning the scalp. The tool is equipped with tracks on the back for a better spread of the hair and heat protection. The Max Pro Silk Brush ensures longlasting natural hairstyle. For best results use on dry, brushed-out hair (!)

This innovative straightening brush has three different heat settings: 180°C, 200°C and 230 °C. It has an automatic shut-off function that sets in after being unused for 60 minutes.



INSTRUCTIONS

- Ensure your hair is dry and combed through.
- Connect the Silk Brush with a socket, hold the button for 2 seconds to switch on.
- Press the button once to switch temperature levels, starting from 180 degrees to max. 232 degrees.
- After setting the ideal temperature, allow a few seconds for the brush to heat up all the way through.
- Separate section of your hair.
- Hold the hair end firmly and glide with the Silk Brush through your hair, from the root to the end in one pass
- Then repeat this action for the rest of the sections of your hair. You will be done straightening the hair within a few minutes.
- After using, press the button for 2 seconds to switch off and unplug appliance.
- Please wait until appliance cooled down before packing it up.

For curling the hair

Hold your hair and move the brush in a curling motion, curling it towards inside or outside. Then keep the brush around 3-5 seconds at the hair ends - until the curl has a chance to form.

SAFETY INSTRUCTIONS

- Always unplug the appliance immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not drop into water or other liquids.
- If the appliance falls into water, unplug immediately. Do not reach into the water.
- This appliance should never be left unattended when plugged in.
- Close supervision if necessary when this appliance is used by, on, or near children or individual with certain disabilities.
- Use this appliance only for its intended use as described in the manual. Do not use any attachment not provided by the manufacturer.
- Keep the cord away from the heated surface.
- Do not warp the cord around the appliance.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not place the heated appliance directly on any surface while its hot or plugged in.

BURNS

- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.
- When you burn yourself, stop with styling your hair and take care of the burn immediately.
- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.
- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.
- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via www.maxprohair.com.

DEFECTS

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.
- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damage caused by incorrect or improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.

WARRANTY

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! To register for this exclusive warranty, you can visit us at **www.maxprohair.com** and fill in the registration form.

Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer.

For questions about the warranty, please contact our customer service or visit us at **www.maxprohair.com**. If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!

GOODBYE TO BAD HAIR DAYS

+31 (0)20 261 0907
info@maxprohair.com