



Gliderol Instructions:

1. Remove the light cover from the motor.
2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button, you have just pushed then this is the wrong button.
4. In less than 5 seconds, push and hold button A or button 1 on the new remote.
5. The red light will go out and the remote is coded.

Gliderol GRD:

1. Remove the cover from the motor wall unit.
2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button you have just pushed then this is the wrong button.
4. In less than 5 seconds, push and hold button A or button 1 on the new remote.
5. The red light will go out and the remote is coded.

Note:

Please note that if you have more than one motor. You will need to use button A or button 1 for all motors. The motor will determine which button on the remote will operate the door.

