



On overhead door openers:

- With five exposed terminal screws at the rear
 1. Remove the small black cover to the right of the terminal screws
 2. Learn is the **RED** button under the black cover
- Learn is the **RED** button under the black cover:
 1. Learn is the **RED** button under the black cover.
 2. Find the small button marked "Learn"
- With four covered terminal screws at the rear, and a Merlin wired wall switch
The small button on the Merlin wall switch is the Learn button

On roller door openers:

- Single small square **RED** button on the front.
 1. Remove the lamp cover; remove the small black cover to the left of the lamp holder
 2. Learn button is the **RED** button under the black cover
 - Large **RED** or **GREEN** push switch on front
 1. Remove the **RED** or **GREEN** control panel cover
 2. Find the small button marked "Learn"
- Large **RED** or **GREEN** push switch on front and a Merlin wired wall switch
The small button on the Merlin wall switch is the Learn button

On other receivers:

- Dark grey boxed receiver with a large round **GREEN** button
The Learn button is the small **DARK GREY** button inside the **GREEN** button

• Gate receiver cards:

The Learn button is the tact switch on the PCB marked "Learn"

• Others:

See your receiver's user guide, or inspect and find a button marked "Learn"

PROGRAMMING THE NEW REMOTE TO THE OPENER OR RECEIVER

1. Press and hold the Learn button for 1 to 2 seconds.
2. Press the desired button on the remote control which you want to operate the door twice.

Programming the remote to control the lamp on your opener (if fitted):

1. Press the desired button for the secondary function.
2. Press and hold the Learn button for 1-2 seconds.
3. Press the desired remove control button once for the main function (open door).
4. Press the desired remove control button once for the secondary function (control lamp)

