



## Tiltamatic Instructions:

1. Open the new remote by removing the two screws at the rear.
2. Open your existing remote battery cover to expose the dip switches. If you do not have an existing remote, you must find the dip switches located on the motor which are generally under the side panel.
3. Copy the switch sequence from your old remote to the new one.1. Press the desired button for the secondary function.
4. Close both remotes and test

