

Installation Guide



PLEASE NOTE:

Before you begin, read the instructions below. Observe all local plumbing and building codes.

Unpack and inspect faucet for any shipping damages and ensure that none of the required pieces are missing. If you find any damages, do not install. Contact Customer Service at 213-425-3095.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Eisen Home accepts no liability for any damages to the floor, walls, plumbing or personal injury during installation.

Care should be exercised when cleaning this product. Although its finish is extremely durable, it can be damaged by harsh abrasives and cleaning pads. Use a light, non-abrasive cleaning solution or cleaning polish to clean the faucet surface.

If any questions or concerns arise, please feel free to reach out to us



cs@eisenhome.com



eisenhome.com



(213) 425 3095



 
EISEN®
LIVE IN STYLE

INSTALLATION GUIDE


SINGLE HOLE KITCHEN SINK FAUCET

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Eisen Home accepts no liability for any damages to the floor, walls, plumbing or personal injury during installation.

RECOMMENDED TOOLS




Adjustable wrench

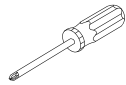

Philips screwdriver



Pipa tape

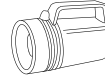


Flashlight



Hex key

PARTS & DIAGRAM

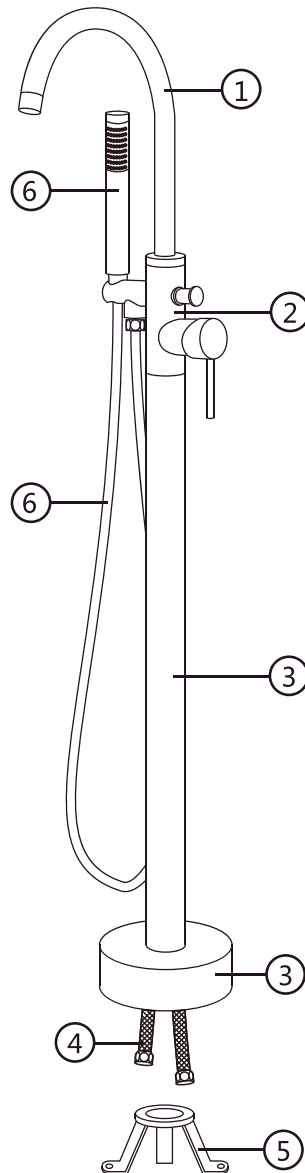

1. Tub filler spout
2. Body
3. Floor (escutcheon)
4. Hot & Cold Flexible hoses x 2
5. Mounting bracket
6. Hand shower & hose
7. Expansion screw


STEP 1

Lay the faucet down flat so that all parts can be easily viewed and accessed during assembly.

STEP 2


Slide the decorative escutcheon, or base, onto the body of the faucet. You may need to remove the mounting plate if already in place.

TIP: Make sure the rubber sealing gasket (if included) is around the rim of the escutcheon. Shift the escutcheon up the faucet so that you have enough room for your tools during installation.

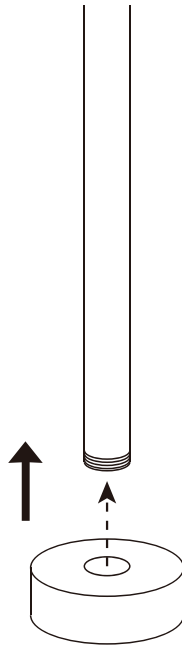

STEP 3


Attach the mounting bracket to the body of the faucet. If a hex nut was included with your faucet, screw the nut onto the body of the faucet followed by the mounting plate. The two should fit tightly together to create a seal.

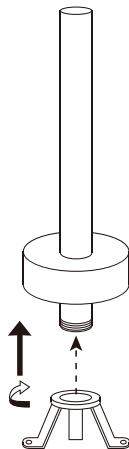

STEP 4


Connect the flexible hoses to the bottom of the faucet body. If the water feed tubes are already connected to your faucet, move on to step 5. These are meant to be hand tightened only. Once the hoses begin to warp as you turn them they have been tightened enough, any further tightening could damage the connection tubes.

TIP: Each hose is marked with a sticker, blue for cold and red for hot water. After the hoses have been connected place a piece of masking tape on the red, or hot water hose to help ensure that the two do not get crossed at any time during installation.

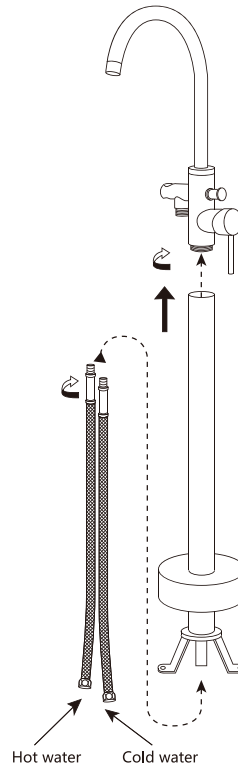


STEP 5

Thread the water feed tubes through the hole on the floor and connect to the main water supply via the under-floor access space. Briefly turn on the water supply to make sure there are no leaks in the water feed tubes before you fix the faucet to the floor. If no leaks are detected, turn off the water supply and continue with the installation. If leakage does occur, use your adjustable wrench to tighten the connections as necessary. If Problem persists, contact customer service at 213-425-3095.

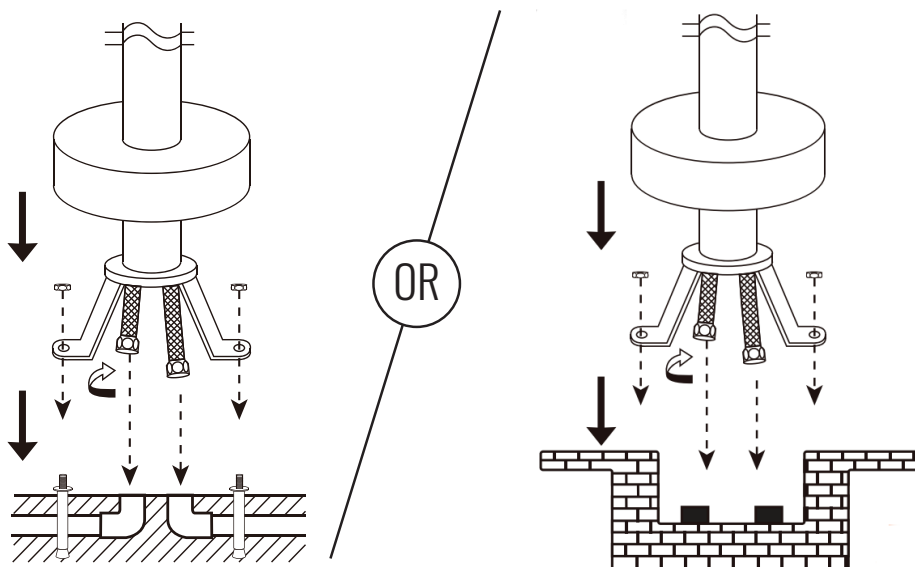



STEP 6

Sit the faucet upright with the mounting plate flat to the floor. Use your level to verify that the faucet is properly aligned. If the faucet is not level place a shim underneath the mounting plate and adjust as necessary.

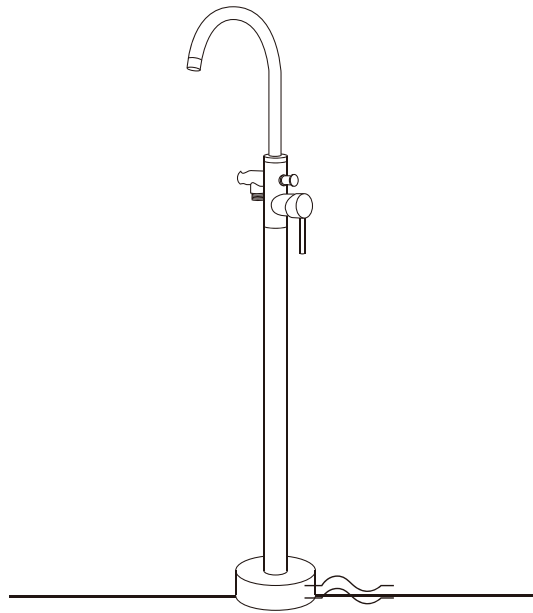

STEP 7


Secure the mounting plate to the floor using your drill and the appropriate mounting hardware. If there is a decorative escutcheon, slide it down over the mounting plate and press into place.

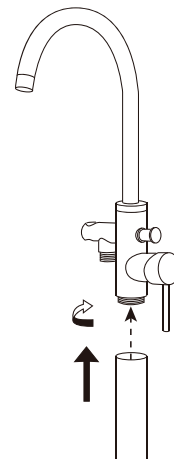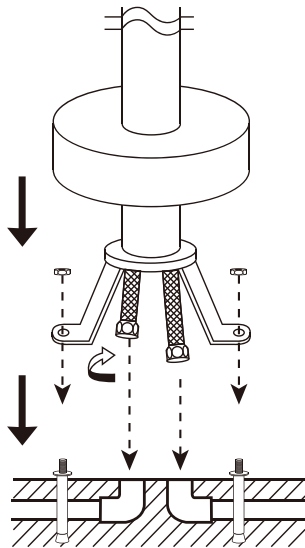

STEP 8

Finish your installation by attaching any hoses and/or handles that might be included. There is a bag of extra materials included in the packaging. There may be items that are not used at the time of installation but may be needed later. Do not discard these materials.

TIP: If your faucet features a hand shower attachment, screw the tapered end of the hose onto the hand shower so that the piece fits properly in the cradle.

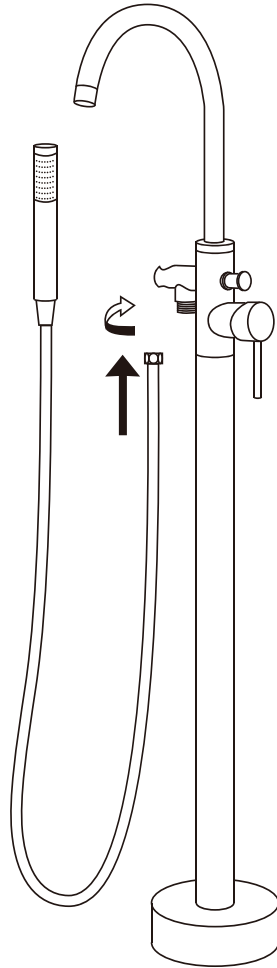

STEP 9

Tighten the set screw located on the side of the faucet with your allen wrench to secure the spout in place.

STEP 10

When the faucet is installed turn on the water supply, check to make sure that all connections are tight (no water should be leaking) and that the hot and cold supplies are working correctly. If you have a hand shower, divert the water to the hose and allow the water to flow through the hose for approximately 5 minutes.

MAINTENANCE & CARE INSTRUCTIONS

Care should be exercised when cleaning this product. Although its finish is extremely durable, it can be damaged by harsh abrasives and cleaning pads. Use a light, non-abrasive cleaning solution or cleaning polish to clean the faucet surface.



Any Damp Micro Fiber Cloth



Soapy water



PH balanced soap based cleanser



Any Chemical free cleanser



Cleaner with wax or filling agents



Cleaners with unidentified chemicals



Anything that can scratch the surface



Caustic, acidic or abrasive agents with any solvent

This warranty extends only to the original owner/end-user for personal household use only. For commercial uses, additional limitations may apply. Eisen Home warrants mirrors, bathtubs, faucet finishes and fittings to be free from defects in workmanship and materials under normal use and service for a period of two (2) years. Eisen Home will, at its election, repair, replace, or make appropriate adjustment where Eisen Home optional inspection discloses any such defects occurring in normal usage within the warranty periods. Please note that Eisen Home is not responsible for installation or removal costs. Improper modification of any bathtub and/or faucet may void the warranty.

This warranty does not cover any claim arising from abuse, misuse, negligence, accident, improper installation or operations on the part of the purchaser. This warranty is void if the Eisen Home product is subject to alterations, or if repairs are attempted by anyone other than an authorized agent of Eisen Home. This warranty does not extend to any plumbing or components installed by dealers, installers or by any party other than Eisen Home. Implied warranties, including that of merchant ability or fitness for a particular purpose, are expressly limited in duration to the duration of this warranty. Eisen Home disclaims any liability for special, incidental or consequential damages.

PRODUCT LIMITATION OF LIABILITY

Eisen Home shall not, under any circumstances, be liable for special or consequent damages, such as, but not limited to,

1. Damage to or loss of other property or equipment,
2. Loss of profits, revenue or reputation,
3. Cost of replacement goods,
4. Cost of storage, handling and/or care of damaged, defective or nonconforming goods or
5. Claims of buyer's customer or service interruptions.

Eisen Home is not responsible for any additional parts or equipment required for the installation or use of any of its products or merchandise, such as plumbing supply requirements (elbow joints, valves, pipes etcetera). Eisen Home is not responsible for the installation of any of its products or merchandise.

The liability of Eisen Home arising out of or related in any way to the sale, delivery, resale, installation or use of the goods sold by or furnished by Eisen Home, whether arising out of contract, negligence, strict tort, or any warranty or otherwise, shall not exceed the price of the specific goods upon which liability is to be based. Buyer's remedies for any breach of this agreement by Eisen Home, or with respect to Eisen Home liability under this agreement shall be limited to either Eisen Home choice of any of the following:

1. The repair of the goods,
2. The replacement of the goods,
3. The return of the goods in question to Eisen Home and the return to the buyer of any consideration paid to Eisen Home for said goods.

Register your product at: www.eisenhome.com/warranty-terms



cs@eisenhome.com



eisenhome.com



(213) 425 3095