

 

 

 

 
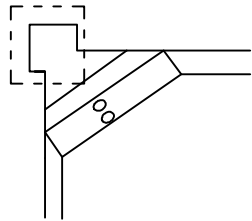




ASSEMBLY INSTRUCTIONS

Ax1	 Seat
Bx2	 Front leg
Cx2	 Back leg
Dx2	 Adjust the foot
Ex4	 Screw M8*60mm
Fx4	 Screw M8*50mm
Gx8	 Spring washer M8
Hx8	 Flat washer M8*22mm
Ix1	 Allen key M8

① The legs are hidden under the seat frame

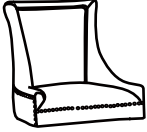

Put the front leg in the dotted box place, Reach to the bottom and tighten the screws.

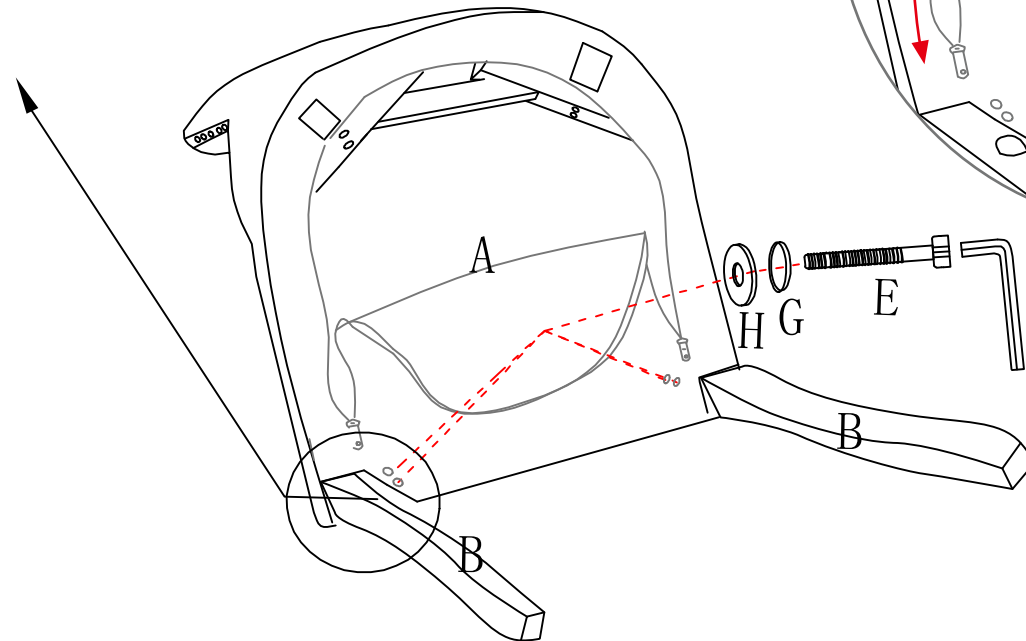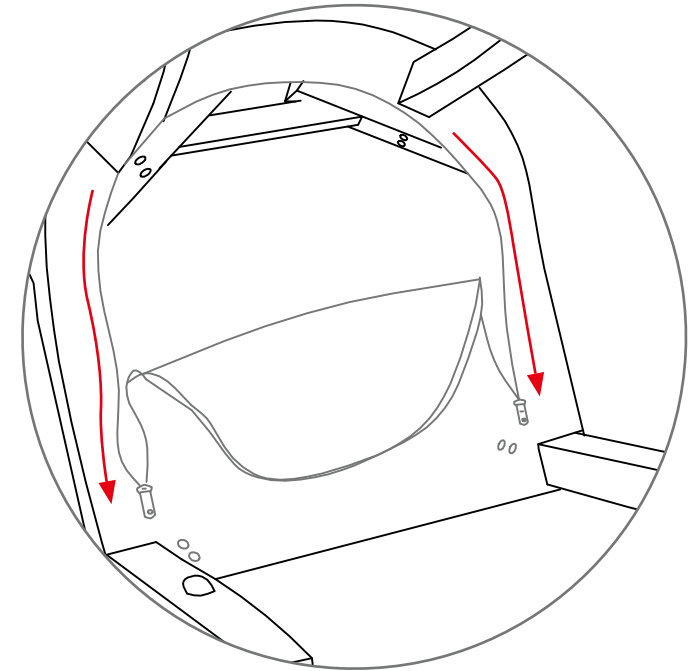


Tighten all the screws to 80% of maximum tightness

WARNING:


DO NOT STAND ON THE PRODUCT, DO NOT USE THIS PRODUCT AS A STEP LADDER.
DO NOT USE THIS PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR PRODUCT.

②

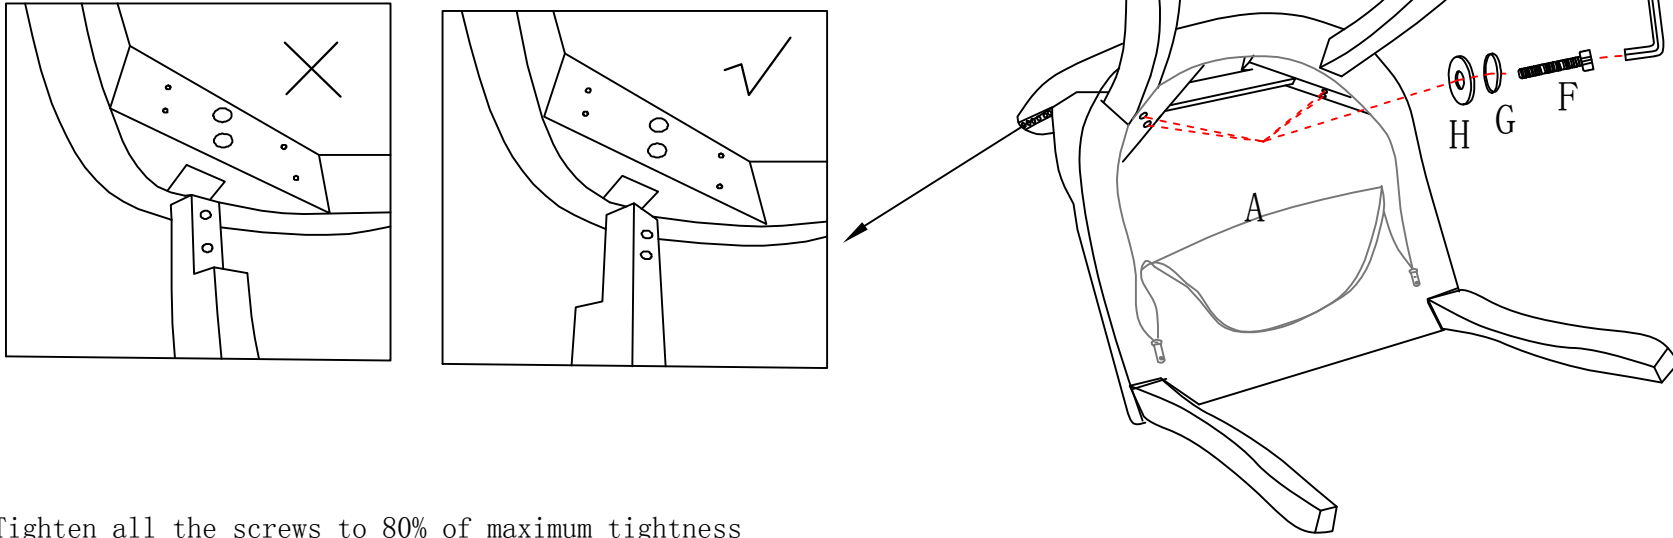

Tighten all the screws to 80% of maximum tightness

③

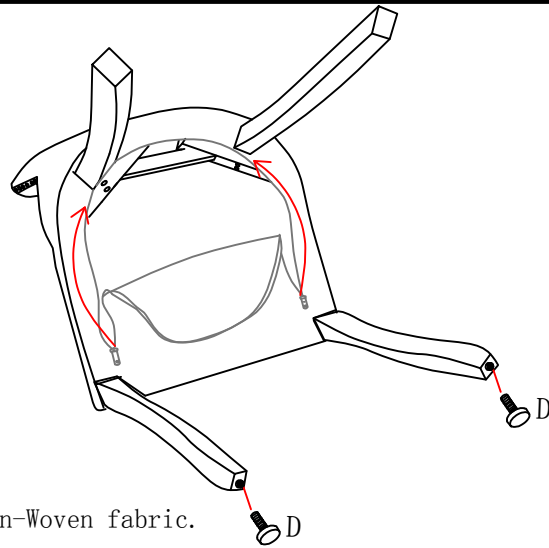

Close the zipper of bottom Non-Woven fabric.
Tighten all the screws to
100% of maximum tightness
There are 2 small adjusters on the front legs ,ensure these are
adjusted so the chair sits level

④

