



Instruction Manual

Main pole A



Main pole B



250mm extension



Adjuster cover




125mm extension



DVD



Base

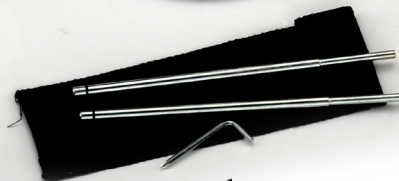


tools



Support dome

Parts List

- 1..... Main Pole A (for inserting the adjuster)
- 2..... Main Pole B
- 3..... 125mm Extension
- 4..... 250mm Extension
- 5..... Height adjuster cover
- 6..... Support Dome
- 7..... Spinning/Locking Base
- 8..... Assembly tools
- 9..... Assembly DVD

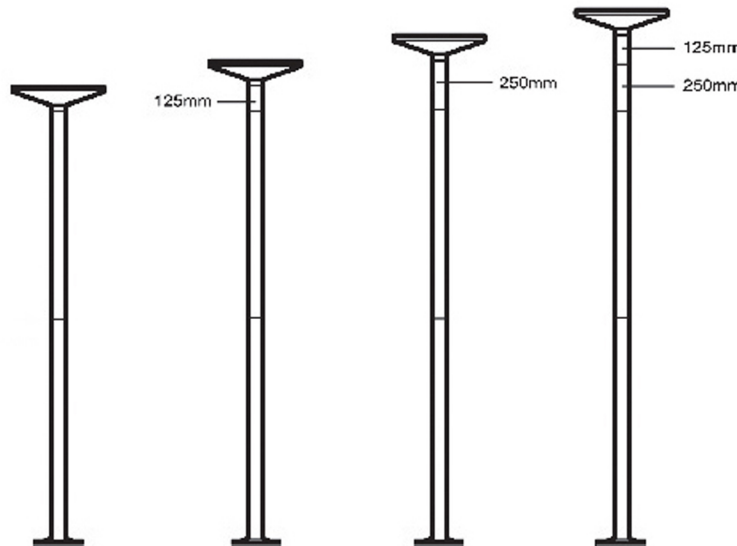

2235-2375mm
88" - 93.5"

2360-2500mm
93" - 98.5"

2485-2620mm
97.8" - 103.25"

2610-2745mm
102.75" - 108"

Assembly Instructions

Before starting:

- Make sure your installation space is clear of any obstructions (ceiling fans, furniture, etc).
- Verify that you are setting up the pole where there is good ceiling and floor support.
- Make sure your ceiling is less than 9' tall to be compatible with this pole.
- Get another person to help you with the installation. It can be installed by one person but it helps to have two.

Installation Instructions

1. Place the articulating base (9) on the floor and make sure the the knuckle is locked and does not spin. This will allow you to easily thread on the next pieces.
2. Install extension(s) (5, 6) if required to reach your desired ceiling height.
3. Install Bottom Main Pole B (4) piece.
4. Remove the screws from the height adjuster cover and separate the cover and ring pieces. Then place the height adjuster cover (7) on the pole and let it slide down to the floor. You will install this piece as the last step.
5. Install Height adjuster (2) and Flange Nut (3) into the Top Main Pole A (1) piece.
6. Install the Top Pole (1) piece onto the bottom pole (4) piece.
7. Put the height adjuster cover ring (12) on top of the height adjuster and then the Upper Dome (8) on top of that.
8. Unthread the Height Adjuster (2) until you have the upper dome (8) secured to the ceiling.
9. Bring the height adjuster cover up to the top of the pole and screw it to the adjuster cover ring.

Troubleshooting

I've unlocked the knuckle on my pole but the pole isn't spinning easy enough?

"Thread the height adjuster down so it isn't so tight into the upper bearing. Bring it back a quarter turn at a time"

The pole appears to loosen from the ceiling as I am spinning on it!

"Make sure that your height adjuster is tightened enough to the ceiling and the flange nut is locked down".

There is a knocking sound when I spin on the pole.

"Your pole is not completely vertical. Loosen the height adjuster and recenter the item and retighten to the ceiling".

Having trouble with your DVD? Check out the Installation video online!

<http://www.youtube.com/watch?v=f1sapv7-qOE>