



Ages 4+
2-4 Players

Contents:

• 1 Fishing Unit • 5 Fishing Pieces • 4 Fishing Rods

Requires (2) x 1.5V AA Batteries
(Not Included)



Instructions:

1. Insert (2) 1.5V AA batteries (not included) into the compartment.
2. Each player takes a rod.
3. Turn the switch to the on position.
4. Player who catches the most pieces is the winner.

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short circuit the supply terminals.
- Remove all packaging before use.
- Retain this information for future reference.
- Content may vary from pictures.

Please do not allow children to put their fingers in the holes while the game is turned on and the board is turning.



TM & ©2019. All Rights Reserved
Regal Games LLC
St Charles, IL 60174
Made in China