

WombMusic® Belly Speaker System

User Guide



Wusic® Copyright 2019
Version: 2020.01.29

Using the WombMusic® Belly Speaker

Welcome to the Wusic® family of products. We're excited to be part of your growing family. This guide will show you how to use your WombMusic® Baby Speaker to share the joy of music with your baby.

Quick Start Guide

- 1) Attach Belly Speaker to Music Player**
Bluetooth® Controller, Phone, or Tablet
- 2) Adjust the Belly Speaker Volume**
to a comfortable level for your own ears
- 3) Attach Silicone Pad to Belly Speaker**
and save the trays to store pads later
- 4) Apply Belly Speaker to Mom's Belly**
in a comfortable location for mom
- 5) Enjoy Sharing Your Audio with Baby!**

Thank You for Your WombMusic®

We hope you are completely satisfied with your WombMusic® Belly Speaker purchase.

In the unlikely event you are not 100% satisfied, please **call us at 803-485-1544** or **email us at Admin@WusicTech.com** so we can help you. We won't be satisfied until you are completely satisfied.

If you are pleased with your WombMusic® then not only would we love to hear about it, but would love for you to let our other customers know how you feel.

To Provide Feedback

On Our Website

1. Go to WombMusic.com
2. Click on the product
3. Click "Review" tab
4. Share on our social media

On Amazon

1. Log into Amazon.com
2. Click "Your Orders"
3. Click "Sold by Name"
4. Click "Leave Seller Feedback"

Your reviews and seller feedback
allow us to give you the best products
and service possible!

Register Your WombMusic®

Registering your WombMusic purchase provides you free VIP support and extends your WombMusic® warranty to one year, so please be sure to register using the website below.

Benefits of Registration Include:

- Validates your WombMusic® purchase
- Extends your standard 90-day warranty to a one year warranty (from purchase date)
- Faster customer service including phone support if you'd like us to call you to assist
- Special offers and discounts

Register your WombMusic® at
www.WusicTech.com/pages/register



The Components

This user guide is common for the Deluxe Pack, the Speaker Pack and the Controller Pack. Not all components are in all packs so please refer to the chart below to determine what should be in your package.

	Belly Speaker	Silicone Gel Pads	Bluetooth Controller	Data/ Charging USB Cable	Audio Splitter	Storage Bag	User Guide	Bonus Personalized Music
Deluxe Pack	✓	✓	✓	✓		✓	✓	✓
Speaker Pack	✓	✓			✓	✓	✓	✓
Controller Pack			✓	✓		✓	✓	✓
Silicone Pad Pack		✓					✓	

Belly Speaker is designed to place on your belly so your baby can hear music or audio. A volume control on the cord allows you to adjust the volume to the perfect sound level.

Silicone Gel Pads are used to ensure the Belly Speaker stays in place on mom's belly. The pads are made of gentle, skin-friendly, hypoallergenic soft silicone gel which leaves no sticky residue. Replacement pads are available via WombMusic.com and participating retailers.

Bluetooth® Controller allows you to play music in several different ways using the Belly Speaker, including stream music via Bluetooth®, stored on the memory card or via the Auxiliary Input audio jack. It also provides headphone jacks to simultaneously share the audio via earphones.

Data/Charging USB Cable is used to transfer music into the Controller and can be used to charge the Controller's battery.

Audio Splitter is provided in the speaker pack so both the Belly Speaker and a earphones can be connected to your audio device at the same time.

Storage Gift Bag is used to keep all of your WombMusic® Belly Speaker components neatly organized when not in use.

Alert - Carefully inspect each item for signs of damage. If any item is found to be damaged, please contact Wusic® Customer Service immediately for assistance.

Detailed User Instructions

Please read all of the user instructions before first use!

Belly Speaker Directions

First connect the Belly Speaker to your source audio device (the one being used to play the music). This is typically your cell phone, tablet, computer or the WombMusic[®] Bluetooth[®] Controller.

You can connect the speaker directly if your audio device has a standard 3.5 mm audio out or headphone jack.

If your audio device doesn't have a standard 3.5 mm audio jack then we recommend using the WombMusic[®] Belly Speaker Controller as your source audio device.

Adjust the audio level of the source audio device to a comfortable listening level. You can control the Belly Speaker volume independently of the the source audio by adjusting the dial volume control on the speaker cord.

The ideal Belly Speaker volume is the volume that is comfortable for you when you hold the Belly Speaker to your ear. If the volume is too loud for you, then it is too loud for your baby.

Store your items in the provided gift bag when not in use.

Sound travels easily within your womb so it isn't necessary to make the Belly Speaker loud.



Silicon Gel Pads Directions

The Belly Speaker can be used with, or without the silicone pads. If you plan to use the silicone pads we recommend applying the pads after you've connected the speaker and adjusted everything.

If you don't wish to use the silicone pads, simply tuck the Belly Speaker between your belly and your clothing in a comfortable location.

To use the Belly Speaker with a silicone gel pad, simply remove the protective film from one side of the pad and place the pad on the speaker's face. Then remove the second protective film and place the speaker on your belly in a comfortable location.

We recommend making sure your belly is clean of lotions or oils and dry before applying the Speaker/Pad to your belly.

[Go to WombMusic.com](http://WombMusic.com) to see helpful videos to assist you in using the Belly Speaker System.

Directions for Cleaning the Gel Pads

The silicone gel pads are designed to be re-used many times.

After each use we recommend placing the pad in the storage tray until next use.

If the pad is no longer sticking sufficiently, it is possible some body oil or dust has gotten onto the pad and reduced its stickiness. This is easily fixed by cleaning the pad.

Step 1 - Remove the pad from the speaker.

Step 2 - Clean under luke warm water at the tap by lightly rubbing the pad with your fingers while running water over the pad.


Step 3 - Allow the pad to air dry. After it's fully dry you can return it to your storage tray or apply it to the face of the speaker.

If necessary you can lightly clean the pad in step 2 using water and mild dish soap.

ALERT – Make sure the pad is dry of all water before applying it to the Belly Speaker. Do not use alcohol to clean the silicone pad.

Controller Directions

The WombMusic® Bluetooth® Controller is designed to be extremely multi-functional and can be used with any audio speaker that uses a 3.5 mm audio jack like the WombMusic® Belly Speaker system.

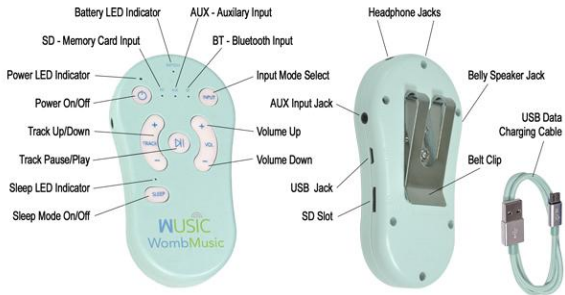

ALERT - Please charge the controller fully before first use.

Charging - Use the included charging cable by connecting the Micro-USB end to the controller and connecting the other end to any normal USB charger port or to your computer.

Power On/Off - Press to turn on or off. The Power LED Indicator will be lit when on.

Battery - The Battery LED Indicator will be lit when charging and will go out once fully charged. The unit will announce when the battery is getting low so that you can connect it to the charger before it is fully depleted.

Mode - Press to change the audio mode. When first turned on it will play audio from the SD card. Select BT for the Bluetooth® mode. Select AUX for the Auxiliary input mode. Auxiliary input can only be selected if an audio input is connected to the AUX jack. The appropriate LED indicator will be lit to correspond to the mode that is selected.

Volume Up/Down - Pressing will increase or decrease the audio volume at the controller and all of the audio output jacks.

Pause/Play - Press once to pause the current song. Press again to resume play.

Track Up/Down - Pressing will start playing the next or previous audio track.

Sleep - Press once to start sleep mode. The Sleep LED Indicator will become lit. Once activated, the unit will continue to play music for 30 minutes and will then turn off. Volume will

automatically be decreased during the final 4 minutes of playing time.

Headphone Jacks - Insert one or two headphones or earbuds into either of these audio jacks.

Belly Speaker Jack - Insert the Belly Speaker cord into this audio jack.

AUX Jack - Insert your 3.5 mm audio input into this jack.

USB Jack - Insert the Micro-USB end of the included charging cable into this jack.

SD Slot - Insert the Micro SD Memory Card face up into this slot until it locks into place. The end of the card will be slightly below the housing surface when correctly inserted. Press in on the card slightly to eject the card from the controller.

Belt Clip - Used to clip the controller to your belt, pants or other clothing.

Storage Bag - Store your items in the provided gift bag when not in use.

Cleaning Speaker or Controller

We recommend cleaning with a soft cloth. You can disinfect the speaker or controller using alcohol wipes and then drying with a soft dry cloth. **DO NOT USE** liquids to clean either the speaker or the controller.



Memory Card Audio Files

The WombMusic® Bluetooth® Controller comes pre-loaded with some lullaby music for you to enjoy with your baby.

Follow the directions below to add or remove audio files.



BONUS – Don't forget to use your included gift card for one FREE album of Friendly Songs Personalized Music for your Child! Besides two lullaby albums Friendly Songs also has fun playful albums, Christian songs and even Birthday songs where your child's name is sung throughout the songs. Download the songs onto the WombMusic® Controller to play to your child now!

Step 1 - There are two ways you can add, remove or change the music files on the controller. All audio files must be in the MP3 audio format to play correctly.

- **RECOMENDED Data Cable Method**

We recommend using the USB cable provided with the controller to modify the files. First, connect the USB cable to your controller and your computer.

- **ALTERNATE Memory Card Method**

ALERT - We do not recommend removing the Micro SD Memory Card since it can be easily lost or damaged.

If the card is lost or damaged you can replace it with a new Micro SD Memory card purchased from any retailer.

To modify the music, put the SD card into your computer using a card reader.

Step 2 - By either of the above methods, you will see the drive show up as “**WUSIC**” in your computer, similar to a flash drive.

Step 3 - At this point you can now add or remove files to the controller. Files can be stored in folders within the controller as well.

ALERT - Please keep a back-up of your audio files on your computer in case of damage to the controller's memory card.

Bluetooth® Pairing the Controller

The WombMusic® Belly Speaker Controller can be paired with any standard audio device that supports Bluetooth®.

Step 1 - Use the Mode button on the Belly Speaker Controller to select BT to begin pairing the device. The BT LED Indicator light should be lit indicating it's in Bluetooth® mode.

Step 2 - On your audio device, turn on your Bluetooth® and then look for "Wusic" under "Other Devices" if it's never been paired with your device previously. Your device may require you to select "Pair New Device" to turn on the Bluetooth® discoverability.

Step 3 - Select "Wusic" and Save. It may take a few seconds for the pairing process to complete.

Once the WombMusic® Belly Speaker Controller has been paired to your device, it should discover it automatically when both your device's Bluetooth® is On and the controller is in BT mode.

Step 4 - Go to your favorite music player, video player or even social media on your device and hit “Play” in the app. The audio will now be heard from the Belly Speaker.

Also Available from Wusic!

We really appreciate your purchase of the WombMusic Belly Speaker. Many of our customers have also purchased the WombMusic Baby Heartbeat Monitor!

WUSIC
WombMusic

Heartbeat Monitor

We think you'll love hearing baby's heartbeat as much as you enjoy playing them music!



Important Precautions

- Do not use or expose to temperatures above 110°F or below 25°F. Do not use in wet environments.
- Do not impact with hard object. Doing so can damage the housings, electronics, speaker or battery.
- Do not repair or attempt to dismantle the controller or speaker housings. Doing so will void your warranty. If your unit isn't working go to WombMusic.com and request assistance.
- Do not disconnect the USB Data/Charging cable from a computer without first "ejecting" the "Wmusic" drive. Failure to do so could cause the SD card to fail and/or damage to the audio files on the card.
- Do not use the Belly Speaker at a volume higher than what you'd want to hear if you placed the speaker next to your ear.

- Wusic[®] is not responsible for any loss or indirect loss due to improper use of this device. Maintain a back-up of the audio files you may add to this device. Please follow all of the user guide directions.
- The WombMusic[®] Belly Speaker System is not a medical device and can not be used for diagnostic or medical purposes and is not to be used as a substitute for regular prenatal care by a licensed doctor.
- Consult your physician before first use. Limit use to 1 hour a day. Keep your cell phone or tablet away from your womb.
- Stop using and consult a physician if the pads should cause any skin irritation or if you feel any pain. Do not use during labor.
- Wusic[®] expressly disclaims liability for damages of any nature. Please consult your doctor prior to using the WombMusic[®] Belly Speaker System or any of it's components.
- Choking Hazard – Keep away from Children. Not to be used as a toy.

Troubleshooting

- No Power – Press Power Button on controller. Charge the controller using the included USB Data/Charging cable. Battery is internal only and NOT replaceable.
- Not playing Bluetooth® Audio – Change mode to BT. Turn Off/On the Bluetooth® mode on your source device.
- No Volume – Check connections are fully plugged in. Increase volume using the Volume Dial on the Belly Speaker cord, Increase Volume on the Controller, Increase Volume on the source device, Check Audio settings on the source device, Test using another source device.
- Pad Doesn't Stick – Clean the pad per user guide directions and let dry. Clean your skin of all oils and lotions
- Pad is Torn/Damaged – Use the second provided pad. Order replacement pads.

WombMusic[®] Specifications

- Bluetooth[®] Controller: Declaration D048372
www.wusictech.com/pages/bluetooth
- IP Rating: IP30 – Not protected from H2O
- Charging/Data Port: Micro-USB
- Battery: Lithium Polymer 3.7v
- Music Format: MP3
- Memory Card: 1 Gb Micro SD – FAT
- Operation Environment: 25°F to 110°F
- Operation Time: ~10 hours on full charge
- Weight: Speaker – 1.3 oz
Controller – 2.4 oz
Pad – 0.2 oz
- Shelf Life: 3 years, please inspect yearly.
- Components are made in China, Hong Kong, and USA.
- Assembly and Production is in the USA.
- Warranty – 90 days from date of confirmed purchase from an authorized Wusic[®] retailer. Wusic[®] may repair or replace at its option. Wusic[®] is not responsible for damage due to misuse.

Wow, so you actually read through to the last page?

Congrats and we hope you enjoy using your WombMusic® Belly Speaker by Wusic®. We know the wonderful memories you create with your baby will be incredible and cherished for years to come.

Please don't forget to:
Provide Feedback
Register Your Warranty
Share Your Experience on Social Media

Or share your experience with us on our Social Media and we'll send you a free Personalized Birthday Song for your Child that you can use for years and years to celebrate with.

Go to WombMusic.com and click on the social media icons or go directly to:



Facebook.com/iLoveWusic



Pinterest.com/Wusic



YouTube.com/c/Wusictech



Twitter.com/Wusic1



Plus.Google.com/+Wusictech



Instagram.com/Wusic1