

# Instruction Manual

## ▲ Display Functions

in/mm/F: Switch display between inch, metric and inch fraction

ABS: Press ABS(INC)button to get relative zero; Press ABS button again to disable the function

Hold: Press Hold button to Hold the data; Press Hold button again to disable the function

On/Off: Press On/Off button to turn on or off the display

Zero: Press Zero button to set Zero at any position

Calibrate: If the planer cannot reach Zero, the Digi. Scale need to be calibrated to set Zero.

Place the planer at 1 inch height (by using a vernier scale or 1" gage block), then press ABS button, "INC" will appear on the LCD Display, which it set the display reading to a relative Zero.

.....

## ▲ Specification

Measuring range: 6"

Resolution: 0.001" 0.01mm 1/64"

Accuracy: 0.001" per 6"

Battery: 3V CR2032; Battery life approx 1 year

## ▲ Trouble Shooting Guide

Flash digits or no display: Replace the battery. (Please recycle the old battery)

Frozen display: Remove battery and wait for 1 minute, then re-set the battery.

.....

## Assembly

▲ Digi.Scale easy install on all kind of planer: Dewal, Delta, Sears. . .

