Model: HVDF4/HVDF6/HVDF8



Dual Powered

4/6/8in. High Velocity Fan

- Dual Powered -110V AC (with included Adapter) and USB
- Compatible with Powered USB 1.0 & 2.0 Ports
- Powerful and Quiet
- All Metal Body and Blades
- Adjustable Tilt Angle
- Rocker Style Power Switch
- Low Power Drain
- Long Power Cord

Add a cool breeze to your desk with the USB Powered Desk Fan. Plug this compact fan into any powered USB port, flip the switch and enjoy the pleasant steady breeze.

The USB fan's cradle base makes it easy to position the fan for maximum cooling and the long cord makes it a snap to connect to your computer.

USE INSTRUCTIONS:

Uncoil wire attached to fan and plug it directly to any available powered USB port on your computer. This fan can also be plugged directly into a USB hub attached to a computer.

Fan can be plugged directly into a wall receptacle with the included A.C. Adapter. Simply insert USB plug into A.C. adapter and plug into any 120V A.C. / 60Hz. household receptacle.

Turn fan ON/OFF using rocker switch located on the back of the fan.

LAPTOP COMPUTER USERS NOTE:

When plugged into your laptop USB port, this USB fan gets its power from the computer laptop. To avoid laptop battery drain, plug laptop computer into a receptacle while using this fan.



IMPORTANT INSTRUCTIONS: Save These Instructions

As with all electrical devices, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

Read all the instructions before using this fan.

 Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.

 Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.

• Do not use fan unattended. This appliance is not intended for use by persons (included children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.

• For proper operation, fan should be placed on a smooth, non-combustible surface.

Always unplug fan when not in use.

 Do not operate the fan with blade guards or any safety device removed.

• Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.

 Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard.



Fan's USB Plug connects to included AC Adapter or any Powered USB Port

WARNING: SHOCK HAZARD

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

CARE AND MAINTENANCE:

CLEANING: CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Unscrew and remove front grill only. Clean the grill and fan blade surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Replace front grill before fan use. Allow fan to dry completely before use. Periodic grill cleaning with a vacuum will prevent dust build up. The motor does not require any interior maintenance, cleaning or lubrication.

REPAIR: DO NOT OPERATE THE FAN WITHOUT THE GRILL IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

STORAGE: Keep original package for storage of the fan. Coil and tie the power cord to avoid damage during storage.

LIMITED WARRANTY

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like.

Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products.

You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

To start a warranty claim you must: Contact Ventamatic, Ltd.

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at www.MYMAXXAIR.com to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty. Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.