

Assemble the included motor legs with the motor clips in between the legs. Do not tighten fully.

Slide the motor into the assembled legs and rotate the motor clips up over the lip of the motor. Finish tightening the assembly screws on the motor legs.

