
Craftsman and Mission Door Hardware Installation Instructions

Updated August 2015

Privacy

Fits doors 1-3/8" to 1-3/4" thick

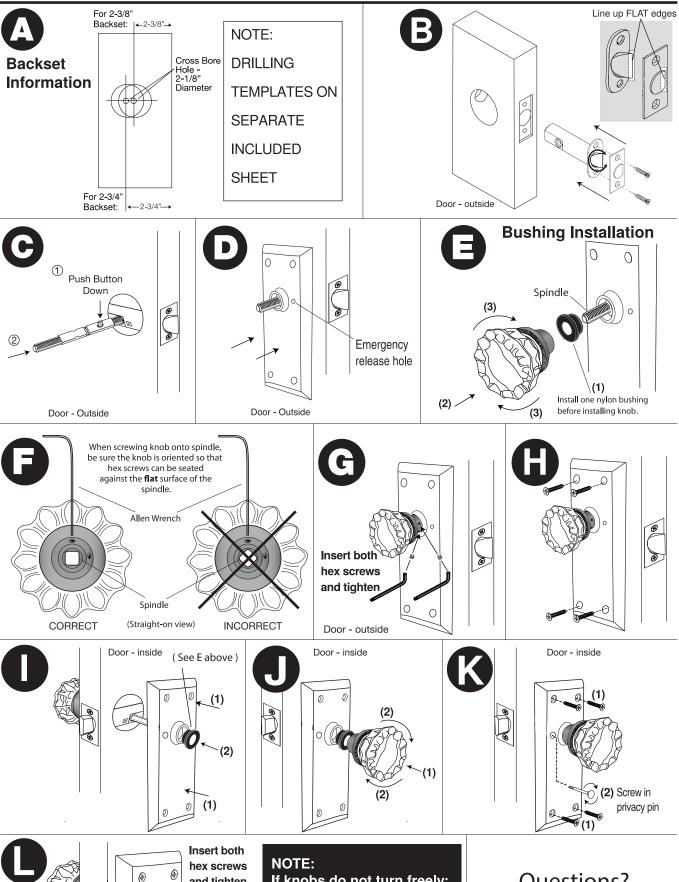

Boor - inside

If knobs do not turn freely; loosen one knob and rotate counter clockwise for 1/4 turn, then retighten the hex screws. Repeat if necessary. Questions? Please call us! 1-800-522-7336