


1. Air filter cleaner cover
2. Air filter element
3. Air filter right Cover

Service Air Filter

Service air filter every 20 hours of use

- 1) Remove cleaner by removing the Phillips head screws
- 2) Clean any excess dirt, oil or dust from the air cleaner box with a mild detergent and water solution
- 3) Thoroughly dry the air box.
- 4) Replace the air cleaner element.
- 5) Carefully align the gasket between the air box halves during re-assembly.

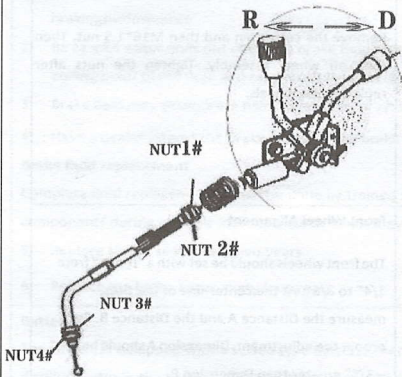

Service Shifter Adjustment

Your unit might require an occasional adjustment in the shifter cables due to physical stretch found during normal operation of the vehicle. To make shift adjustments, follow the below instructions.

- 1) Push the shifter lever to forward or "D" position
- 2) Look for any slack in control cable .
- 3) Loosen adjustment nuts #1 and #2, pulling the housing to draw the cable tight until the cable is properly tensioned.