





PMZ150-22

五代压低祖玛150两轮

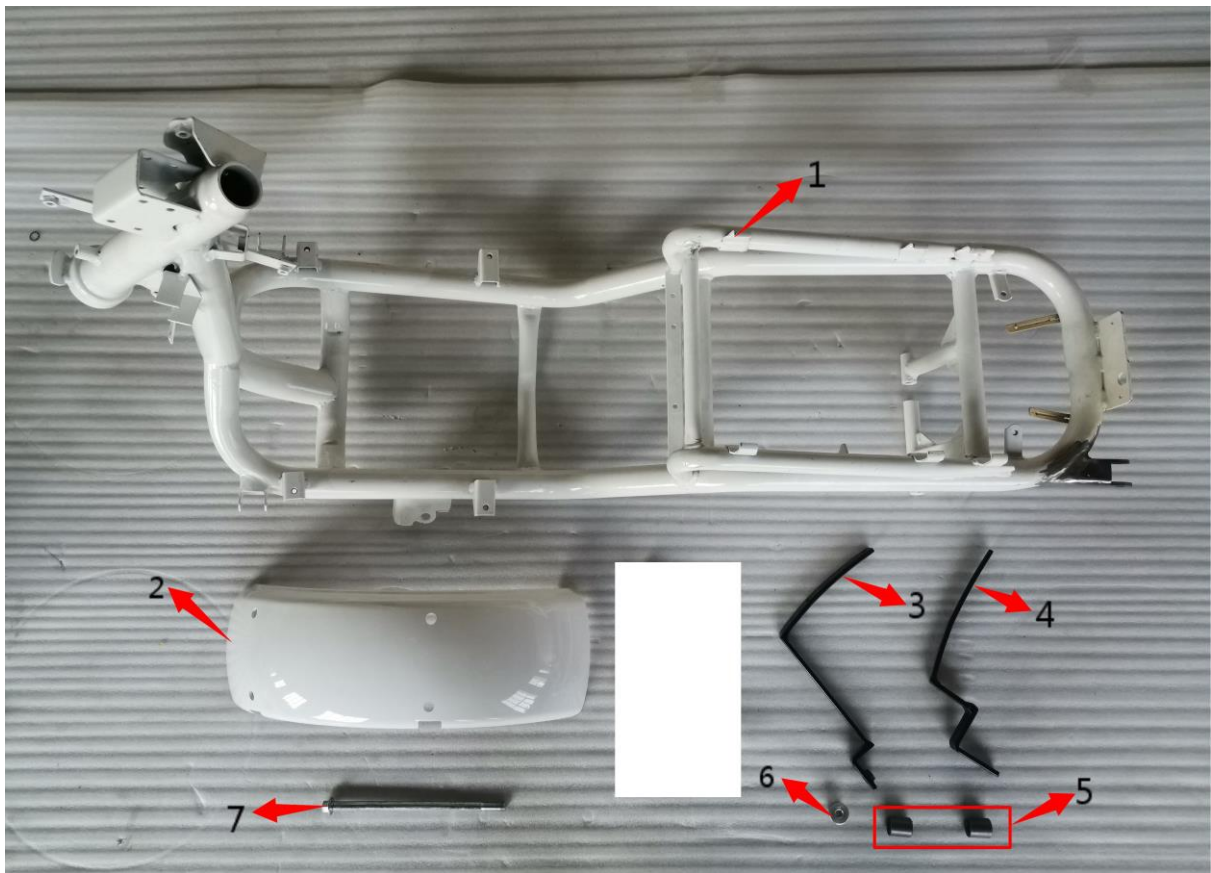

序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-A-1	Frame	车架
2	PMZ150-22-A-2	Rear fender	后挡泥板
3	PMZ150-22-A-3	Rear fender bracket, rear	后泥板支架后
4	PMZ150-22-A-4	Rear fender bracket, front	后泥板支架前

5	PMZ150-22-A-5	Hangger bushing	吊架缓冲衬套
6	PMZ150-22-A-6	Step bushing	台阶衬套
7	PMZ150-22-A-7	10*225 engine axle	10*225发动机轴

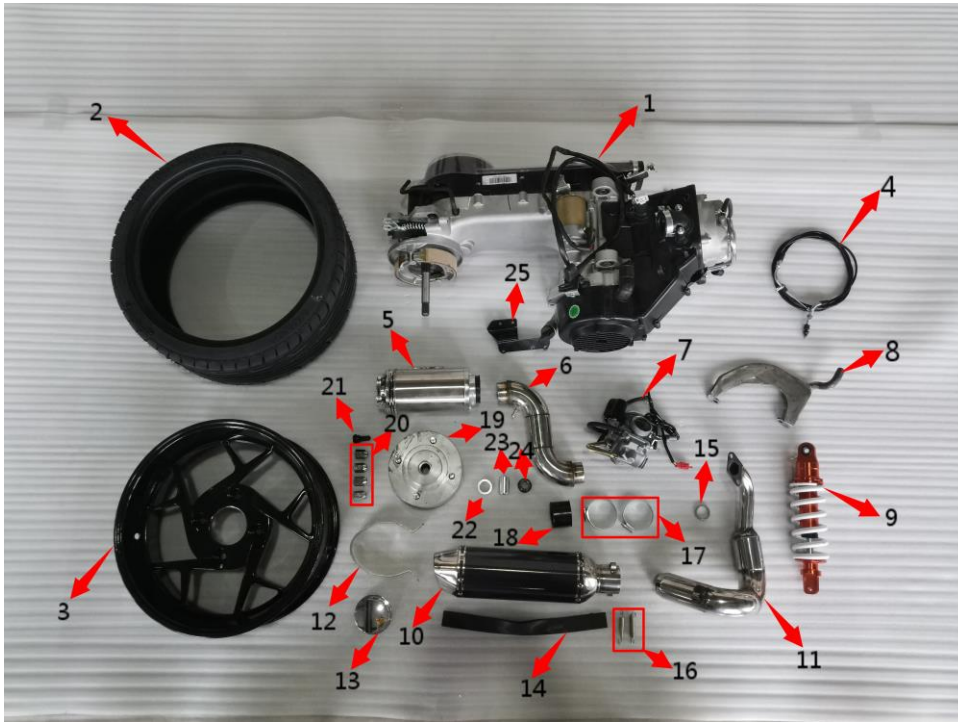


序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-B-1	Engine	发动机
2	PMZ150-22-B-2	Rear tire	后轮胎
3	PMZ150-22-B-3	Rear rim	后轮钢圈
4	PMZ150-22-B-4	Throttle cable	油门线
5	PMZ150-22-B-5	Air filter cartridge	空滤筒子
6	PMZ150-22-B-6	Air filter bend	空滤弯管
7	PMZ150-22-B-7	Carburetor	化油器
9	PMZ150-22-B-9	Rear Shock	后减
10	PMZ150-22-B-10	Muffler	消音器筒子
11	PMZ150-22-B-11	Exhaust	消音器弯管
12	PMZ150-22-B-12	Muffler clip	消音器抱箍
13	PMZ150-22-B-13	Chrome decorative cover	镀铬装饰盖

14	PMZ150-22-B-14	Muffer clamp leather	消音器卡箍皮
15	PMZ150-22-B-15	Muffler washer	消音器垫圈
16	PMZ150-22-B-16	Muffler spring	消音器弹簧
17	PMZ150-22-B-17	Air filter clamp	空滤卡箍
18	PMZ150-22-B-18	Air filter rubber connecting	空滤橡胶接头
19	PMZ150-22-B-19	Rear wheel core	后轮芯
20	PMZ150-22-B-20	Nut	螺母
21	PMZ150-22-B-21	Tubeless valve	气门嘴
22	PMZ150-22-B-22	Rear wheel core bushing 1	后轮芯衬套1
23	PMZ150-22-B-23	Rear wheel core bushing 2	后轮芯衬套2
24	PMZ150-22-B-24	M16 nut	M16螺母
25	PMZ150-22-B-25	Air filter bracket	空滤支架



序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-C-1	Main wire	导线总成
2	PMZ150-22-C-2	Headlight	前大灯
3	PMZ150-22-C-3	Wind leaf decorative cover	风叶装饰罩
4	PMZ150-22-C-4	Front turn signal lamp	前转向灯片

5	PMZ150-22-C-5	Rear light	后尾灯
6	PMZ150-22-C-6	Headlight bracket	大灯支架
7	PMZ150-22-C-7	License plate light	牌照灯
8	PMZ150-22-C-8	License plate bracket	牌照支架
9	PMZ150-22-C-9	Speedometer	仪表
10	PMZ150-22-C-10	Sensor	传感器
11	PMZ150-22-C-11	Ignition coil	高压泵
12	PMZ150-22-C-12	Starter relay	启动继电器
13	PMZ150-22-C-13	Relay assy, tunsignal	闪光器
14	PMZ150-22-C-14	Horn	喇叭
15	PMZ150-22-C-15	Regulator	稳压器
16	PMZ150-22-C-16	CDI	点火器
17	PMZ150-22-C-17	Turning light cover	转向灯罩
18	PMZ150-22-C-18	Sensor bracket	传感器支架
19	PMZ150-22-C-19	Speedometer bracket	仪表支架
20	PMZ150-22-C-20	Special license plate bracket	狂野的牌照支架
21	PMZ150-22-C-21	Ornamental buckle	装饰扣

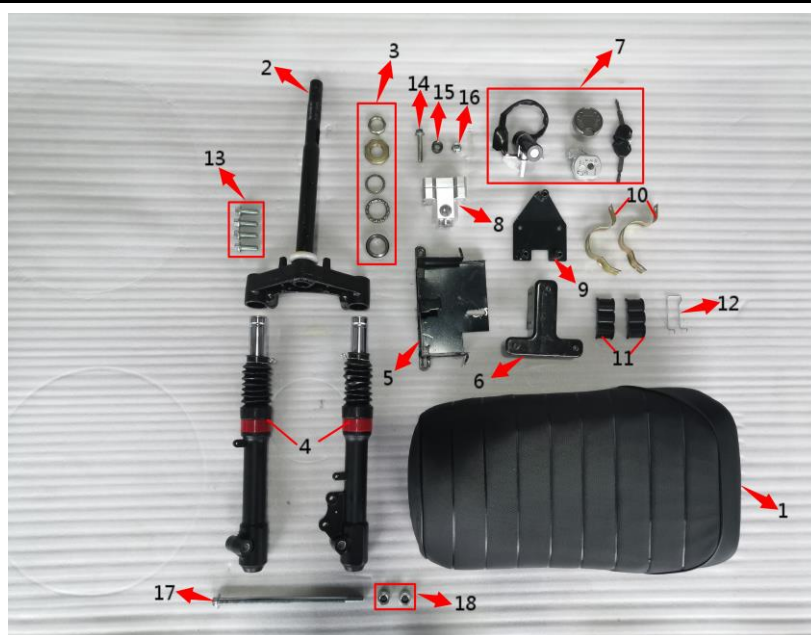

序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-D-1	Seat	坐垫
2	PMZ150-22-D-2	Steering stem	下联板
3	PMZ150-22-D-3	Steel bowl	钢碗
4	PMZ150-22-D-4	Front shock	前减
5	PMZ150-22-D-5	Holder, battery	电瓶盒
6	PMZ150-22-D-6	Front shield install frame	面板支架
7	PMZ150-22-D-7	Key set	套锁
8	PMZ150-22-D-8	Handle guide	把手座
9	PMZ150-22-D-9	Front fender bracket	前泥板支架
10	PMZ150-22-D-10	Seat attachment 1	坐垫附件1
11	PMZ150-22-D-11	Seat attachment 2	坐垫附件2
12	PMZ150-22-D-12	Seat attachment 3	坐垫附件3
13	PMZ150-22-D-13	10*30 screw bolt	10*30螺栓
14	PMZ150-22-D-14	10*55 screw bolt	10*55螺栓
15	PMZ150-22-D-15	Waist type bushing	腰型衬套
16	PMZ150-22-D-16	M10 nut	M10螺母
17	PMZ150-22-D-17	Front axle	前轮轴
18	PMZ150-22-D-18	front axle bushing	前轮衬套




序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-E-1	Latter guard shield	前罩
2	PMZ150-22-E-2	Rear shield	后罩
3	PMZ150-22-E-3	Front fender	前泥板
4	PMZ150-22-E-4	Frame mud guard	车架挡泥板

5	PMZ150-22-E-5	Cover under seat	座垫下护板
6	PMZ150-22-E-6	Fuel tank cover	油箱盖板



序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
1	PMZ150-22-F-1	Fuel tank	油箱
2	PMZ150-22-F-2	Rear mirror LH	左后视镜
3	PMZ150-22-F-3	Rear mirror RH	右后视镜
4	PMZ150-22-F-4	Lfet hand grip	左胶套
5	PMZ150-22-F-5	Throttle grip	油门胶套
6	PMZ150-22-F-6	Left control panel	左开关
7	PMZ150-22-F-7	Right control panel	右开关
8	PMZ150-22-F-8	Handlebar	方向把
9	PMZ150-22-F-9	Rear brake cable	后刹线

10	PMZ150-22-F-10	Front footpeg	前脚蹬
11	PMZ150-22-F-11	Front footpeg spring	前脚蹬弹簧
12	PMZ150-22-F-12	Front footpeg pin	前脚蹬销子
13	PMZ150-22-F-13	Kick stand	单撑
14	PMZ150-22-F-14	Kick stand bolt	单撑螺栓
15	PMZ150-22-F-15	Kick stand spring	单撑弹簧
16	PMZ150-22-F-16	Gas sensor	油位传感器
17	PMZ150-22-F-17	Oil pump	油泵
18	PMZ150-22-F-18	Balance bar bracket	平衡杆支架
19	PMZ150-22-F-19	Fixed ring	固定圈
20	PMZ150-22-F-20	Oil seal	油封
21	PMZ150-22-F-21	Oil tubing	油管

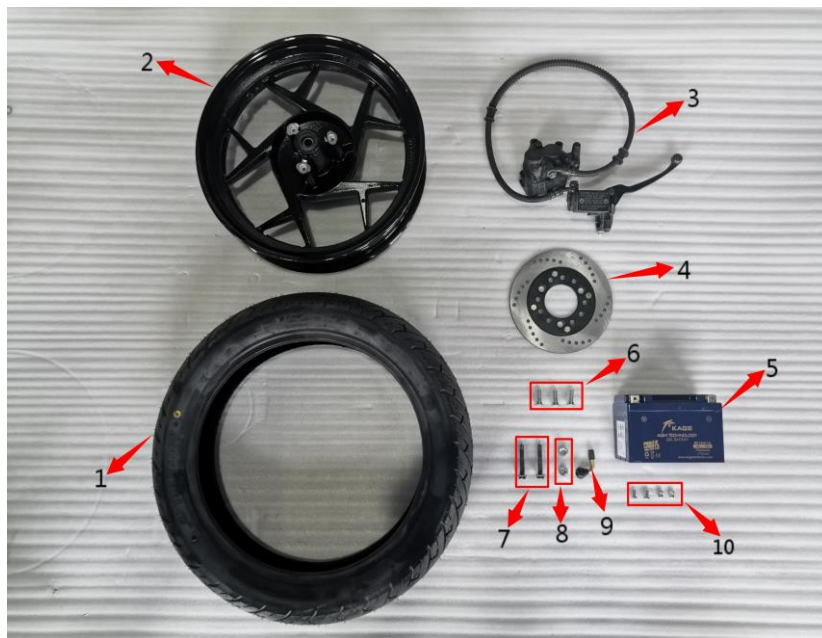

序号 SR NO.	件号 PART NO.	名称 Description	名称 Description
--------------	----------------	-------------------	-------------------

1	PMZ150-22-G-1	Front tire	前轮胎
2	PMZ150-22-G-2	Front rim	前轮钢圈
3	PMZ150-22-G-3	Front brake	前碟刹
4	PMZ150-22-G-4	Front brake disc	前碟刹盘
5	PMZ150-22-G-5	Battery	蓄电池
6	PMZ150-22-G-6	Front brake disc screw bolt	碟刹盘螺栓
7	PMZ150-22-G-7	8*45 screw bolt	8*45螺栓
8	PMZ150-22-G-8	16*12*8.5 bushing	16*12*8.5衬套
9	PMZ150-22-G-9	Tubeless valve	气门嘴
10	PMZ150-22-G-10	Battery attachment	电瓶安装附件