

Step 1: locate the wheel cylinder.



The wheel cylinder is on the left side of the scooter. Find it.

Step 2: vent the air in hydraulic brake system out.



There is a vent valve with the wheel cylinder. Loosen it.
Squeeze the brake lever several times until you can see some oil bleeding.
That means you have air-outed.
Once you can't "squeeze" out brake oil, it means there should be some problem with cylinders.
If that happened, just let us know and we will send you a new set for replacement.

Step 3: normal maintain



Take off the cover and add brake oil once the fluid level is too low.