



NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-A-001	ENGINE	发动机	1
2	PMZ50-19-A-002	connecting plate	三角连接板	1
3	PMZ50-19-A-003	rear rub	后轮鼓芯	1
4	PMZ50-19-A-004	bushing	衬套	1
5	PMZ50-19-A-005	bushing	缓冲衬套	1
6	PMZ50-19-A-006	washer	挡圈	2
7	PMZ50-19-A-007	oil seal	油封	2
8	PMZ50-19-A-008	bearing	轴承	2



NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-B-001	air filter bend	空滤弯管	1
2	PMZ50-19-B-002	air filter	空滤器	1
3	PMZ50-19-B-003	clamp	卡箍	2
4	PMZ50-19-B-004	airfilter bracket	空滤固定支架1	1
5	PMZ50-19-B-005	airfilter bracket	空滤固定支架2	1
6	PMZ50-19-B-006	rubber connecting	空滤橡胶接头	1

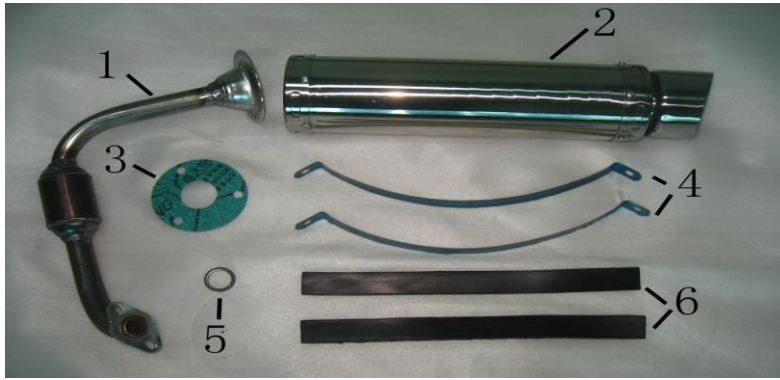

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-C-001	ELBOW PIECE	消音器弯管	1
2	PMZ50-19-C-002	MUFFLER	消音器筒子	1
3	PMZ50-19-C-003	paper pad	消音器纸垫	1
4	PMZ50-19-C-004	clamp	卡箍	2
5	PMZ50-19-C-005	wood pad	胶木垫	1
6	PMZ50-19-C-006	rubber pad	橡胶垫	2

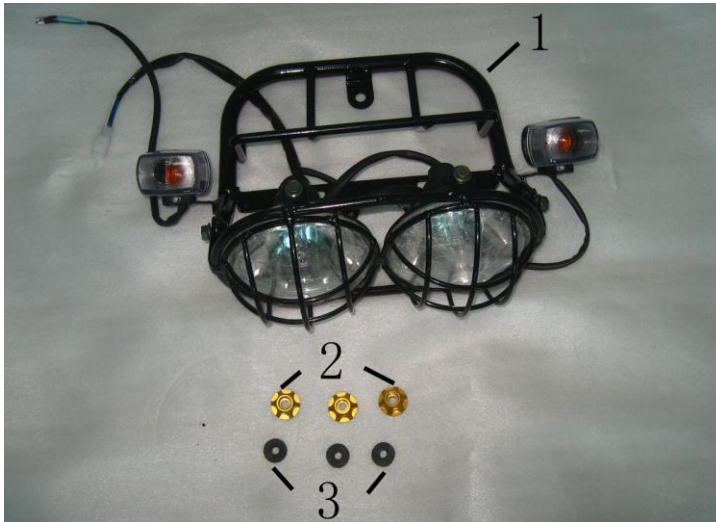

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-D-001	tail light	大灯组件	1
2	PMZ50-19-D-002	ornamental buckle	装饰扣	3
3	PMZ50-19-D-003	rubber pad	橡胶垫圈	3




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-E-001	rear tire	后轮胎	1
2	PMZ50-19-E-002	rear rim	后轮钢圈	1
3	PMZ50-19-E-003	valve	气门嘴	1




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-F-001	front tire	前轮胎	1
2	PMZ50-19-F-002	front rim	前轮钢圈	1
3	PMZ50-19-F-003	front brake disc	前刹车盘	1
4	PMZ50-19-F-004	valve	气门嘴	1




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-G-001	rear shield	后罩	1
2	PMZ50-19-G-002	LATTER GUARD SHIELD	前罩	1

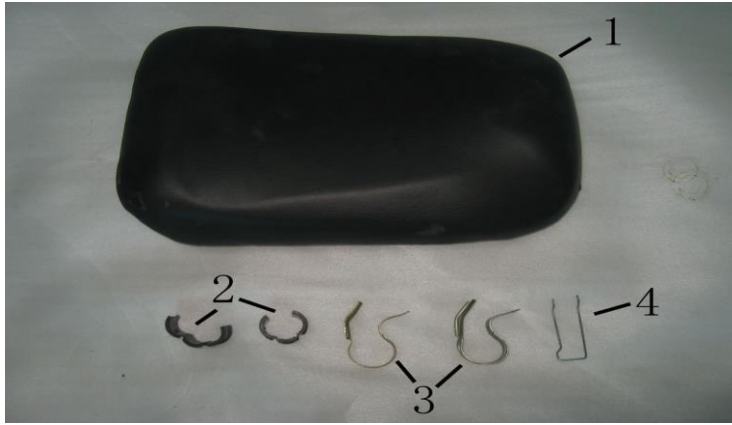


NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-H-001	seat	坐垫	1
2	PMZ50-19-H-002	rubber	橡胶块	2
3	PMZ50-19-H-003	FIXED BUCKLE	固定扣	2
4	PMZ50-19-H-004	fixed frame	固定支架	1

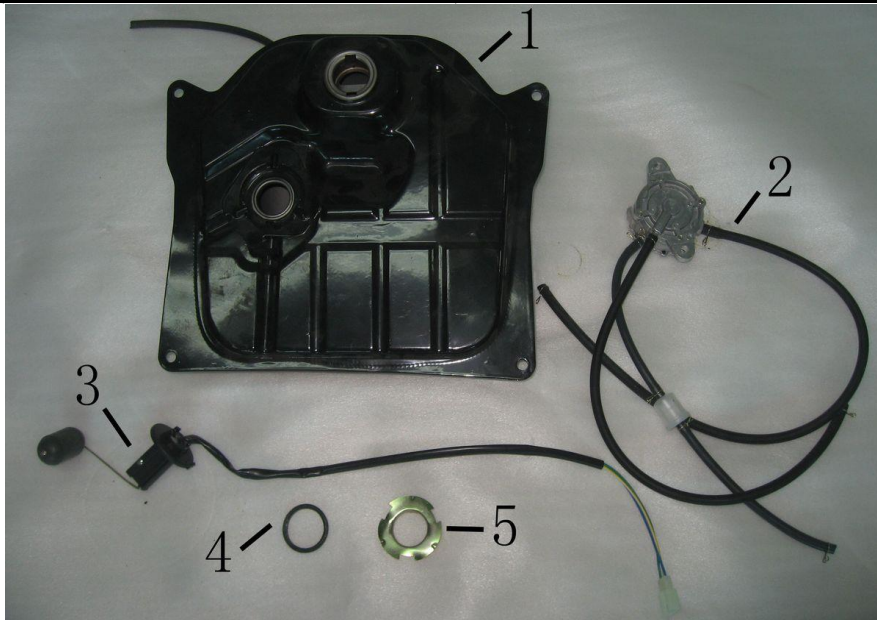

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-I-001	fuel tank	油箱	1
2	PMZ50-19-I-002	oil pump	油泵	1
3	PMZ50-19-I-003	GAS SENSOR	油位传感器	1
4	PMZ50-19-I-004	oil seal	油封	1
5	PMZ50-19-I-005	fixed ring	固定圈	1

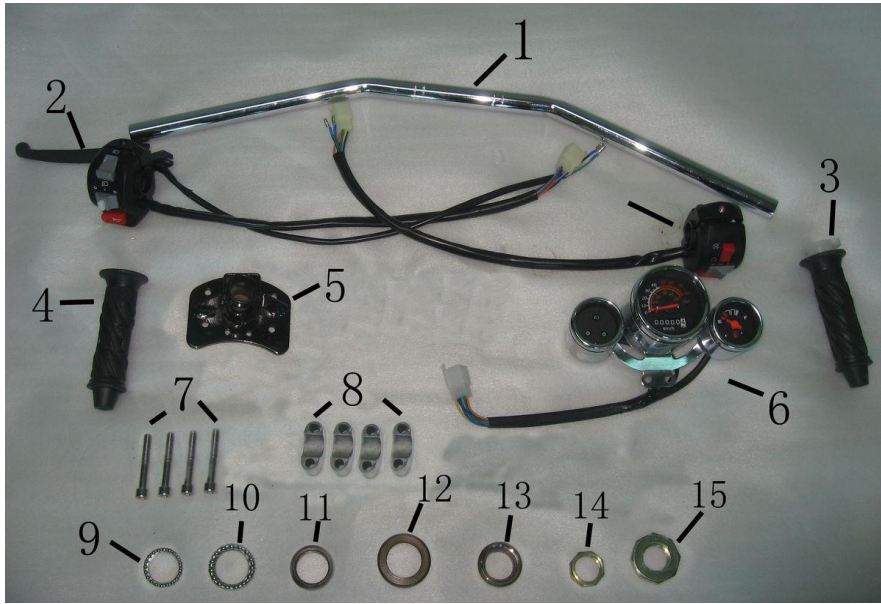

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-J-001	handlebar	把手	1
2	PMZ50-19-J-002	left and right CONTROL PANEL	左右开关	1
3	PMZ50-19-J-003	THROTTLE GRIP	油门胶套	1
4	PMZ50-19-J-004	lfet hand grip	左胶套	1
5	PMZ50-19-J-005	handle guide	把手座	1
6	PMZ50-19-J-006	speedometer	仪表	1
7	PMZ50-19-J-007	bolt	压块螺栓	4
8	PMZ50-19-J-008	handlebar lock	把手压块	4
9	PMZ50-19-J-009	STEEL BALL	上钢珠	1
10	PMZ50-19-J-010	STEEL BALL	下钢珠	1
11	PMZ50-19-J-011	washer	垫圈	1
12	PMZ50-19-J-012	RACE, INNER	下钢碗	1
13	PMZ50-19-J-013	RACE, INNER	上钢碗	1
14	PMZ50-19-J-014	nut	螺母1	1
15	PMZ50-19-J-015	nut	螺母2	1

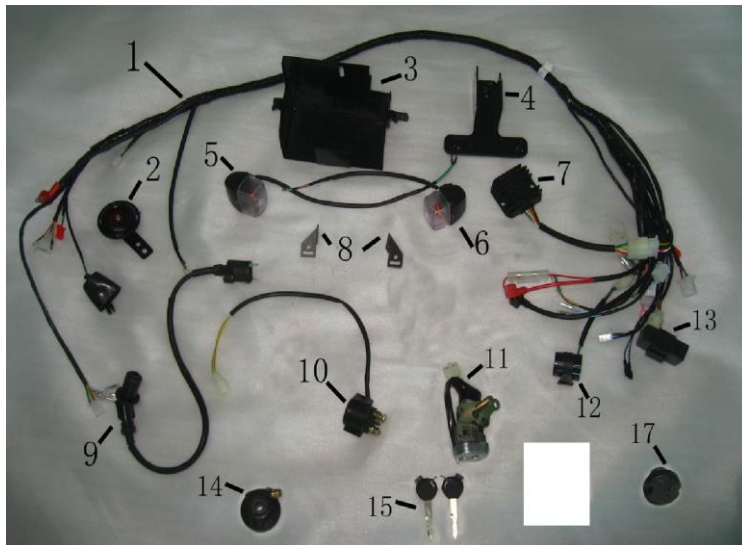

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-K-001	MAIN WIRE	导线总成	1
2	PMZ50-19-K-002	HORN	喇叭	1
3	PMZ50-19-K-003	HOLDER, BATTERY	电池盒	1
4	PMZ50-19-K-004	front shield install frame	前罩安装支架	1
5	PMZ50-19-K-005	front turning lh	前左转向灯	1
6	PMZ50-19-K-006	front turning rh	前右转向灯	1
7	PMZ50-19-K-007	REGULATOR	稳压器	1
9	PMZ50-19-K-008	IGNITION COIL	高压泵	1
10	PMZ50-19-K-009	STARTER RELAY	启动继电器	1
11	PMZ50-19-K-010	SWITCH ASSY, IGNITION	电锁	1
12	PMZ50-19-K-011	RELAY ASSY, TUN SIGNAL	闪光器	1
13	PMZ50-19-K-012	CDI	点火器	1
14	PMZ50-19-K-013	speed senser	速度计齿轮箱	1
15	PMZ50-19-K-014	key	钥匙	1
17	PMZ50-19-K-015	fuel tank cover	油箱盖	1




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-L-001	rear light	尾灯	1
2	PMZ50-19-L-002	rear turning light lh	后左转向灯	1
3	PMZ50-19-L-003	rear turning light rh	后右转向灯	1




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-M-001	front brake	前刹	1
1-1	PMZ50-19-M-002	Master cylinder	碟刹上泵	1
1-2	PMZ50-19-M-003	brake lever	碟刹手柄	1
1-3	PMZ50-19-M-004	Brake Line	碟刹油管	1
1-4	PMZ50-19-M-005	Brake Caliper	碟刹下泵	1
1-5	PMZ50-19-M-006	Brake Pad	摩擦片	2




NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-N-001	CARBURETOR	化油器	1
2	PMZ50-19-N-002	THROTTLE CABLE	油门线	1

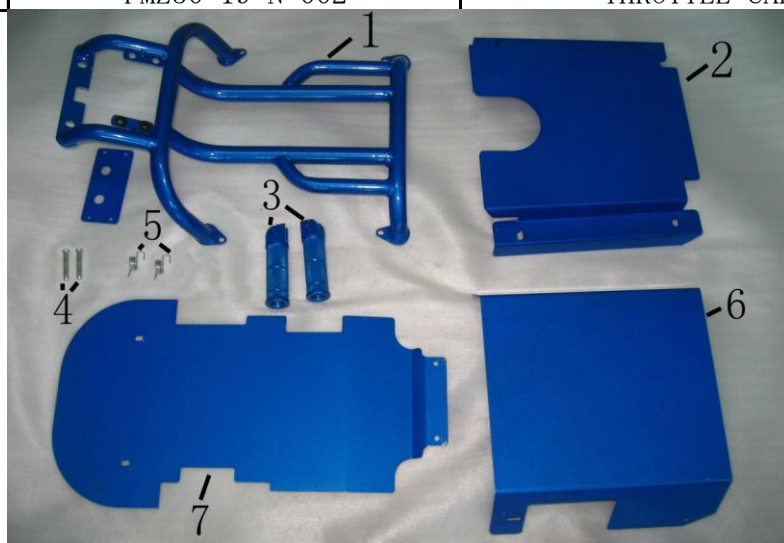

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-0-001	FUEL TANK BRACKET	脚踏支架	1
2	PMZ50-19-0-002	FUEL TANK COVER	油箱上护板	1
3	PMZ50-19-0-003	front footpeg	前脚蹬	2
4	PMZ50-19-0-004	front footpeg pin	前脚蹬销子	1
5	PMZ50-19-0-005	SPRING	弹簧	1
6	PMZ50-19-0-006	COVER UNDER FUEL TANK	油箱下护板	1
7	PMZ50-19-0-007	cover under seat	坐垫下护板	1

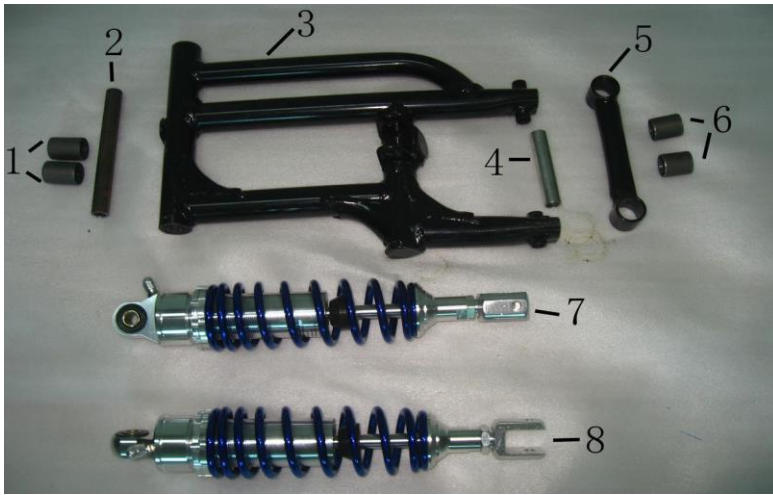


NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-P-001	rear bushing	后平叉衬套	2
2	PMZ50-19-P-002	rear bushing inner	后平叉内衬管	1
3	PMZ50-19-P-003	swing arm	后平叉	1
4	PMZ50-19-P-004	engine bushing	发动机安装衬管	2
5	PMZ50-19-P-005	support pipe	支撑管	1
6	PMZ50-19-P-006	support pipe bushing	支撑管衬套	2
7	PMZ50-19-P-007	rear shock	后减	1
8	PMZ50-19-P-008	rear shock	后减	1

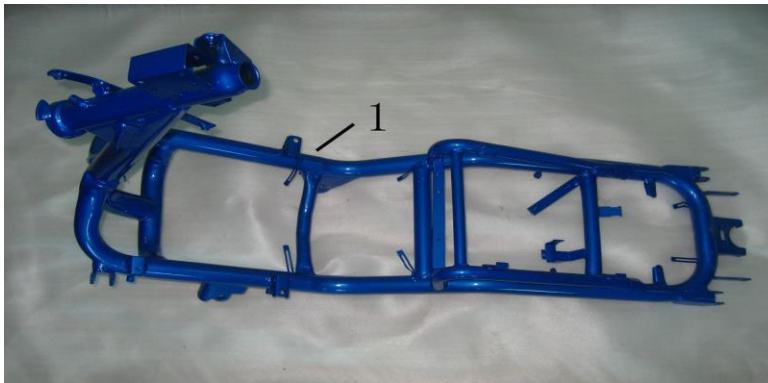


NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-Q-001	frame	车架	1



NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-R-001	buttery	蓄电池	1
2	PMZ50-19-R-002	rear mirror LH	后视镜左	1
3	PMZ50-19-R-003	rear mirror RH	后视镜右	1
4	PMZ50-19-R-004	electrolyte	电解液	1
5	PMZ50-19-R-005	climbing belt	攀带	1
6	PMZ50-19-R-006	tool	工具1	1
7	PMZ50-19-R-007	tool	工具2	1
8	PMZ50-19-R-008	tool	工具3	1
9	PMZ50-19-R-009	tool	工具4	1
10	PMZ50-19-R-010	steering stem cover	下联板罩	1

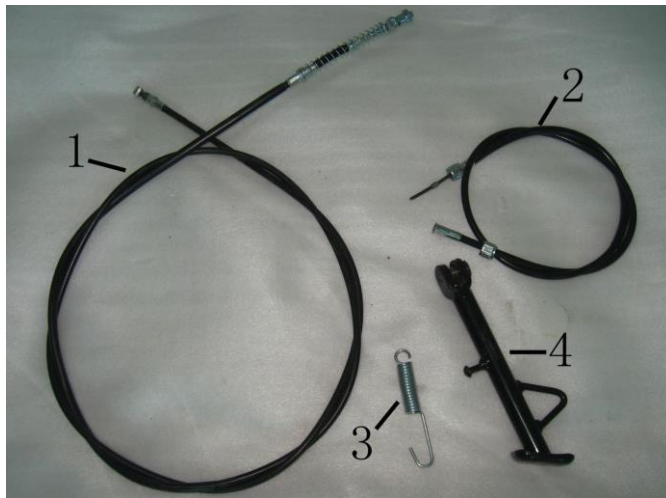

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-S-001	rear brake cable	后刹线	1
2	PMZ50-19-S-002	speedo cable	里程线	1
3	PMZ50-19-S-003	kick stand spring	单撑弹簧	1
4	PMZ50-19-S-004	kick stand	单撑	1

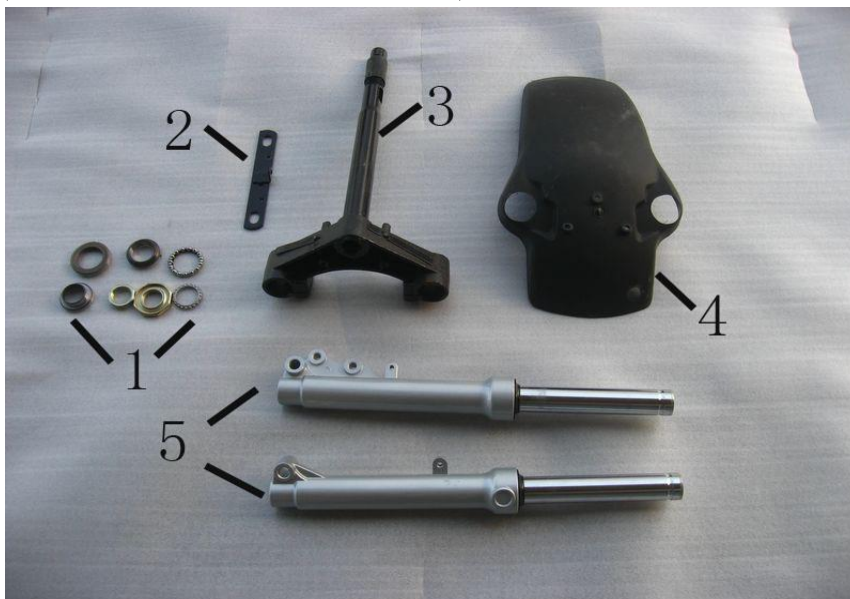

NO.	ICEBEAR PARTS NO.	Description	Chinese name	QTY
1	PMZ50-19-T-001	steel bowel	钢碗	1
2	PMZ50-19-T-002	BRACKET	支架	1
3	PMZ50-19-T-003	steering stem	下联板	1
4	PMZ50-19-T-004	front fender	前泥板	1
5	PMZ50-19-T-005	front shock	减震	2