



# LDSBus CO2 Sensor Datasheet

## **1** Introduction

LDSBus CO2 Sensor is a true CO2 sensor that features four sensors in a compact, low-profile design. It includes sensors to measure CO2, temperature, humidity and ambient light. The device can be flush mounted on the ceiling or swivel mounted on the wall. LDSBus CO2 Sensors are compatible with the BRTSys's IoTPortal, PanL Smart Living and LDSBus Python SDKs. The sensor is available in 2 versions, namely Basic and Pro.



## 1.1 Features

- Temperature, humidity and ambient light sensors are integrated in the CO2 Sensor
- Measures CO2 up to 40000ppm
- CO2 measurement accuracy:
  - Basic version: +/-50ppm (400-2000ppm) and
  - Pro version: +/-40ppm (400-5000ppm)
- Measures temperature up to 60°C with an accuracy of ±1.5°C
- Measures humidity from 0 to 100% with an accuracy of ±9%RH
- Measures ambient light up to 100K Lux with an accuracy of ±15% Lux
- BRTSys's LDSBus protocol. Wired data/power transmission through LDSBus HVT-Junction
- Low power consumption 300mW
- Operating temperature range: 0°C to +60°C
- Swivel mount and Flush mount options
- Supported platform application: BRTSys's PanL Smart Living, IoTPortal and LDSBus Python SDK (Visit https://brtsys.com/resources)



Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or Reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. BRT Systems Pte Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device, or System in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. BRT Systems Pte Ltd, 178 Paya Lebar Road, #07-03, Singapore 409030. Singapore Registered Company Number: 202220043R.



## 2 Part Numbers

Part#	Naming
LS110101A	LDSBus CO2 Sensor, Temperature & Humidity Sensor & ALS Sensor - Flush
LS111101A	LDSBus CO2 Sensor, Temperature & Humidity Sensor & ALS Sensor - Swivel
LS110201A	LDSBus CO2 Sensor Pro, Temperature & Humidity & ALS Sensor - Flush
LS111201A	LDSBus CO2 Sensor Pro, Temperature & Humidity & ALS Sensor - Swivel



# **Table of Contents**

1	Introduction	1
2	Part Numbers	2
3	Product Specifications	4
4	Hardware Features	5
5	Configuration, Installation & Application	6
5	5.1 Connection Diagram	6
6	Mounting Instructions	7
6	5.1 Flush Mount	7
6	5.2 Swivel Mount	9
7	System Status LED Indicators	11
8	Mechanical Dimension	12
9	Contact Information	15
Ap	opendix A - References	16
C	Document References	16
A	Acronyms and Abbreviations	16
Ap	pendix B - List of Figures and Tables	17
L	ist of Figures	17
L	ist of Tables	17
Ар	pendix C – Revision History	18




# **3 Product Specifications**

		CO2 Sensor/ CO2 Sensor Pro		
		Ambient Light Sensor		
	Sensors	Temperature Sensor		
		Humidity Sensor		
Features	Interface	RS485		
		System Status Indicator (Please refer to LED		
	LED Indicator (RGB)	section)		
		Flush Mount - Fixed Angle Installation		
	Mounting	Swivel Mount – Adjustable Angle Installation		
	Input Voltage	5V DC Bus Power		
Power	Typical Power	112mW		
	Max. Power	295mW		
	CO2 Output Range	0-40000 ppm		
		400-2000 ppm		
<b>602 Company</b>	Specified Range	400-5000 ppm (Pro)		
CO2 Sensor	A	± (50ppm+5% of Reading)		
	Accuracy	$\pm$ (40ppm+5% of Reading) (Pro)		
	Response Time	60 s		
Ambient Light	Range	0.001 to 100K Lux		
Sensor	Accuracy	±15%		
Tomporatura	Range	-10°C to 60°C		
Temperature Sensor	Accuracy	±1.5°C		
561501	Resolution	0.1°C		
Humidity Sensor	Range	0 to 100% RH		
numuity Sensor	Accuracy	±9% RH		
	Color	White		
Physical	Housing	Polycarbonate		
Characteristics	Dimensions	62mm x H25mm (Flush)		
		62mm x H60mm (Swivel)		
	Operating Temperature	0 to 60°C		
Environmental	Storage Temperature	-20 to 85°C		
Limits	Ambient Relative Humidity	5 to 95% (non-condensing)		
Package Contents	Device	1X LDSBus CO2 Sensor with Flush Mount (or) 1X LDSBus CO2 Sensor with Swivel Mount		
Fackage contents	Wire Assembly	1X 5m RJ11-JST Cable		
	Self-Tapping Screws	2X M3*16mm (Thread)		

Table 1 - LDSBus CO2 Sensor Specifications	Table	1 -	LDSBus	CO2	Sensor	Specifications
--	-------	-----	--------	-----	--------	----------------



## **4 Hardware Features**

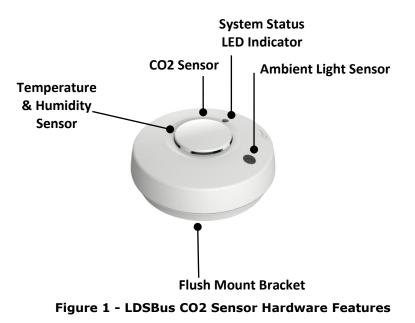

# **5** Configuration, Installation & Application

Please visit <u>https://brtsys.com/resources</u> to access the LDSBus Configuration Utility Guide on how to configure the device name, address, and termination settings before using it for your application.

## 5.1 Connection Diagram

Figure 2 illustrates the connection of the LDSBus CO2 Sensor (LDSBus Device) to the LDSBus. Please visit <u>https://brtsys.com/resources</u> to view the full device application, setup, and installation guides.

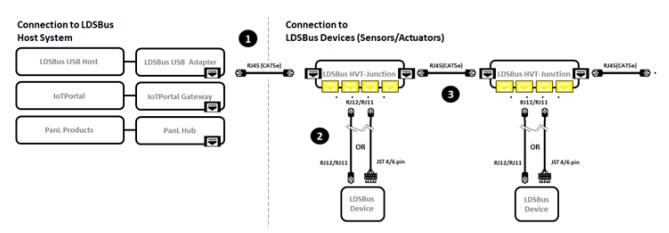


Figure 2 - LDSBus CO2 Sensor to LDSBus – Connection Diagram

### Setup Instructions:

- 1. Connect the first LDSBus HVT-Junction to any of the LDSBus Host Systems using an RJ45 (CAT5e) cable.
- 2. Connect the configured LDSBus CO2 Sensor to the LDSBus HVT-Junction as shown in Figure 2.
- 3. If there is more than one LDSBus HVT-Junction, chain them together as shown in Figure 2.



## **6** Mounting Instructions

Make sure the device has been configured using the LDSBus Configuration Utility before mounting.

## 6.1 Flush Mount

The flush mounting procedure assumes a flat hollow surface behind which the LDSBus RJ11-JST cable is concealed and made accessible through an opening. Figure 3 shows the front face of the LDSBus CO2 Sensor device. Note the lock/unlock direction in the cover.




Figure 3 - LDSBus CO2 Sensor

Follow these steps to fix the flush mount –

1. Unlock the back cover. Twist the top cover in the anti-clockwise direction to unlock.




2. Make two holes in the back cover using the indentations as guides.

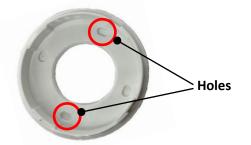


3. Prepare the ceiling and route the RJ11-JST cable through the ceiling opening. Run the LDSBus RJ11-JST cable through the centre (hole) of the back cover and fasten the back cover to the ceiling with self-tapping screws as shown in the picture below -



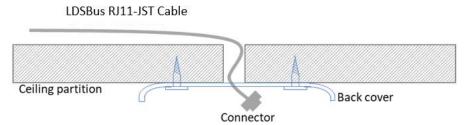

- 4. Attach the cable to the JST connector of the sensor.
- 5. Twist the front face in a clockwise direction to attach it to the back cover and lock it.

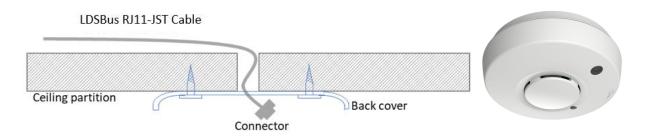

## 6.2 Swivel Mount


The swivel mount is shown in Figure 4.



Figure 4 - LDSBus CO2 Sensor – Swivel Mount – Top & Bottom View

Follow these steps to fix the swivel mount -

- 1. Choose the position for the wall mount and drill holes for mounting the swivel mount on the wall.
- 2. Route and affix the LDSBus RJ11-JST cable on the wall through a buried or wall mounted conduit to butt against the base of the swivel mount.
- 3. Break off one of the three cable entry locations on the base plate for cable routing.

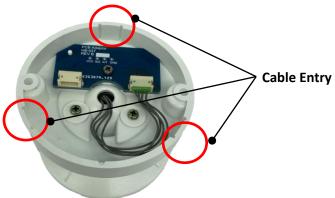

4. Connect the LDSBus RJ11-JST cable to the JST connector (Swivel Mount bottom section) as shown in the Figure.



- 5. Fasten the swivel mount to the wall using the mounting screws. Ensure that the cable is sitting in the cable entry slot.
- 6. Remove the sensor from the flush mount back cover by turning it in an anti-clockwise direction.



7. Connect the JST cable from the top section of the swivel mount to the JST connector located on the back of the device.



8. Attach the device to the top section of the swivel mount.



9. Turn the device clockwise to secure it to the swivel mount.



# **7** System Status LED Indicators

LDSU devices come with a tri-color LED. The LED status colors are described in the table below.

Status display colors

- 1. RED-Device in error condition2. YELLOW-Un-configured device
- 3. GREEN Device in normal state (Device termination is OFF)
- 4. BLUE Device in normal state (Device termination is ON)

Device Status	LED Co	lor	Flashing Frequency	Description	
Un-configured device	YELLOW		LED flashing @1Hz	Un-configured device with factory default address (126)	
Configured	GREEN		Steady – Non-	Configured device (Device ID 1-125) and	
device	BLUE		flashing	device is idle.	
Addressed	GREEN	-	LED flashing	Device is busy communicating.	
device	BLUE	-	@5Hz		
Identified	GREEN		LED flashing	Device in identify state.	
device BLUE			@1Hz	Device in identity state.	
Device error	RED	-	Steady – Non- flashing	Device error has occurred.	
Firmware update	YELLOW	<b></b>	Steady – Non- flashing	Device firmware update.	

Table 2 – LDSBus CO2 Sensor – System Status LED Indicator



## **8** Mechanical Dimension

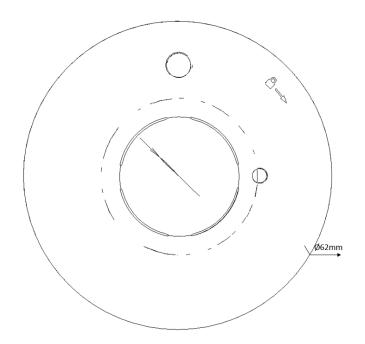


Figure 5 - LDSBus CO2 Sensor Dimension – Top View

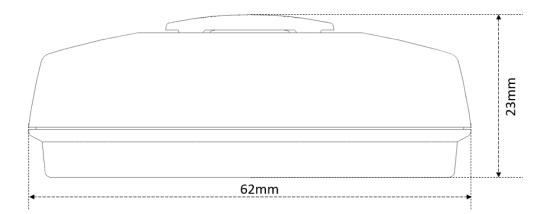


Figure 6 - LDSBus CO2 Sensor Dimension – Side View Flush Mount

# BRTSys

### LDSBus CO2 Sensor Datasheet Version 1.1

Document Reference No.: BRTSYS\_000030 Clearance No.: BRTSYS#033

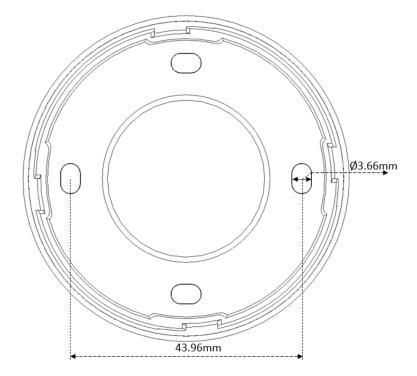


Figure 7 - LDSBus CO2 Sensor Mounting Holes – Flush Mount

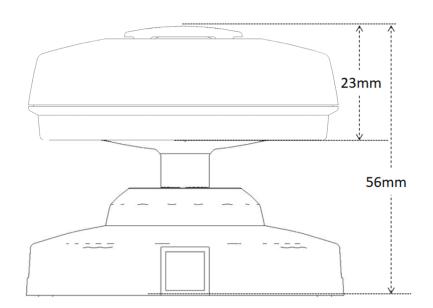


Figure 8 - LDSBus CO2 Sensor Dimension – Side View- Swivel Mount

### LDSBus CO2 Sensor Datasheet Version 1.1

BRTSys

Document Reference No.: BRTSYS\_000030 Clearance No.: BRTSYS#033

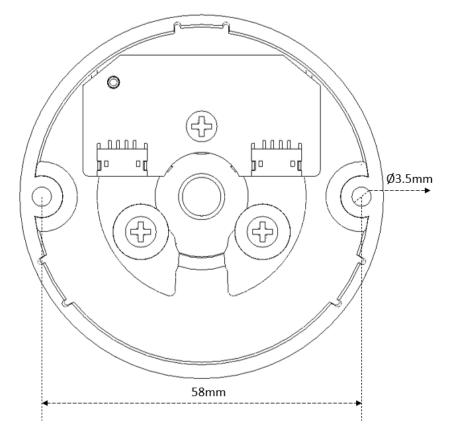


Figure 9 - LDSBus CO2 Sensor Mounting Holes - Swivel Mount

**Note:** All dimensions are in millimetres.



## 9 Contact Information

### Head Quarters – Singapore

BRT Systems Pte Ltd 178 Paya Lebar Road, #07-03 Singapore 409030 Tel: +65 6547 4827 Fax: +65 6841 6071

E-mail (Sales) E-mail (Support) <u>sales@brtsys.com</u> <u>support@brtsys.com</u>

### Web Site

http://brtsys.com/

### **Distributor and Sales Representatives**

Please visit the Sales Network page of the <u>BRT Systems Web Site</u> for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any BRT Systems Pte Ltd (BRTSys) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested BRTSys devices and other materials) is provided for reference only. While BRTSys has taken care to assure it is accurate, this information is subject to customer confirmation, and BRTSys disclaims all liability for system designs and for any applications assistance provided by BRTSys. Use of BRTSys devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify, and hold harmless BRTSys from any and all damages, claims, suits, or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. BRT Systems Pte Ltd, 178 Paya Lebar Road, #07-03, Singapore 409030. Singapore Registered Company Number: 202220043R.

Copyright © BRT Systems Pte Ltd

# **Appendix A - References**

## **Document References**

BRTSYS AN 001 LDSBus Configuration Utility Guide

BRTSYS API 001 LDSBus Python SDK Guide

## **Acronyms and Abbreviations**

Terms	Description
DC	Direct Current
LDSBus	Long Distance Sensor Bus
LED	Light Emitting Diode
PIR	Passive infrared sensor



## **Appendix B - List of Figures and Tables**

## **List of Figures**

Figure 1 - LDSBus CO2 Sensor Hardware Features	5
Figure 2 - LDSBus CO2 Sensor to LDSBus – Connection Diagram	6
Figure 3 - LDSBus CO2 Sensor	7
Figure 4 - LDSBus CO2 Sensor – Swivel Mount – Top & Bottom View	9
Figure 5 - LDSBus CO2 Sensor Dimension – Top View	. 12
Figure 6 - LDSBus CO2 Sensor Dimension – Side View Flush Mount	. 12
Figure 7 - LDSBus CO2 Sensor Mounting Holes – Flush Mount	. 13
Figure 8 - LDSBus CO2 Sensor Dimension – Side View- Swivel Mount	. 13
Figure 9 - LDSBus CO2 Sensor Mounting Holes – Swivel Mount	. 14

## **List of Tables**

Table 1 -	LDSBus CO2 Sensor S	Specifications		 	4
Table 2 -	- LDSBus CO2 Sensor	- System Status LED	Indicator	 	11



# **Appendix C – Revision History**

Document Title:	LDSBus CO2 Sensor Datasheet
Document Reference No.:	BRTSYS_000030
Clearance No.:	BRTSYS#033
Product Page:	https://brtsys.com/ldsbus/
Document Feedback:	Send Feedback

Revision	Changes	Date
Version 1.0	Initial Release	13-02-2023
Version 1.1	Updated mounting instructions pictures	24-03-2023