
ELITE 2500 / 1500 SERIES DBW WIRING DIAGRAM

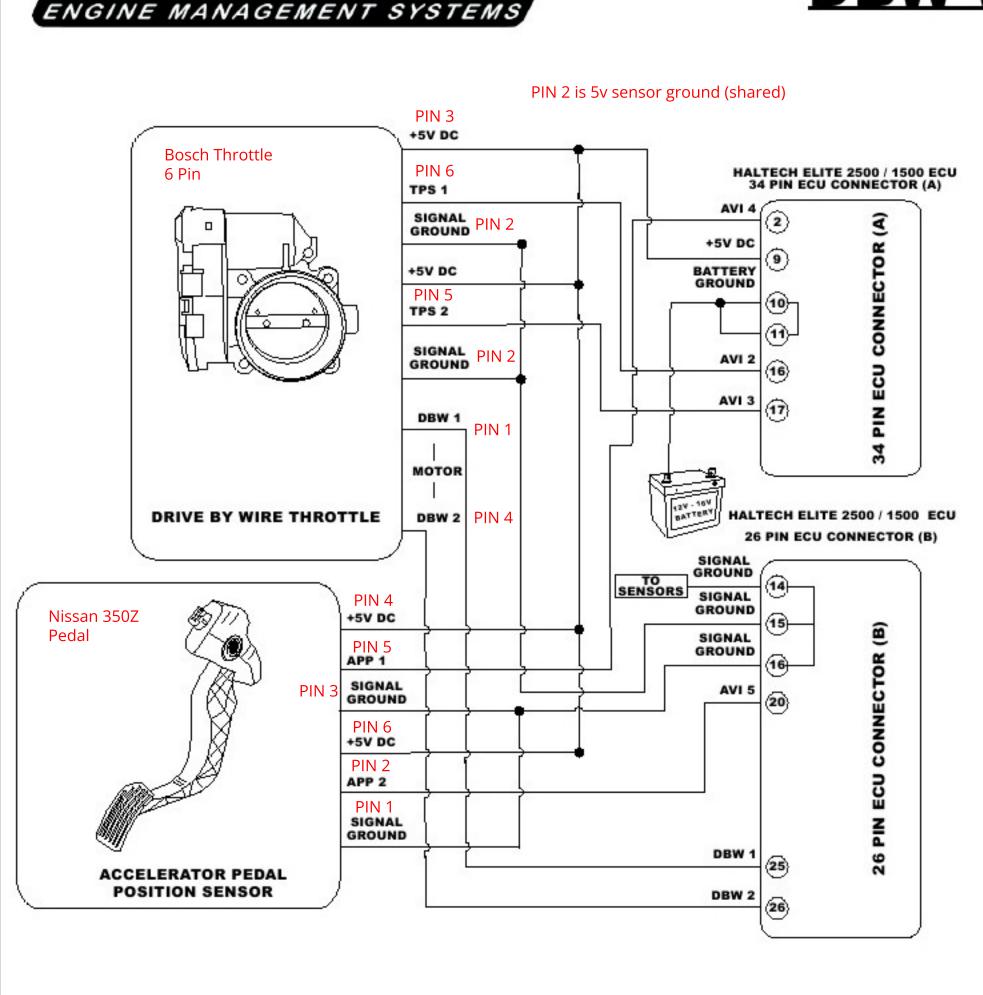

SYSTE

IMPORTANT NOTES

* DBW THROTTLE SENSORS MUST USE THE ECU +5V AND SIGNAL GROUND CONNECTIONS TO OPERATE CORRECTLY.

* DO NOT MIX GROUND FROM SOLENOIDS, INJECTORS, IGNITION, WIDEBAND 02 CONTROLLERS OR ANY HIGH CURRENT DEVICE WITH SIGNAL GROUND. SIGNAL GROUND IS ONLY FOR SENSORS.

DO NOT USE THE +5V FROM ANY OTHER SOURCE OTHER THAN THE ELITE ECU +5V

* CONNECT GROUND WIRES INDIVIDUALLY BACK TO THE ECU. **AVOID JOINING GROUND'S TOGETHER OR SHARING GROUND WIRES** AWAY FROM THE ECU.

AVOID GROUNDING SENSORS AT A LOCAL CHASSIS GROUND. RUN SIGNAL GROUND BACK TO THE ECU WHERE POSSIBLE.

* IT IS BEST TO JOIN BATTERY GROUND TO THE CHASSIS AT ONE POINT ONLY.

