




Nissan 350Z

DBW Accelerator Wiring Diagram

- | | |
|--------------------------|--------------------------|
| 1 - Sensor Ground (A2) | 4 - 5v (A2) |
| 2 - Position Sensor (A2) | 5 - Position Sensor (A1) |
| 3 - Sensor Ground (A1) | 6 - 5v (A1) |

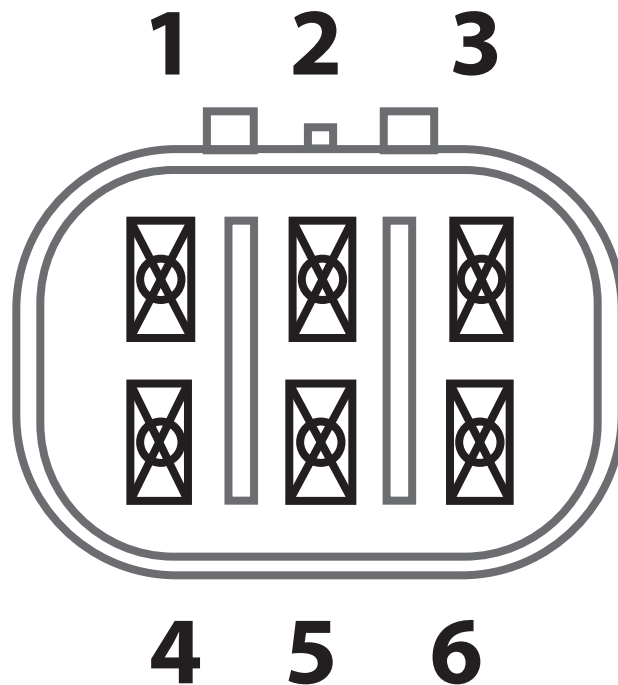

*Looking into the connector on the gas pedal assembly