

INTRODUCTION

The **Learning Cube** is an interactive and educational toy intended for toddlers and early learners. Stimulate your little one to a whole new way of learning the alphabet, numbers, colors, songs of the alphabet, numbers and colors, entertaining animal sounds, musical instrument sounds, and lovely music! (6+ months)



INCLUDED IN THIS PACKAGE

1 Learning Cube

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

1.5V AAA LR03/AM-4

1.5V AAA LR03/AM-4

1.5V AAA LR03/AM-4

GETTING STARTED

Take the **Learning Cube** out of the storage slot.

Battery Installation

The **Learning Cube** operates on 3 AAA (LR03) batteries:

- Locate the battery cover of the unit and open it with a screwdriver.
- 2. Insert 3 AAA (LR03) batteries as illustrated.
- 3. Close the battery cover and screw it back.

Start Playing

Once batteries are installed, switch on the power from (O) to ()) or ()).

Then press any of the buttons to play!

SLEEP MODE

- 1. If the **Learning Cube** is not active for more than 2 minutes, it will automatically go into sleep mode to save power.
- 2. Press any button to wake it up.
- 3. We recommend switching the unit OFF (O) when done playing with it.

FUNCTIONAL BUTTONS

ALPHABET



Learn the alphabet A~Z and play the alphabet song.

Lyrics:

★ A B C D E F G H I J K L M N O F Q R S and T U V W X Y and Z

now I know my ABCs won't you sing along with me

(repeat ★)

now I know my ABCs next time won't you sing with me

NUMBER

Learn the numbers 1~10 and play the number song.

Lyrics:



I say one two three you say four five six the next is seven eight nine and ten we do the counting count together from one to ten let's do it again

I say four five six
the next is seven eight nine and ten
we do the counting count together from one to ten
now we can count aloud

COLOR



Learn colors with lights and play the color song.

Lyrics:

red yellow green and blue green and blue shiny orange and purple too all the colors that we know live up in the rainbow

MUSIC



Play 10 fun music.

Music List:

- 01. I'm A Little Teapot
- 02. Polly Put the Kettle On
- 03. Pop Goes The Weasel
- 04. This Old Man
- 05. Itsy Bitsy Spider
- 06. Old MacDonald Had A Farm
- 07. The Mulberry Bush
- 08. Bingo
- 09. Little Brown Jug
- 10. If You're Happy And You Know It Clap Your Hands
- ★ Tip: Play music with the musical instrument button or animal button at the same time to hold a little concert!

MUSICAL INSTRUMENT



Play 12 instrument sounds.

Drum

Shaker

Cymbal

Castanet

Triangle

Tambourine

★ Tip: Hold on the button, discover more hidden sounds!

ANIMAL

Play 15 entertaining animal sounds.



Bird Bear Cat

Cow Dog Duck

Elephant Frog Horse

Leopard Monkey Owl

Rooster Sheep Tiger

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	 Make sure batteries are correctly installed. Make sure battery cover is secured. Remove batteries and put them back in. Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	 Clean battery contacts per above instructions. Install new batteries.





