


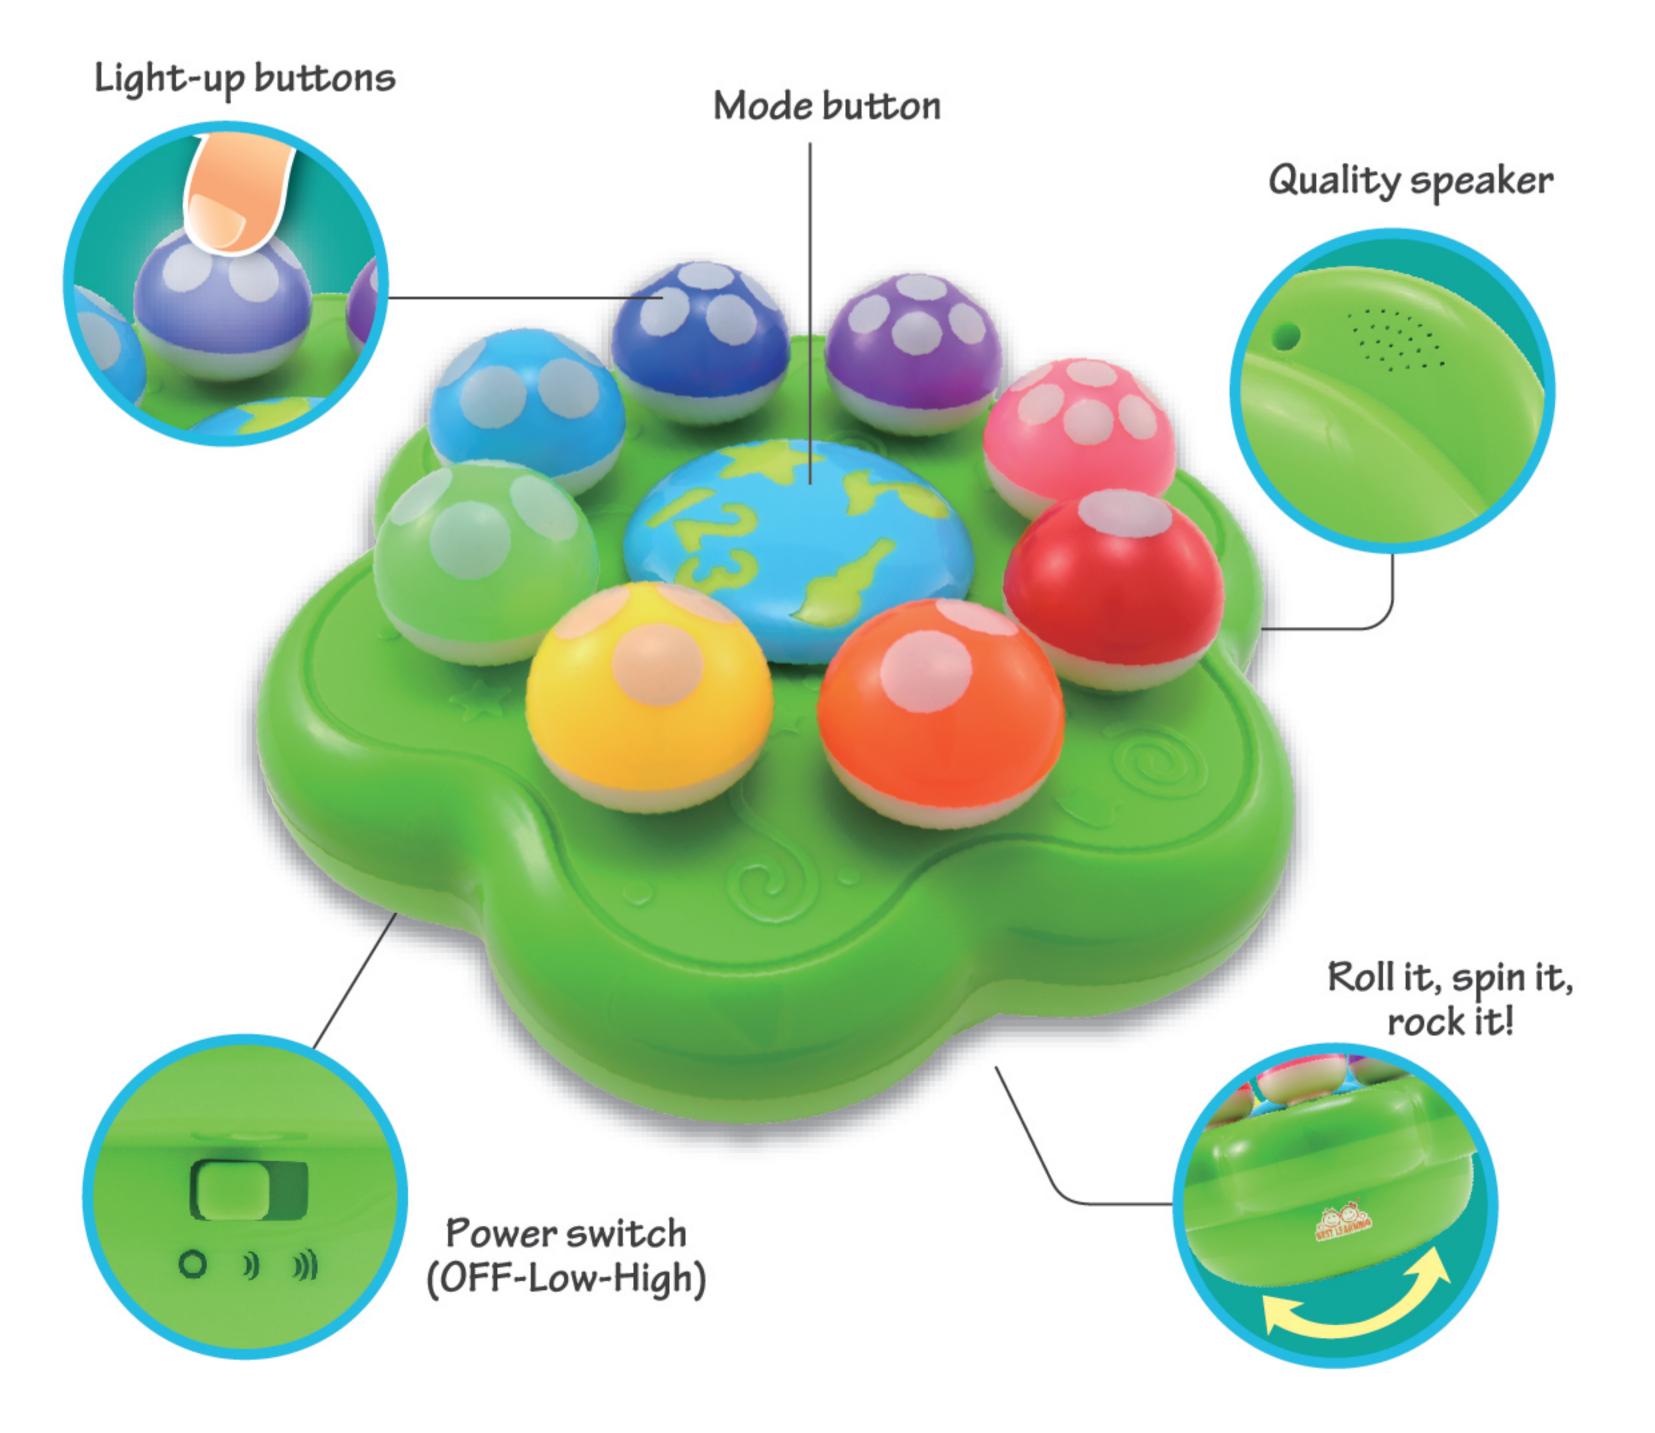

## INTRODUCTION

This interactive toy rocks with light-up mushroom buttons to learn colors, numbers, play children's songs and wacky sound effects. Every movement with the **Mushroom Garden** will be full of surprises! (12+ months)



## INCLUDED IN THIS PACKAGE

1 Interactive Mushroom Garden

#### **ADVICE**

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

## **GETTING STARTED**

Take the **Mushroom Garden** out of the storage slot.

## **Battery Installation**

The **Mushroom Garden** operates on 3 AAA (LR03) batteries:

- 1. Locate the battery cover of the unit andopen it with a screwdriver.
- 2. Insert 3 AAA (LR03) batteries as illustrated.
- Close the battery cover and screw it back.


### Start Playing

Once the batteries are installed, the **Mushroom Garden** is ready to be used.

Switch the ( ) to turn on the power.




 Rock the Mushroom Garden as it will respond with sound and flashing lights.

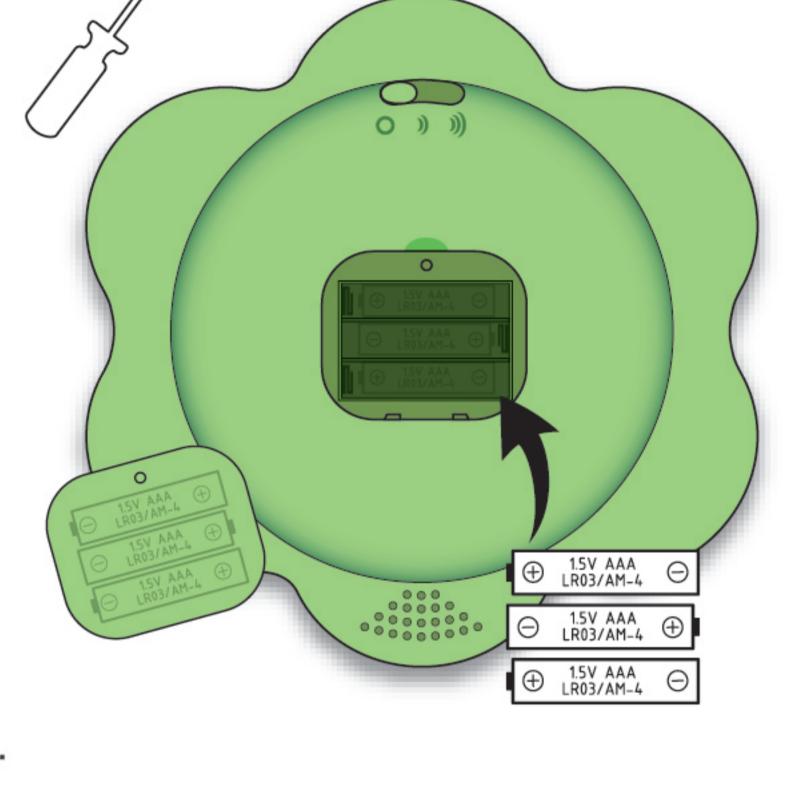




#### 2. Press the blue mode button to select different modes.

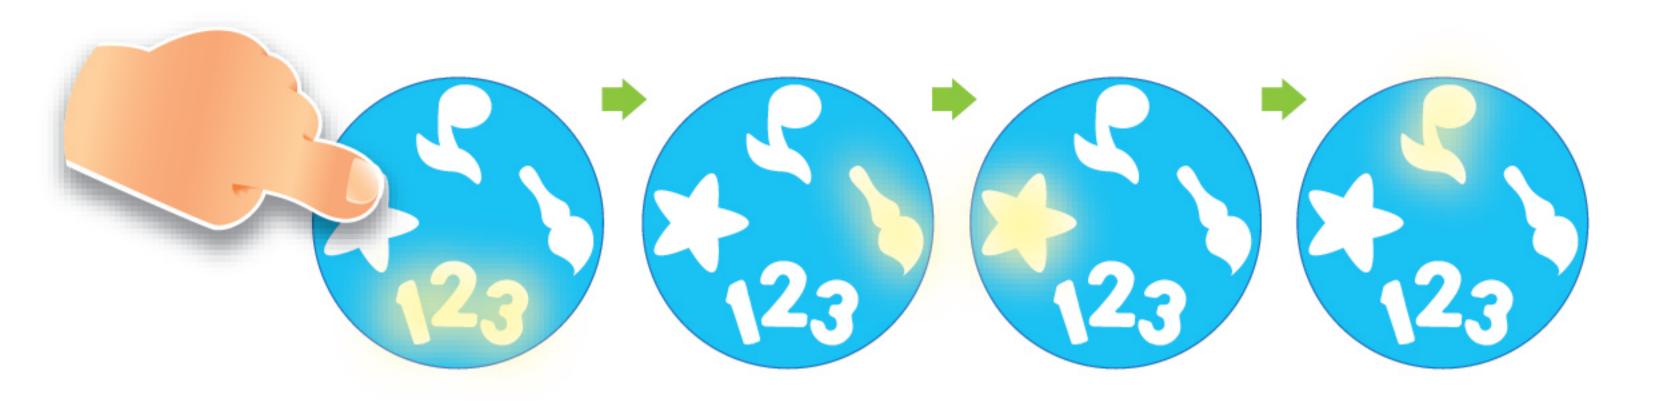

# 123 Number Mode

Learn numbers by counting the dots on the mushroom. Simply push down the mushroom to hear and keep pushing it to hear more.

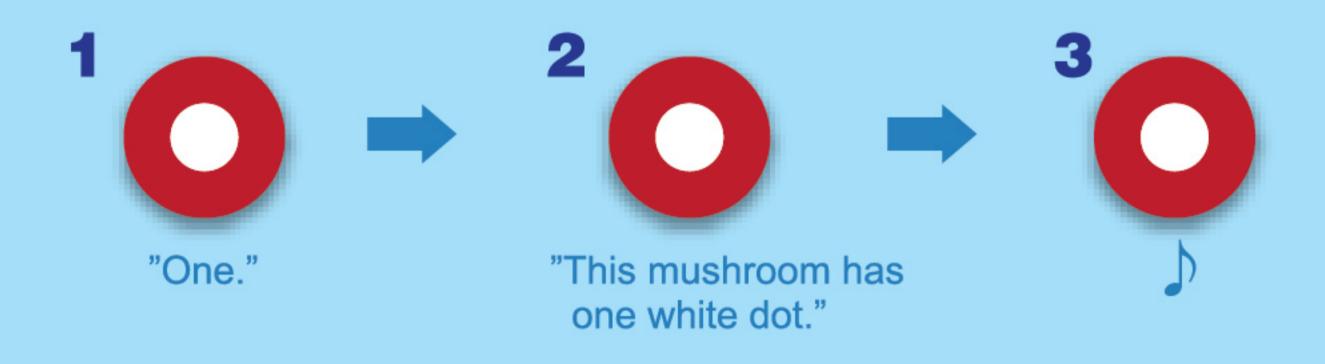



Learn colors as the mushroom lights up. Simply push down the mushroom to hear and keep pushing it to hear more.







Play music by rocking or spinning the **Mushroom Garden**. The mushrooms act as piano keys in this mode to play along.





# Game Mode







## Play various types of games!

\* The questions are asked in the below order.

## Type 1

"Which mushroom has four white dots?"

## Type 2

"Where is the yellow mushroom?"

## Type 3

"Follow me!"

Watch the pattern and repeat it.

The pattern gets longer as you progress.

## CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

## **BATTERY SAFETY**

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

## **TROUBLESHOOTING**

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul> <li>Make sure batteries are correctly installed.</li> <li>Make sure battery cover is secured.</li> <li>Remove batteries and put them back in.</li> <li>Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.</li> <li>Install new batteries.</li> </ul>
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul> <li>Clean battery contacts per above instructions.</li> <li>Install new batteries.</li> </ul>