



INTRODUCTION

A playful shake-able toy with cards for your little one to play on the go! Insert a card then press or shake, it plays lovely music, sounds, and voices along with colorful flashing lights! Children will learn about the letters A~Z and related words, illustrations, and sounds! Every movement with **Shake & Learn** will be full of surprises! (1+ years)



INCLUDED IN THIS PACKAGE

- 1 Shake & Learn
- 13 Learning Cards (double-sided)

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

GETTING STARTED

Take the Shake & Learn out of the storage slot.

Battery Installation

This product operates on 2 AAA (LR03) batteries:


- Locate the battery cover on the back of the unit and open it with a screwdriver.
- 2. Insert 2 AAA (LR03) batteries as illustrated.
- 3. Close the battery cover and screw it back.

ON & OFF

- 1. Once batteries are installed, press the (b) to turn on the power.
- 2. To turn off the power, press this button again for about 2 seconds.


Automatically Shut Off

- 1. If the product is not active for more than 1 minute, it will automatically shut off to save power.
- 2. To start playing, press the 😕 to turn on the power.
- 3. We recommend switching the unit OFF when done playing with it.

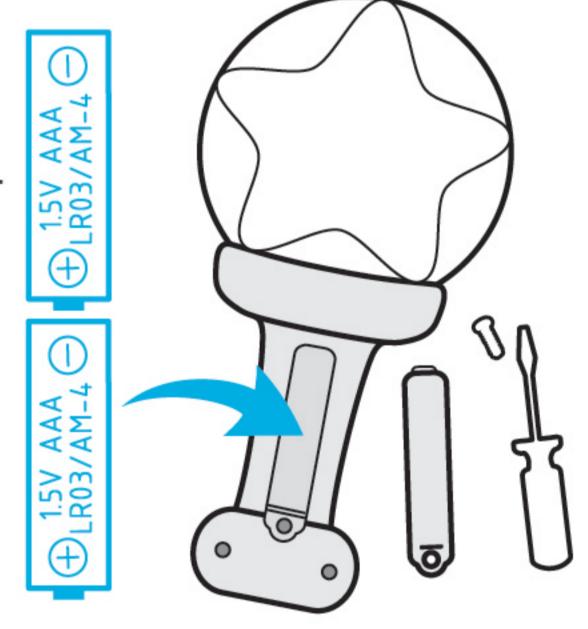

13 LEARNING CARDS

A total of 13 durable plastic learning cards to learn about the letters A~Z with related words, illustrations, and sounds!

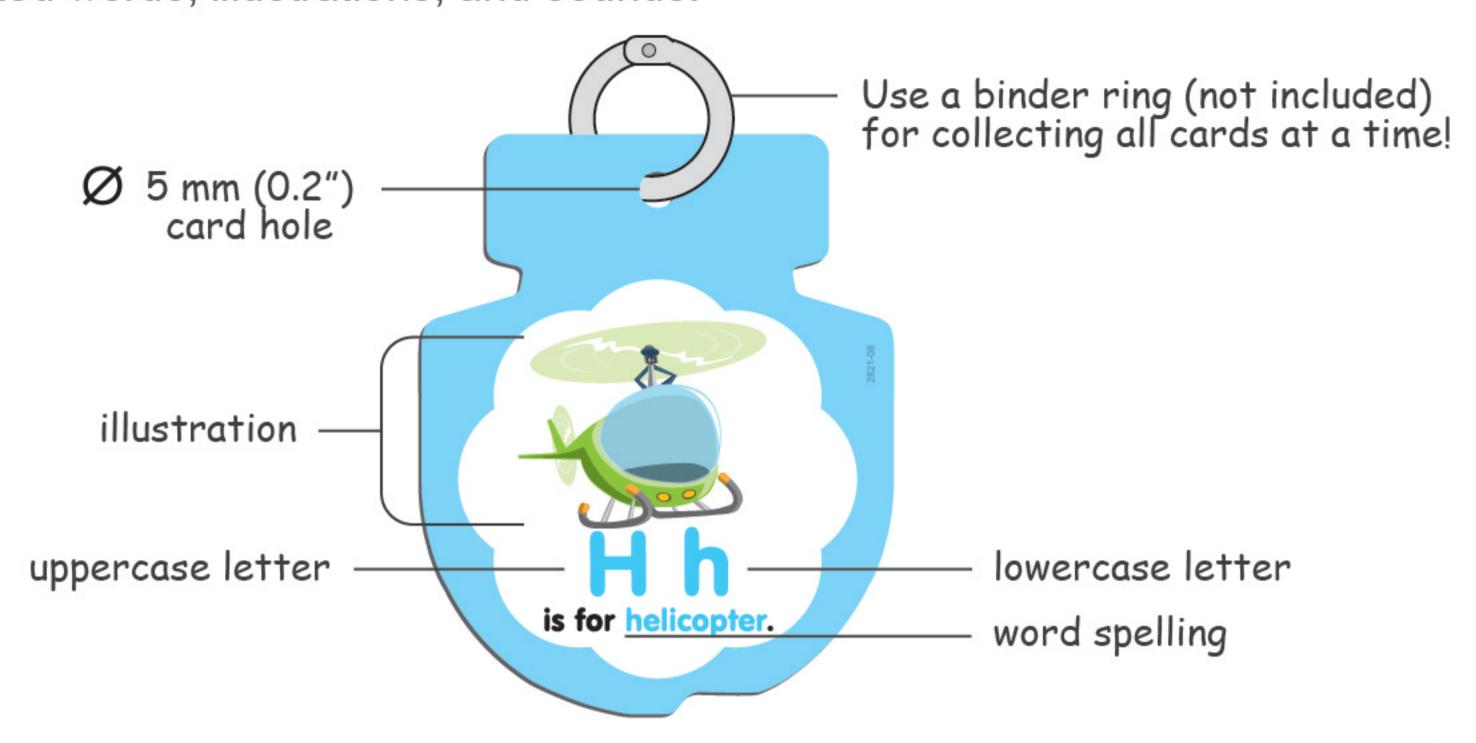

Tips

- Sort the cards by its color. Includes four categories:
 animals, vehicles, objects, and musical instruments.
- Card hole design on each card for collecting all cards with ease.





HOW TO PLAY





Learning Mode

- 1. Press this button to go into learning mode.
- 2. Choose and insert a card into the slot.
- 3. You will hear the "click" sound if the card is placed well.
- 4. After inserting a card, it reads the content automatically.
- 5. To read all content at a time, just shake the toy.
- To read step by step, press this button for swapping.

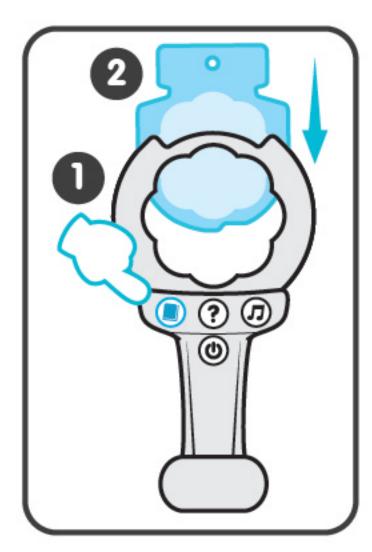

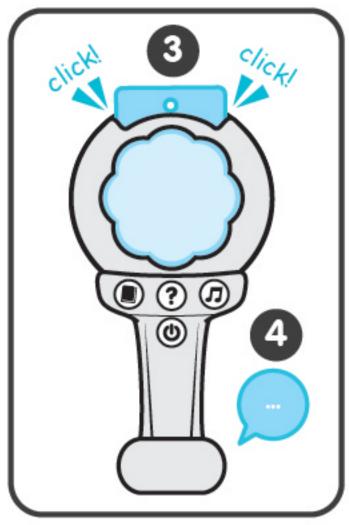

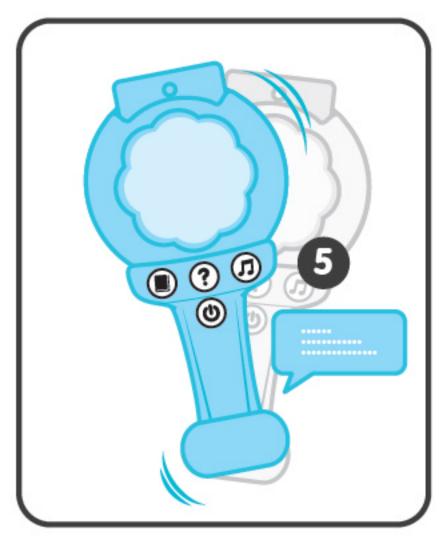


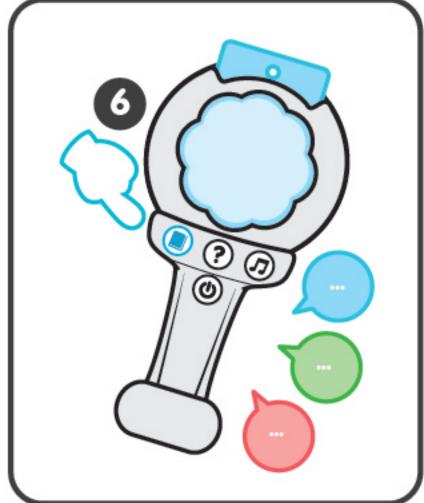





Quiz Mode

- 1. Press this button to go into quiz mode.
- 2. Listen to the question and choose a card to answer.
- Insert a card into the slot. It will tell you whether the answer is correct or incorrect by blinking the green light or red light along with the voices and sounds.
- 4. To repeat the question, just shake the toy.
- 5. To skip to the next question, press this button for swapping.

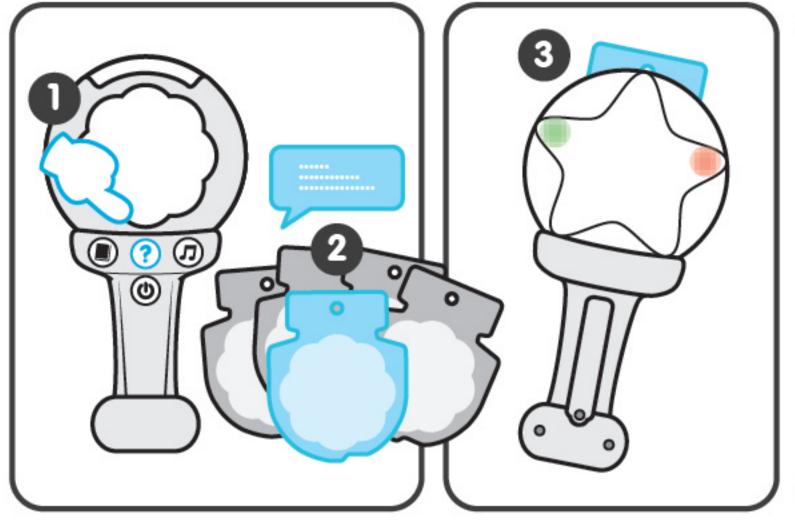

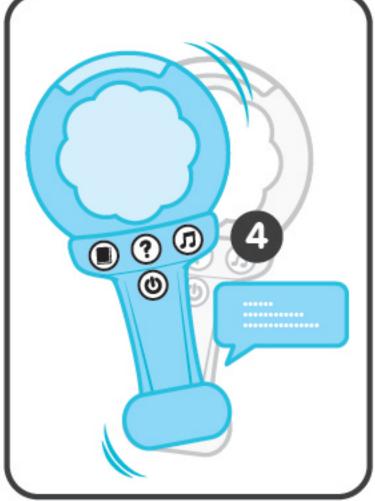


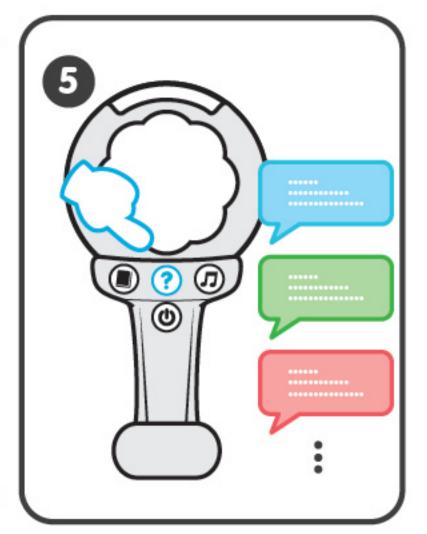




Music Mode

- 1. Press this button to go into music mode, and it will play music.
- 2. A total of 7 pieces of music. Press this button for swapping.
 - I Am A Little Teapot (mixed with The Itsy Bitsy Spider)
 - Pop Goes The Weasel
 - Old MacDonald Had A Farm
 - Little Brown Jug
 - If You Are Happy And You Know It Clap Your Hands
 - Polly Put The Kettle On
 - Twinkle Twinkle Little Star
- 3. You can make wacky sounds by shaking the toy.
- Or insert a card and shake the toy to make the sound of that card for much fun.

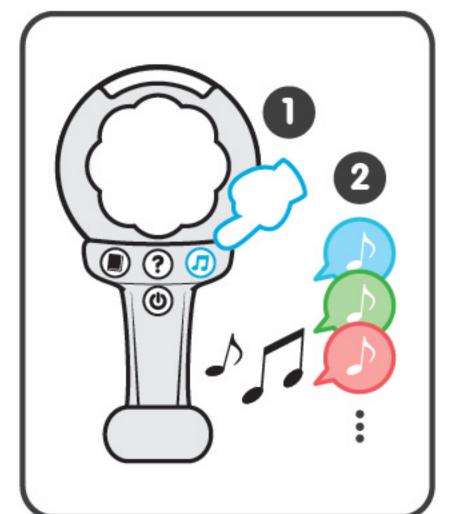



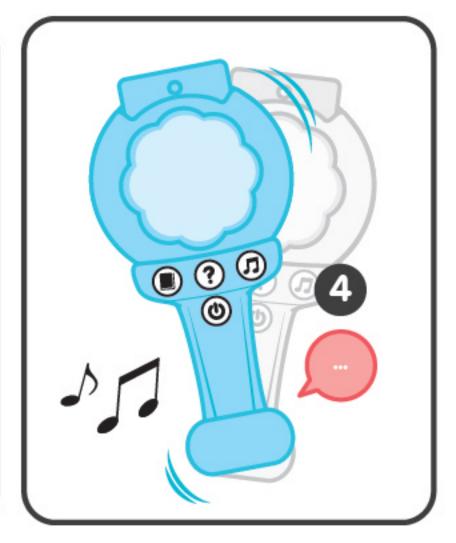



KEEP IT COLORFUL

- 1. 5 colorful lights flash around while playing!
- In quiz mode, the green light is for the correct answer while the red light is for the incorrect one.
- Insert a card, then shake the toy, it will respond with encouraging sounds, voices, and lights!

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom Possible Solution Make sure batteries are correctly installed. Make sure battery cover is secured. Remove batteries and put them back in. Toy does not turn ON or Clean battery compartment by rubbing lightly with does not respond. a soft eraser and then wiping with a clean dry cloth. Install new batteries. Toy makes strange Clean battery contacts per above instructions. sounds, behaves Install new batteries. erratically or makes improper responses.





