

My Learning Board

INTRODUCTION

An interactive valuable poster for your little one! Learning has never been so much easy and fun! Just press any key to begin, your little one will explore the alphabet, spelling, numbers, math, quiz, games, drawing, and music in a whole new way! Gives your child a head start in school! (3+ years)



INCLUDED IN THIS PACKAGE

- 1 i-Poster: My Learning Board
- 1 wipe-able pen

ADVICE

- **DO NOT FOLD** this product.
- For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wireties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.


GETTING STARTED

Take the i-Poster out of the storage slot.

Battery Installation


The i-Poster operates on 3 AAA (LR03) batteries:

1. Locate the battery cover on the bottom of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

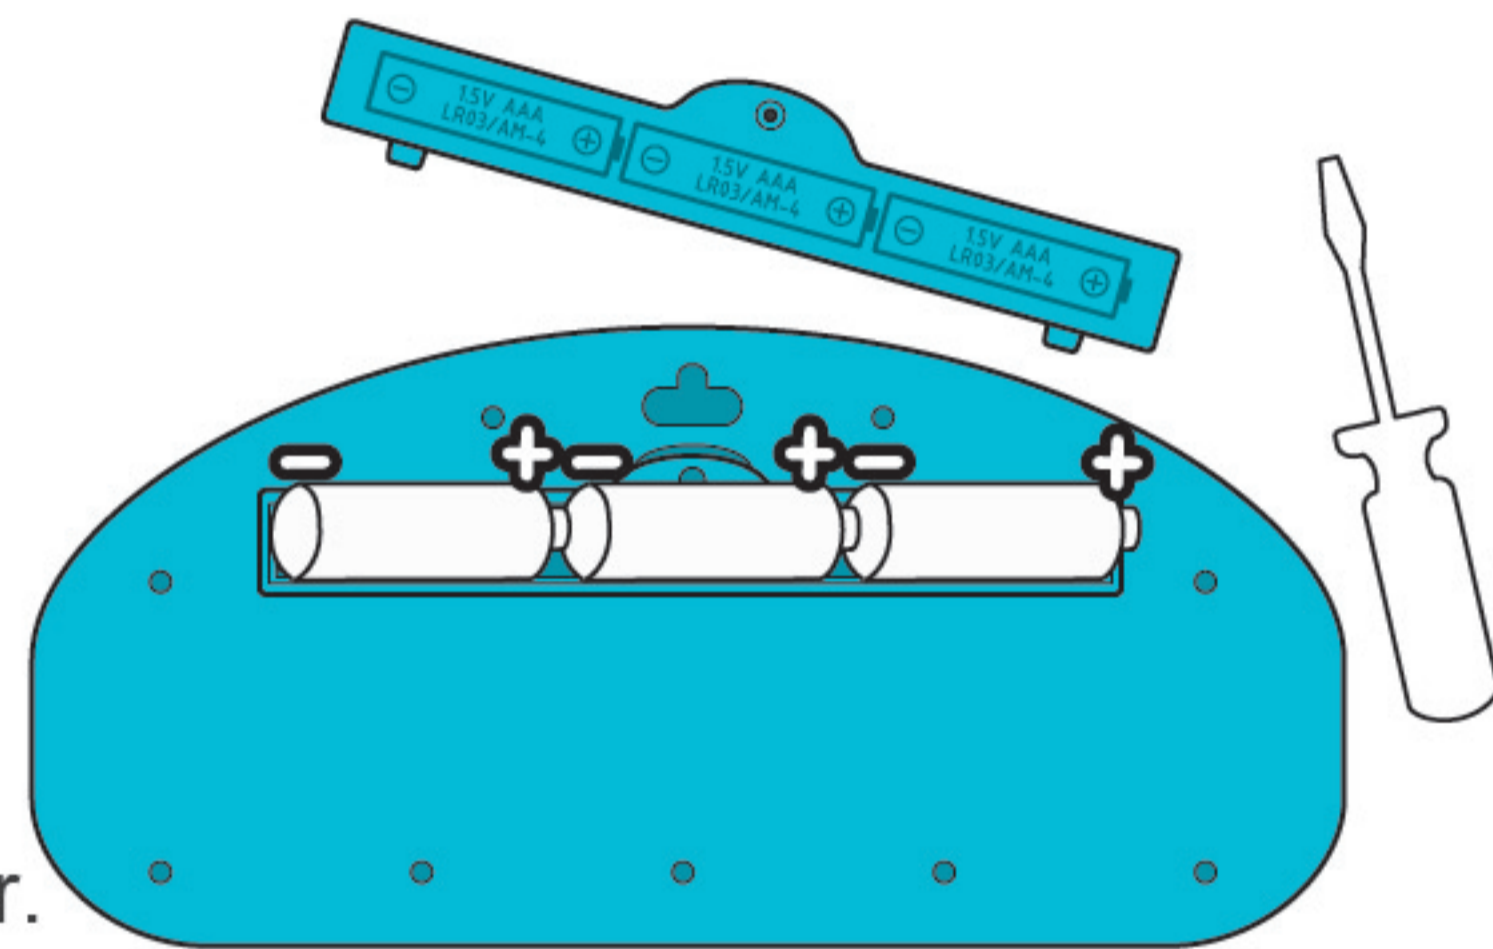

Start Playing

1. Press the ON/OFF button to turn ON.
2. Select any one of modes to play.
3. Follow the instruction then ENJOY IT!
4. To turn OFF, press the ON/OFF button again.

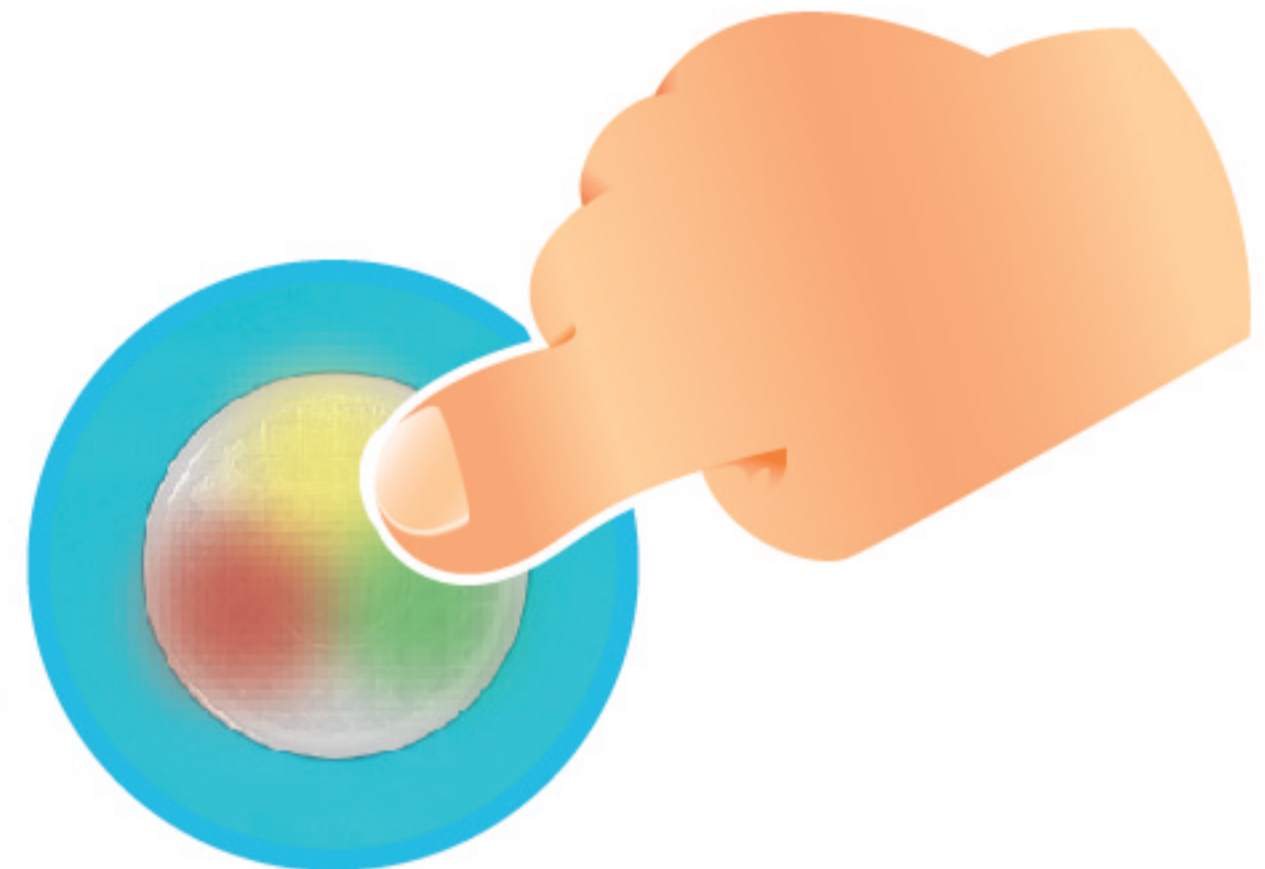

Three Functional Buttons



Decrease
Volume



Increase
Volume



Repeat the previous
statement.

SLEEP MODE

1. If the i-Poster is not active for more than 2 minutes, it will automatically shut OFF. Press any button to turn it back ON.
2. We recommend turning the unit OFF when done playing with it.

SIX MODES TO PLAY

Choose any one of the modes to learn lots of fun activities about the alphabet and numbers!



Learn Mode

In this mode, children will learn some basic activities about the alphabet, numbers, and simple mathematics.

01. Pronunciations

Press any **letter button** to hear its pronunciation.


02. Writing Strokes

Use the **wipe-able pen**, following the strokes of the letter, writing uppercase and lowercase letters step by step.



03. Learn from Ones to Thousands







Input an 1 digit up to 4-digit number then press the **enter button** to create a number.

1. Input     in order.
2. Then press .
3. It will say the number "seventy-eight hundred and ninety".



04. Additions & Subtractions

The calculator allows you to make an equation with addition and subtraction to do calculations under 100,000.

1. Input       in order then press .
2. It will calculate the equation $\{ 8 - 7 + 90 = ? \}$ then say out the answer is "ninety-one".

Note 1: If the input number is over 4-digit at a time then it will be invalid and reset.

Note 2: If the calculations is over 99,999 then it will be invalid and reset.

Note 3: If the calculations is negative then it will be invalid and reset.



Basic Quiz Mode

Challenge basic knowledge about the letters and numbers.



Letters

Press a **letter button** to answer these types of questions.

"Where is the frog?"

"Find the letter F."

"Which letter's pronunciation is /f/?"



Numbers

Input a number then press the **enter button** to answer.



"How to input the number fourteen?"



Math Mode

Press this button once for **Basic Math Quiz**.

Press it again for **Advanced Math Quiz**.

Input a number then press the **enter button** to answer.

Basic Math Quiz

Challenge the mathematical questions about 1 digit to 2-digit numbers.

"What is 1 plus 2?"

"What is 22 minus 2?"

Advanced Math Quiz

Challenge the mathematical questions about 3-digit to 4-digit numbers.

"What is 100 plus 200?"

"What is 2,000 minus 1,000?"



Spell

Spelling Mode

Spell words that start from A to Z, and learn the spelling of numbers 0 to 9.

q-u-o-k-k-a

Press any picture to learn how to spell the word, and hear the sound.

Press any number from 0-9 to learn how to spell the number.

Sp?ll

Spelling Quiz Mode

Challenging quiz about spelling!

Hunting Words

Press a picture to answer.

"Where is the word that is spelt F-R-O-G?"



Spelling Words

Press the **letter buttons** in the right order to answer.

"Let's find the letters that spell the word FROG."



Game Mode

Press this button once for **Memory Game**.
Press it again for **Hit Game**.

Memory Game

Memorize the objects said then press them in the right order.

Hit Game

6 levels to challenge. Follow the instruction and hit the alphabet, number, or object within the timer. The timer will be shorter as you reach higher levels.

MUSIC FUN

Let's sing the alphabet song and the number song!
With other buttons acting as the piano keys or drum sounds while the song is playing.



DRAWING FUN

Write and draw with the **wipe-able pen** included.
A magnet area is on the top corner of the calculator where the pen can be stored.

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul style="list-style-type: none">• Make sure batteries are correctly installed.• Make sure battery cover is secured.• Remove batteries and put them back in.• Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.• Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul style="list-style-type: none">• Clean battery contacts per above instructions.• Install new batteries.

CONFORMS TO
CE EN71
UKCA
ASTM F963

Item No. 4221

