

MY UNITED KINGDOM



INTRODUCTION

Explore and discover the United Kingdom with your fingertips! Learn over 300 facts and questions about its geography, capital cities, famous landmarks, fun facts, trivia, and more with the i-Poster: My United Kingdom! (5+ years)



INCLUDED IN THIS PACKAGE

- 1 i-Poster: My United Kingdom

ADVICE

- Please **DO NOT FOLD** this product.
- For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wireties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.


GETTING STARTED

Take the **i-Poster** out of the storage slot.

Battery Installation


The **i-Poster** operates on 3 AAA (LR03) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

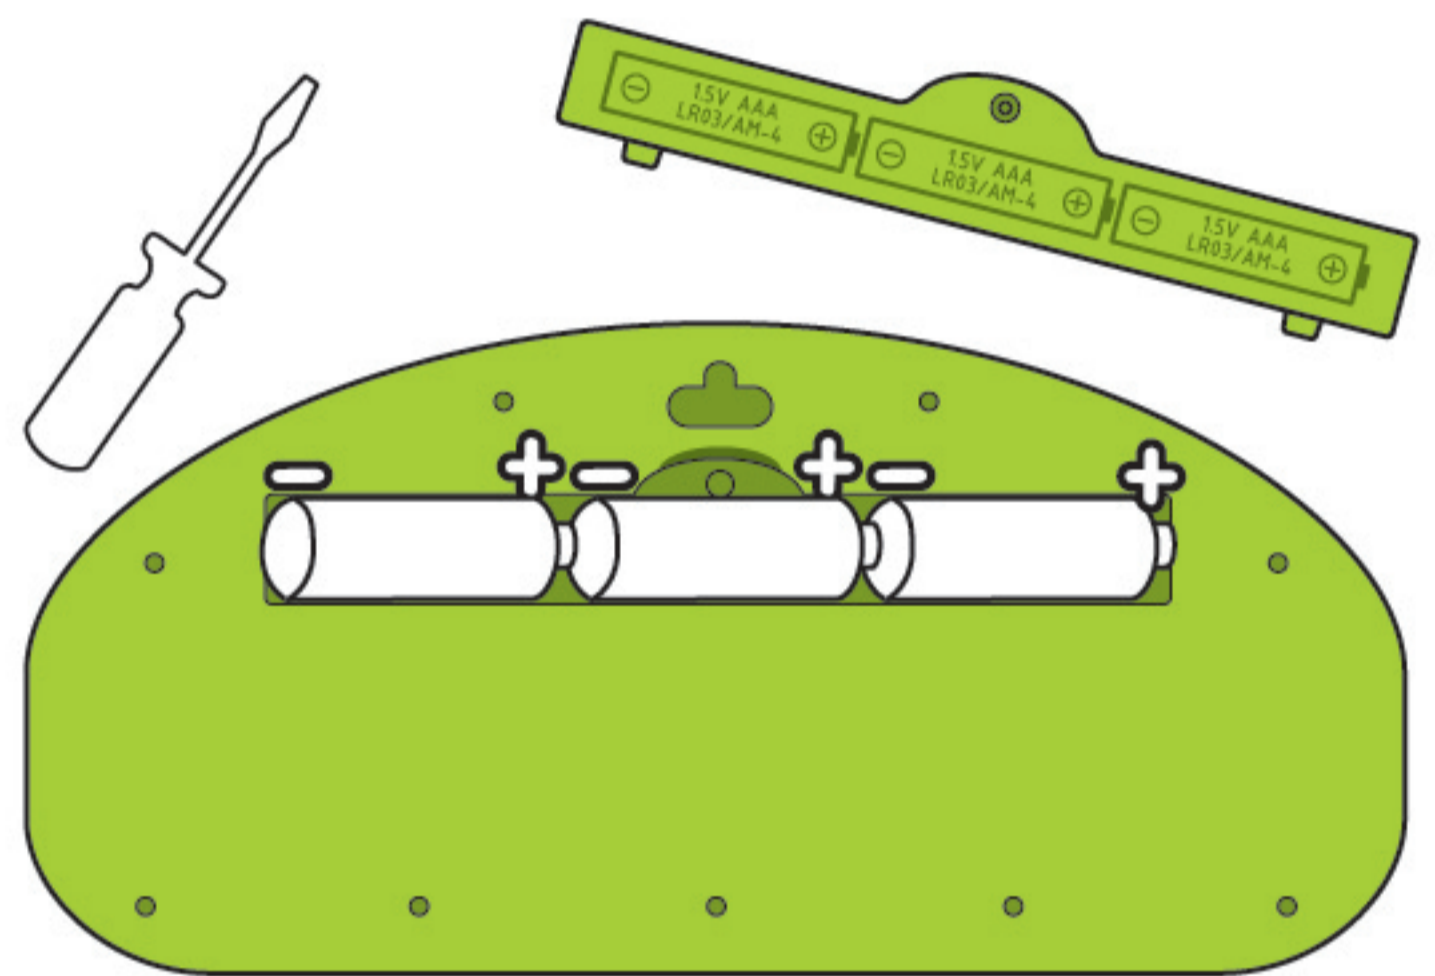

Start Playing

1. Press the ON/OFF button to turn ON.
2. Select any one of functional buttons to play.
3. Follow the instruction then ENJOY IT!
4. To turn OFF, just press the ON/OFF button again.

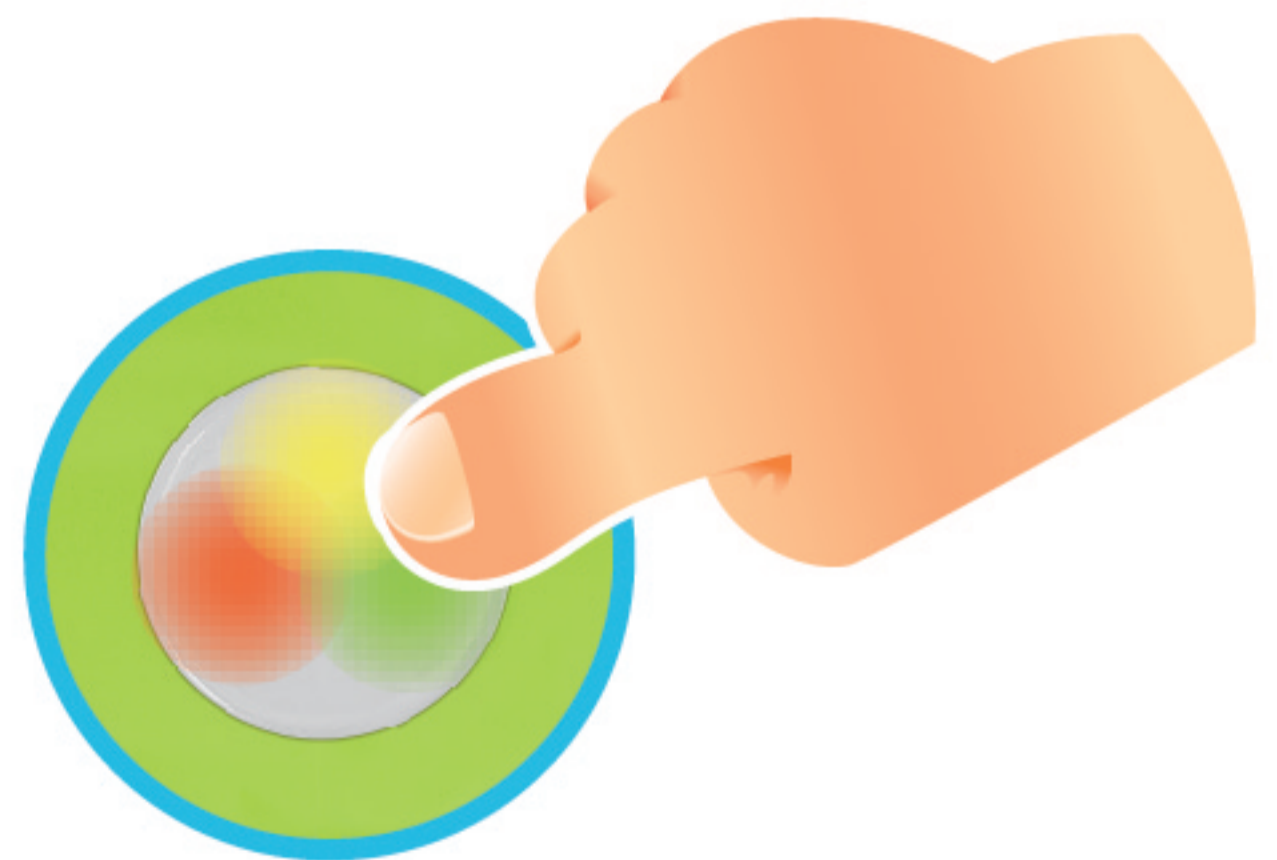

SLEEP MODE

1. If the **i-Poster** is not active for more than 2 minutes, it will automatically shut OFF. Press any button to turn it back ON.
2. We recommend turning the unit OFF when done playing with it.

FUNCTIONAL BUTTONS

God save our
gracious Queen, Long
live our noble Queen...



National Anthem
Off Vocal



National Anthem

Plays the national anthem of the United Kingdom! Select and press any one of the song buttons to play the vocal-on or vocal-off version. Press it again to pause the song at any time!



Learn

Gain knowledge of the UK's geography, capital cities, famous landmarks, fun facts, trivia, and more!

Basic



Advanced



Quiz

Take challenge in the basic or advanced quiz!

Decrease



Increase



Volume

5 levels of volume adjustments.



Repeat

Repeats the previous statement.

HOW TO PLAY

In the learn mode

- Press any one of the interactive buttons (the hand images) to learn. The numbers on the interactive button refers to how much information is on it, so keep pressing it to learn more!



4 ENGLAND

England is a country that is a part of the United Kingdom. Its capital and largest city is London.



The flag of the United Kingdom is also known as the Union Flag.





Carrick-a-Rede Rope Bridge is a famous rope bridge near Ballintoy in County Antrim. The bridge links.....

In the quiz mode

- Simply **press an interactive button to answer the question!**



**Which country
Its capital and
largest city is
Belfast?**

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul style="list-style-type: none">● Make sure batteries are correctly installed.● Make sure battery cover is secured.● Remove batteries and put them back in.● Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.● Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul style="list-style-type: none">● Clean battery contacts per above instructions.● Install new batteries.

CONFORMS TO
CE EN71
UKCA
ASTM F963

Item No. 4225

