

MY USA

Interactive Map



INTRODUCTION

Explore and discover the states with your fingertips. Learn over 500 facts and questions about all the states of the United States of America. (5+ years)

Speaker

ON/OFF button
(with the LED lights)



Interactive buttons
(the state names)

10 Functional buttons

INCLUDED IN THIS PACKAGE

- 1 i-Poster: My USA

ADVICE

- **DO NOT FOLD** this product.
- For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wireties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.


GETTING STARTED

Take the **i-Poster** out of the storage slot.

Battery Installation


The **i-Poster** operates on 3 AAA (LR03) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

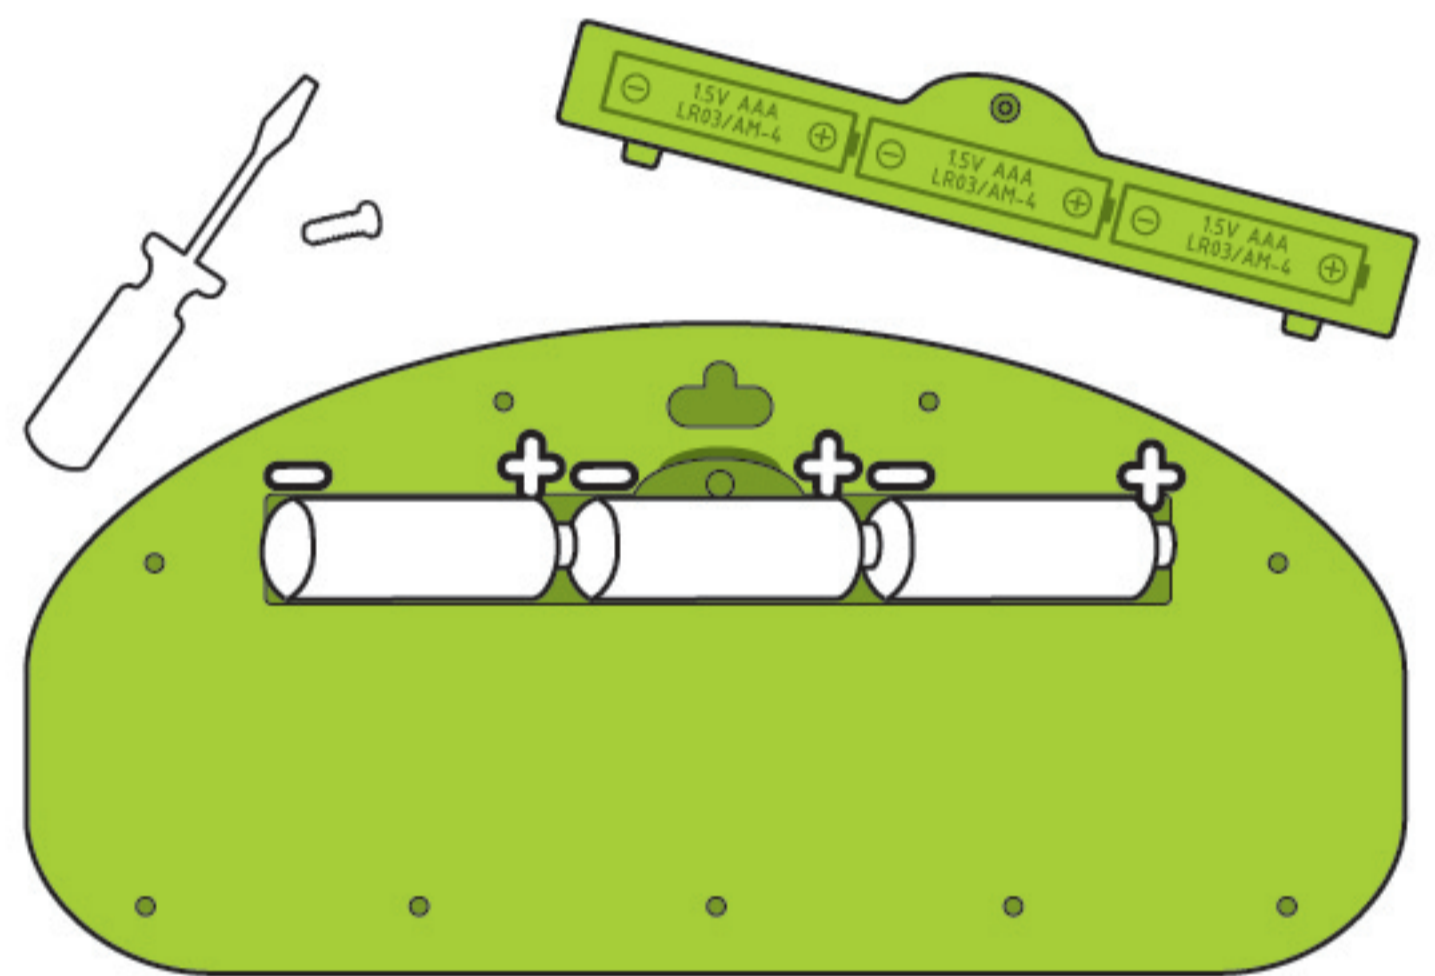

Start Playing

1. Press the ON/OFF button to turn ON.
2. Select any one of functional buttons to play.
3. Follow the instruction then ENJOY IT!
4. To turn OFF, just press the ON/OFF button again.

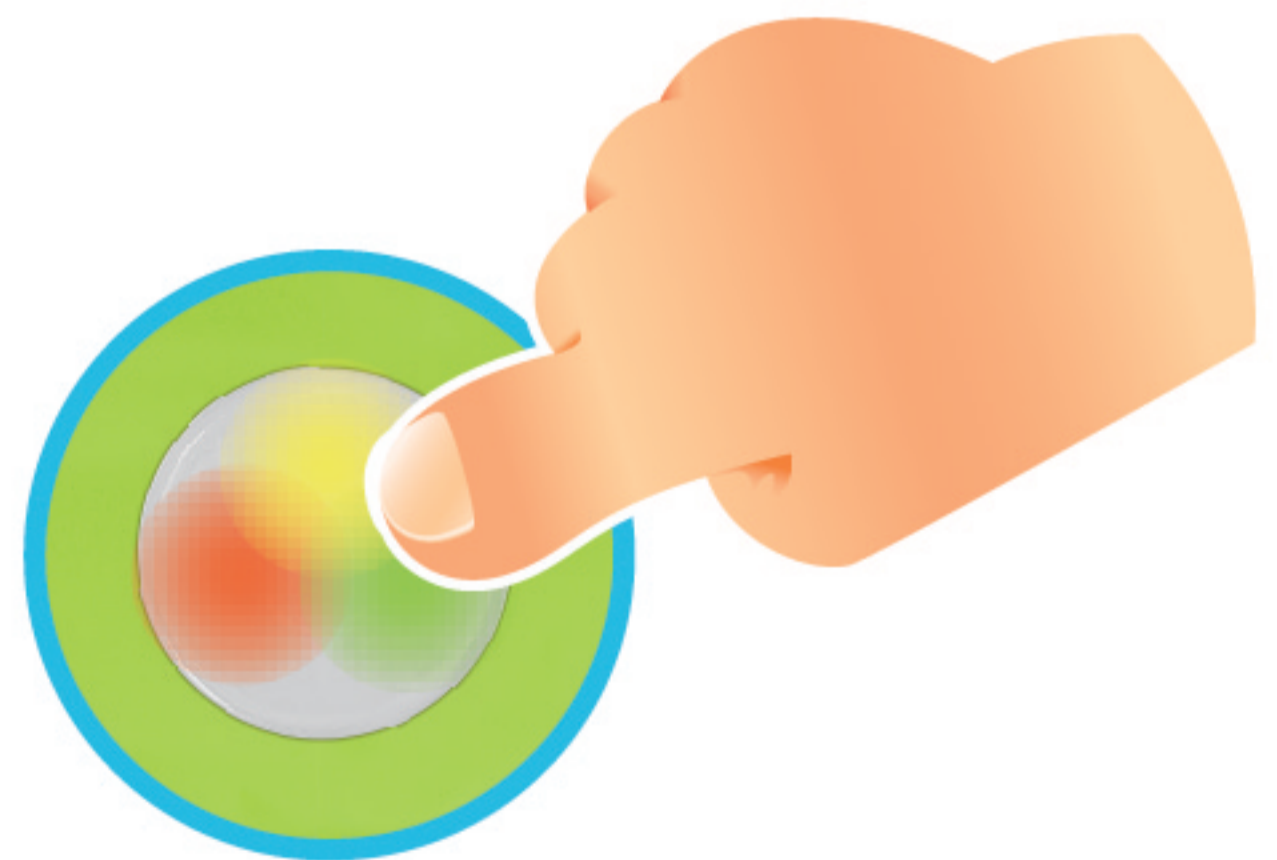

SLEEP MODE

1. If the **i-Poster** is not active for more than 2 minutes, it will automatically shut OFF. Press any button to turn it back ON.
2. We recommend turning the unit OFF when done playing with it.

HOW TO PLAY

- After selecting a learning mode, simply press **the name of the state** to hear about it.



- In the quiz mode, simply press **the name of the state** to answer the question.



FUNCTIONAL BUTTONS



National Anthem

Sing the National Anthem of the United States.



Oh, say can you see, By the dawn's early light, What so...



(National Anthem Off Vocal)



Information

Learn the location, capital city, and largest city of each state.

NEVADA

Its capital is Carson City, and the largest city is Las Vegas -- the gambling capital of America.



Climate

Learn typical weather patterns of each state.

FLORIDA

Sunshine and blue skies are common weather in Florida all year round. Due to its...



Knowledge

Learn about monumental and historical facts.

NEW YORK

The most famous landmark in New York is the Statue of Liberty. It is a symbol of...





Fun fact

Learn some trivia about each state.

Wyoming

Wyoming was the first state to give women the right to vote. This action...



Basic Quiz

“Topeka is the capital of what state?”



Advanced Quiz

“Which state is divided into two parts by the Chesapeake Bay?”



Volume-



Volume+

5-level volume control.



Repeat

Repeats the previous statement.

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

| Symptom | Possible Solution |
|--|--|
| Toy does not turn ON or does not respond. | <ul style="list-style-type: none">● Make sure batteries are correctly installed.● Make sure battery cover is secured.● Remove batteries and put them back in.● Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.● Install new batteries. |
| Toy makes strange sounds, behaves erratically or makes improper responses. | <ul style="list-style-type: none">● Clean battery contacts per above instructions.● Install new batteries. |

Item No. 4227

CONFORMS TO
CE EN71
UKCA
ASTM F963



UK
CA

