

INTRODUCTION

EduQuiz — **Basic Set I** is a portable interactive game! Includes 30 lesson cards; 60 activities! Learn about shapes, numbers, math, comparision, time, colors, animals, patterns, profession and much more! (3+ years)



INCLUDED IN THIS PACKAGE

- 1 EduQuiz
- 30 interactive learning cards (60 activities)

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.


GETTING STARTED

Take the EduQuiz out of the storage slot.

Battery Installation

The EduQuiz operates on 2 AAA (LR03) batteries.

- 1. Locate the battery cover on the back of the unit.
- 2. Open the battery cover with a screwdriver.
- 3. Insert 2 AAA (LR03) batteries.

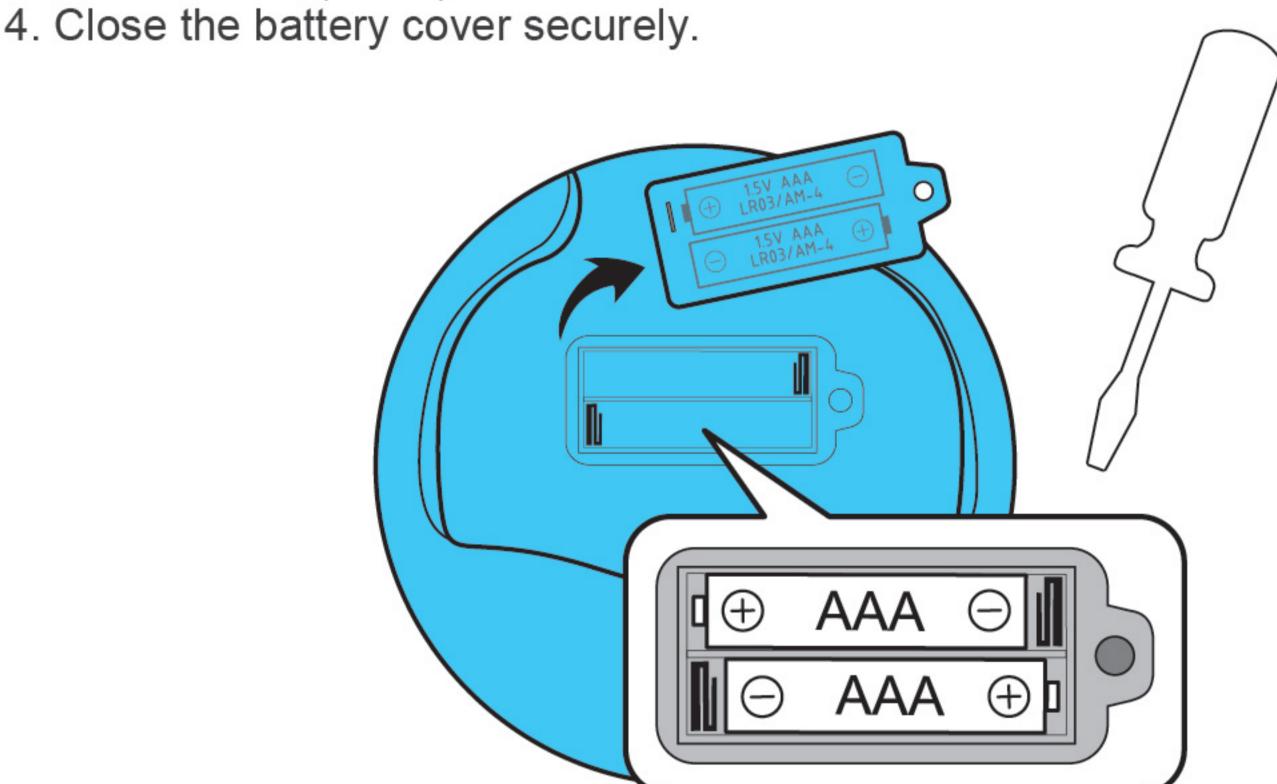

SLEEP MODE

- If the EduQuiz is not active for more than 2 minutes, it will automatically go into sleep mode to save power.
- 2. Press the power button again to restart the game.

HOW TO PLAY

1. Select and insert a learning card into the slot.



2. Press the power button on the bottom of the card to start.



3. Read the question of that card then press red dots to answer.



4. Once you press a red dot, it will tell you the answer is correct or incorrect by flashing the green light or the red light.



CARD COMPARTMENT

Includes a card compartment to store all cards on the back of the EduQuiz.



30 INTERACTIVE LEARNING CARDS

In this exclusive value pack, it comes with 30 cards (double-sided) with various fun activities and challenges, gives your child a head start in school!

- 01. Find the matching shadow.
- 02. Find the matching shadow.
- 03. Find the missing shape.
- 04. Find the symmetry cut out.
- 05. Match the original shape.
- 06. Match the original shape.
- 07. Find the matching shape.
- 08. Find the matching shape.
- 09. Find the matching shape.
- 10. Find the identical object.
- 11. Find the matching shape.
- 12. How many are there?
- 13. How many are there?
- 14. How many are there?
- 15. Solve & find the answer.
- 16. Solve & find the answer.
- 17. Greater, less or equal.
- 18. Find the missing number.
- 19. Match the correct unit.
- 20. Match the correct unit.
- 21. Match the correct unit.
- 22. Match the correct unit.
- 23. What time is it?
- 24. What time is it?
- 25. Fill in the correct color.
- 26. Fill in the correct color.
- 27. Find the matching color.
- 28. Find the matching color.
- 29. What animals live in the ocean?
- 30. What animals live on land?
- 31. FMatch the baby to its parent.
- 32. Match the baby to its parent.
- 33. Find the matching footprint.
- 34. Find the matching footprint.
- 35. Match the piece to its whole.

- 36. Match the slice to its whole.
- 37. Where does it grow?
- 38. What is in the sandwich?
- 39. What did it come from?
- 40. What did it come from?
- 41. Match the sport equipment.
- 42. Match the sport equipment.
- 43. Match the music instrument.
- 44. Match the music instrument.
- 45. Match the transportation.
- 46. Match the transportation.
- 47. Match object to the body part.
- 48. Match object to the body part.
- 49. What is heavier than a donkey?
- 50. What is lighter than an egg?
- 51. What is bigger?
- 52. What is smaller?
- 53. Find the matching patterns.
- 54. Find the matching patterns.
- 55. Find their tools.
- 56. Find their tools.
- 57. Find the differences.
- 58. Who can reach the gold?
- 59. Who has the sandwich?
- 60. Find where they are.



CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom Possible Solution Make sure batteries are correctly installed. Make sure battery cover is secured. Remove batteries and put them back in. Toy does not turn ON or Clean battery compartment by rubbing lightly with does not respond. a soft eraser and then wiping with a clean dry cloth. Install new batteries. Toy makes strange Clean battery contacts per above instructions. sounds, behaves Install new batteries. erratically or makes improper responses.







