

MY FIRST PIANO BOOK

Have fun learning the piano!

INTRODUCTION

Little music lovers will enjoy this portable book-sized piano. The twenty-key piano promotes creative education through playing along with any of the 10 songs and 6 musical instruments! (3+ years)



INCLUDED IN THIS PACKAGE

- 1 **Piano Book** (with twenty-key piano)

ADVICE

- For best conservation, we recommend removing batteries from prolonged storage.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.


GETTING STARTED

Take the **Piano Book** out of the polybag.

Battery Installation

The **Piano Book** operates on 2 AAA (LR03) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 2 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

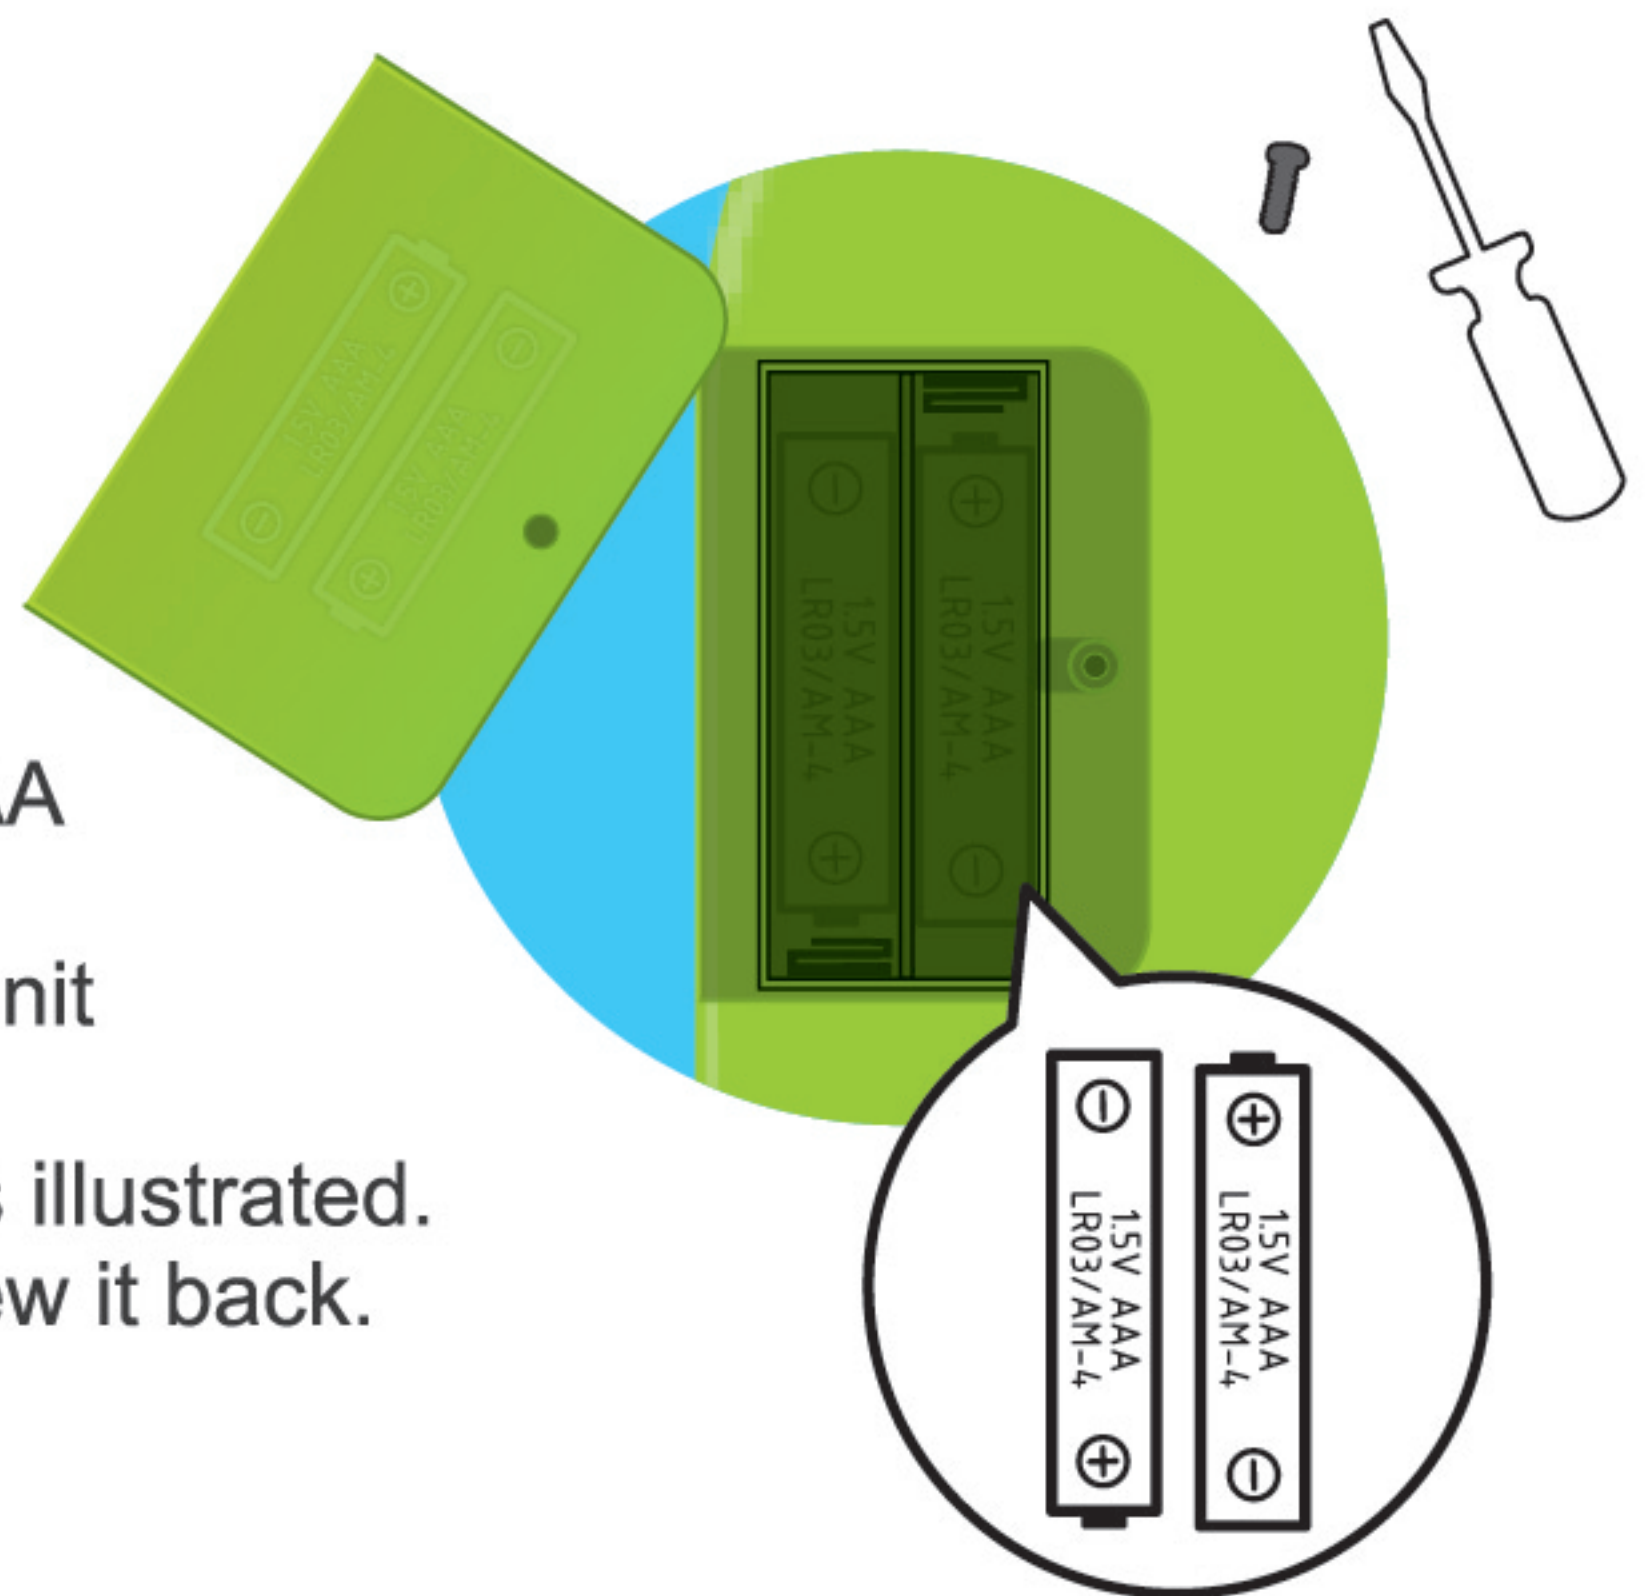

FEATURES

Polyphonic Keyboard

Just press any button of the board or play with the twenty-key piano to play!

10 Popular Kid's Music

- Includes 10 popular kid's music.
- Press it once to play music.
- Press it again while playing to stop.





The Mulberry Bush



Twinkle Twinkle Little Star



Mary Had A Little Lamb



Row Row Row Your Boat



Eency Weency Spider



If You're Happy And You Know It Clap Your Hands



I've Been Working On The Railroad



Old MacDonald Had A Farm



The Hokey Pokey



The Wheels On The Bus

6 Musical Instruments

- Press any of the musical instruments to swap between them.
- 6 musical instruments includes:
Piano, Flute, Saxophone (top-side)
Harp, Accordion, Guitar (bottom-side)



Piano



Flute



Saxophone



Harp



Accordion




Guitar

Play the Piano with Fun & Ease

1. Choose any one of the sheet music.



2. Follow the colored numbers on the sheet music.



musical notes


colored numbers

lyrics

4 4 4 4 6 1 6 4 6

Here we go round the mulberry bush, So

3. Press the same colored numbers on the piano keyboard.

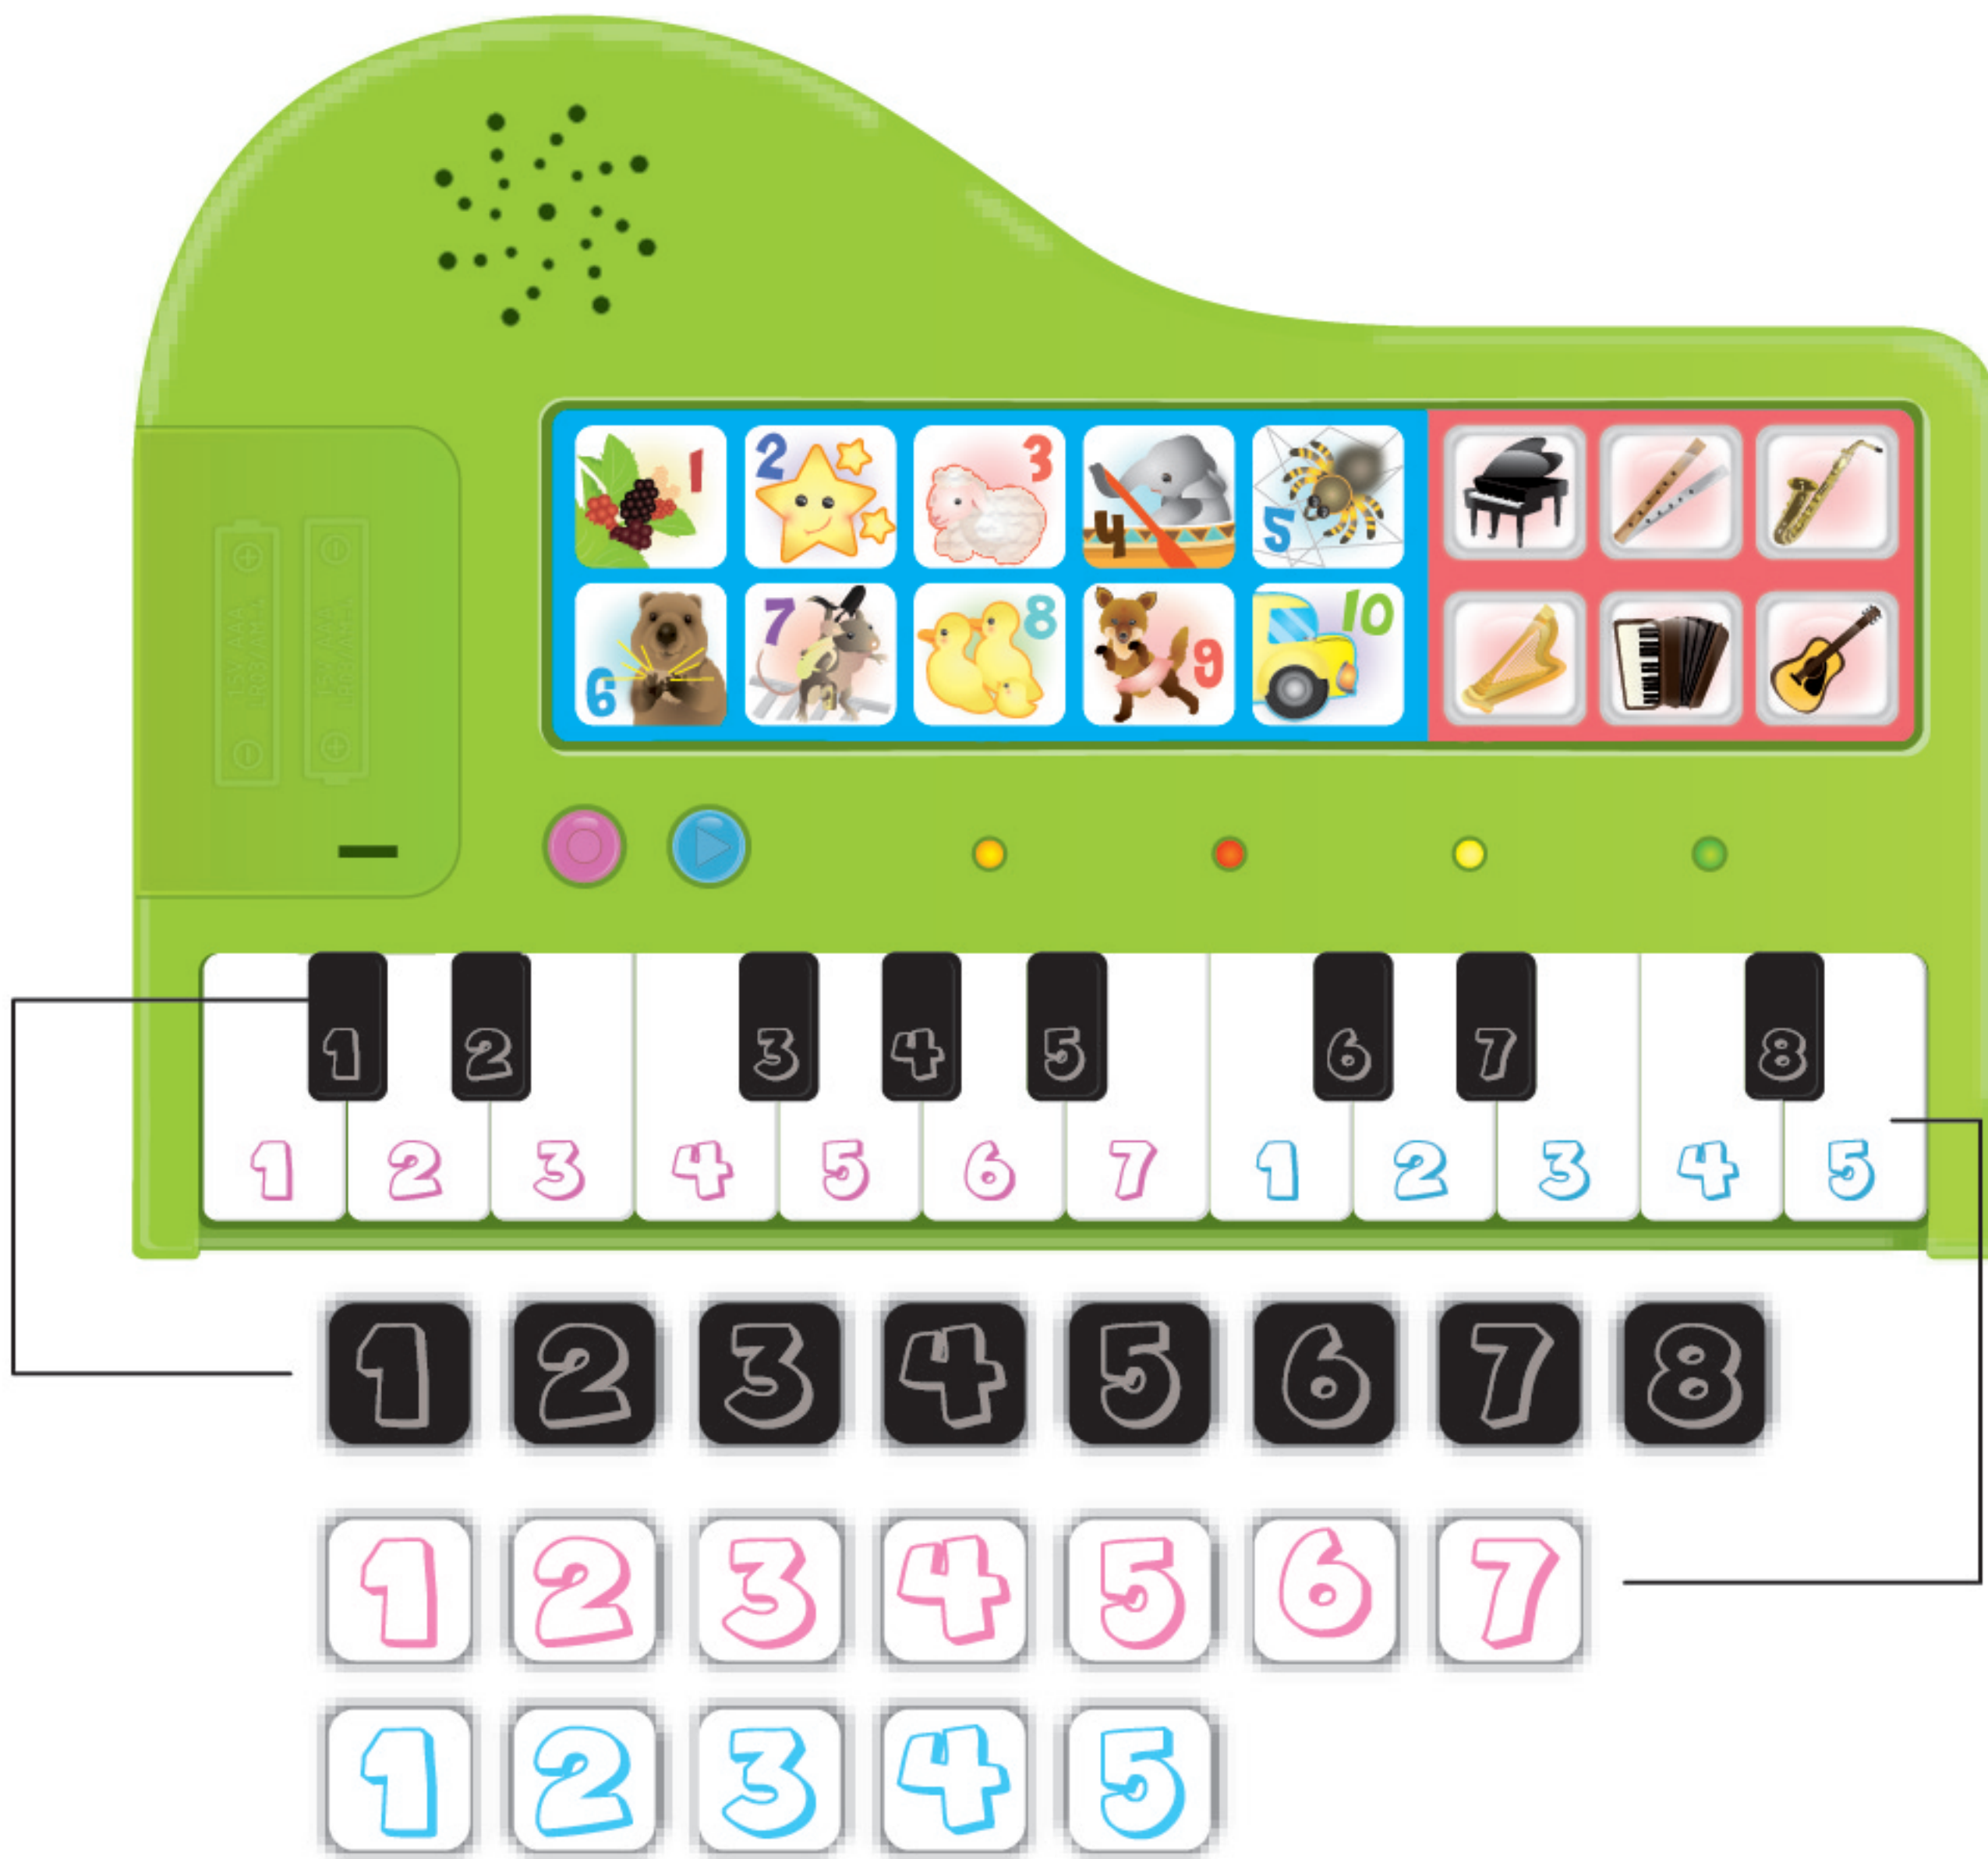

1 2 3 4 5 6 7 8

1 2 3 4 5 6 7 8

1 2 3 4 5



4 Colorful LED Lights
Flashes with the melody randomly.

Record & Playback

Allow kids to record their very own music with over 50 musical notes, and play it back!



Record Button

Press it once to start recording.



Playback Button

To listen the recording, simply press this button once.

Neat Design

Easy to be stored on the bookshelf!



CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	<ul style="list-style-type: none">● Make sure batteries are correctly installed.● Make sure battery cover is secured.● Remove batteries and put them back in.● Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth.● Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	<ul style="list-style-type: none">● Clean battery contacts per above instructions.● Install new batteries.

Item No. 9201

CONFORMS TO
CE EN71
UKCA
ASTM F963



UK
CA

