



INTRODUCTION

Book Reader: ANIMAL KINGDOM is an interactive book reader for children to learn about 12 animals through 27 book pages of detailed artwork about their appearances, footprints, diet, behaviors, habitats and more! Filled with playful melodies, friendly voices, and interesting sounds of animals and nature! Also includes a Quiz Mode with true and false questions to challenge children with lights to keep them enthusiastic and learning at the same time! (3+ years)



INCLUDED IN THIS PACKAGE

- 1 book reader
- 1 animal book (12 animals included)

ADVICE


- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

GETTING STARTED

Battery Installation

The Book Reader operates on 3 AAA (LR03) batteries:

- 1. Locate the battery cover of the unit and open it with a screwdriver.
- 2. Insert 3 AAA (LR03) batteries as illustrated.

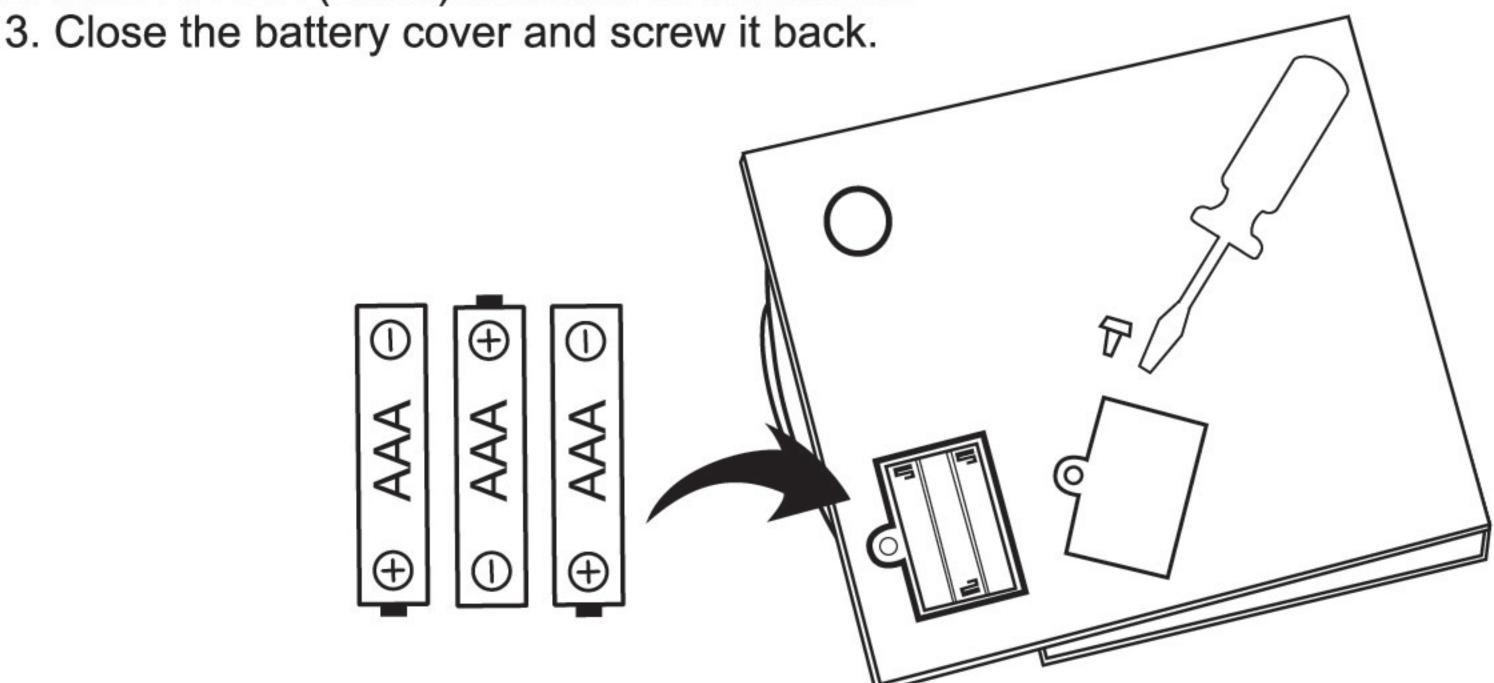

Power Switch

Switch the power from OFF to Vol.1 or Vol.2.

Start to Play

There are two play modes: (1) Reading Mode; (2) Quiz Mode.

AUTO SHUT OFF

- 1. It will enter sleep mode automatically when no action is detected after 2 mins.
- Press any buttons or use the reading palm on any page to wake it up.

12 ANIMAL CHAPTERS

With the animal book, you will learn about 12 featured animals' physical characteristics, eating habits, natural habitats, sounds and much more!

Animals included in this book:

Tiger, giant anteater, brown bear, sea otter, camel, addax, kangaroo, zebra, giraffe, leopard, penguin, and polar bear!















Tiger

Giant Anteater

Brown Bear

Sea Otter

Camel

Addax













Kangaroo

Zebra

Giraffe


Leopard

Penguin

Polar Bear

READING MODE

Just flip and press down the reading palm against the page code of the animal page. It will start reading the contents with playful melody, friendly voice and interesting sounds!

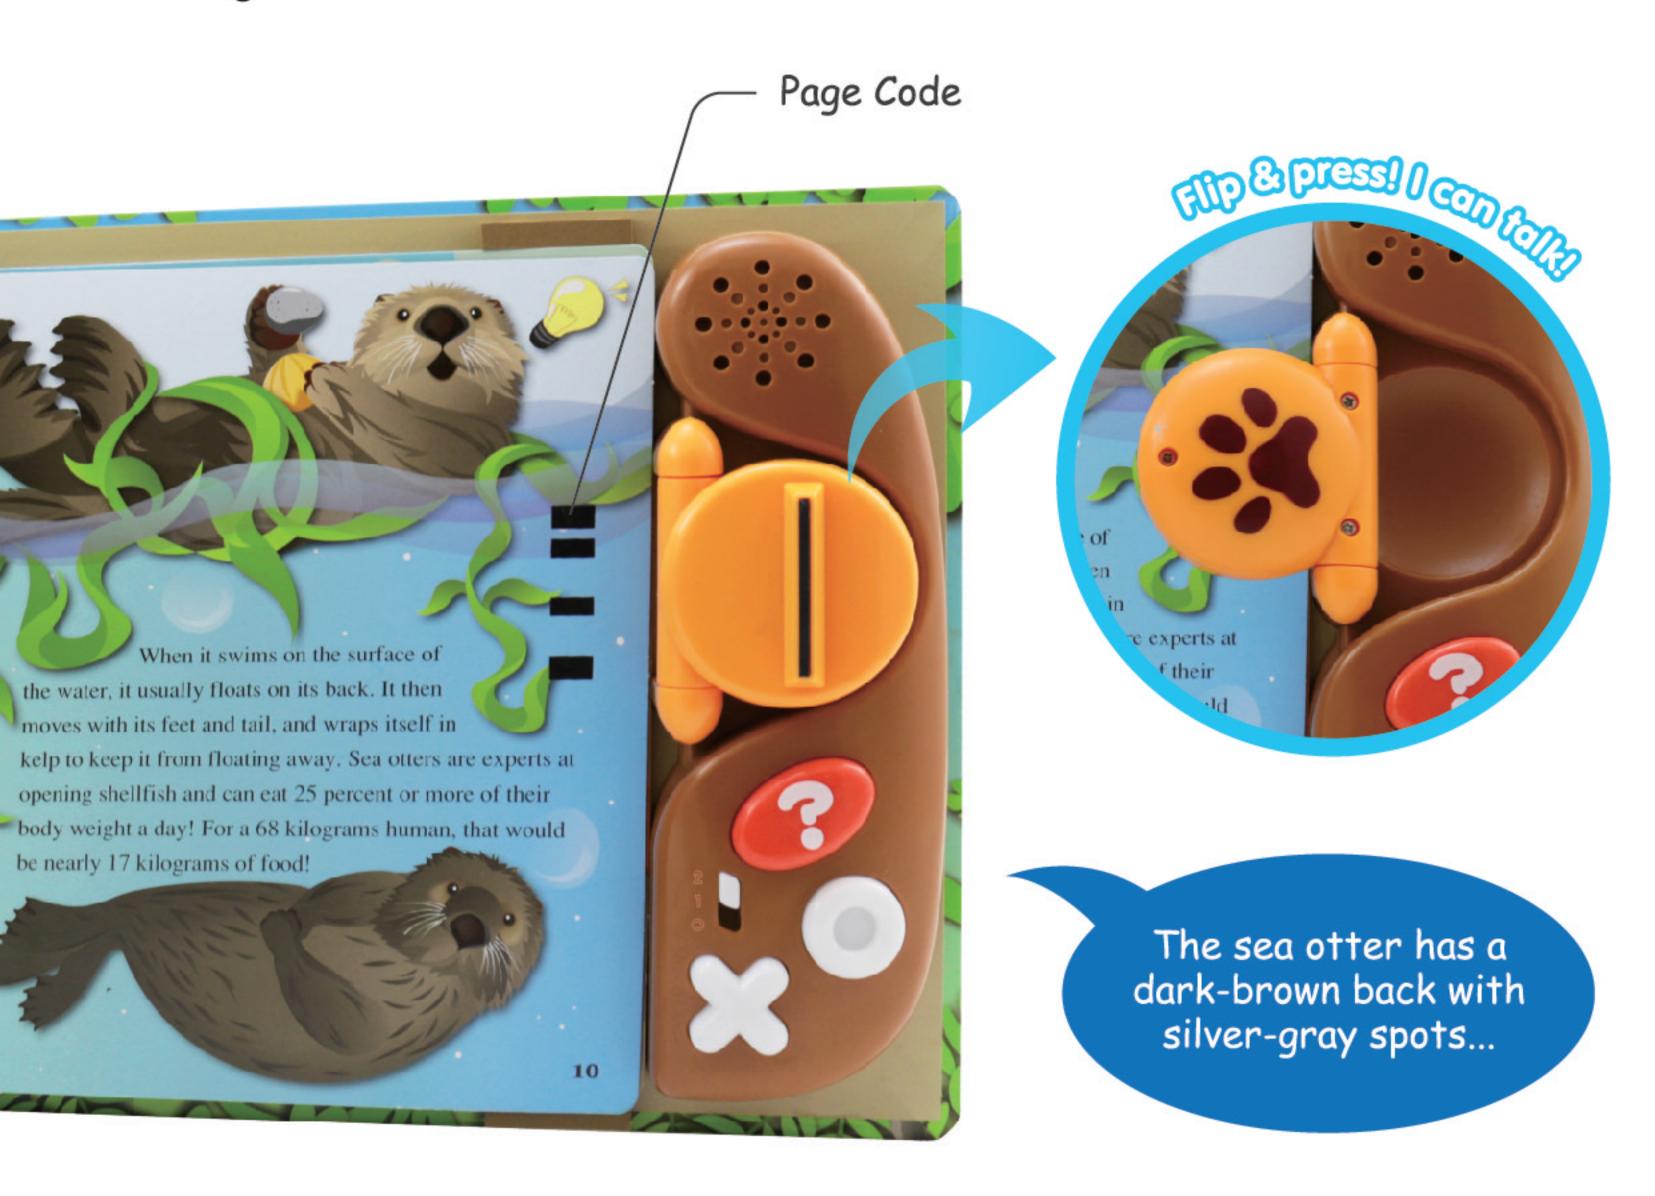




QUIZ MODE

Let's play the **True or False Game!** After selecting an animal page with the reading palm, just press the quiz button to enter the quiz mode then press the true or false button to answer the question. Give it a try!

True or False? The tiger is the smallest of feline species.

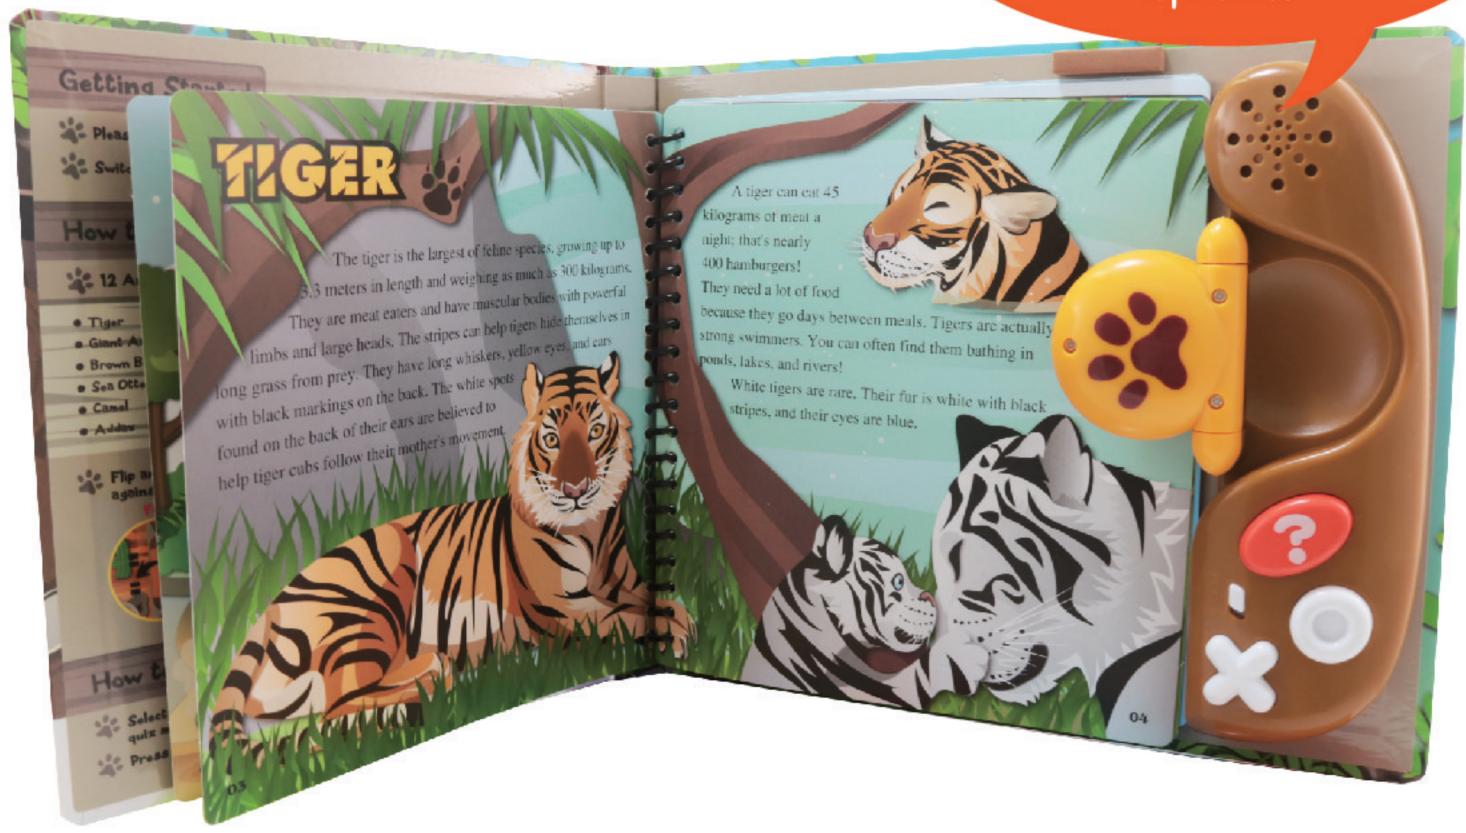



Quiz button

After selecting an animal page with the reading palm, press the quiz button to enter the quiz mode. Press it again to skip to the next question.



True button & False button

In quiz mode, press the true or false button to answer the question. If the input is incorrect, it will show the correct answer with blinking green or red light.



CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	 Make sure batteries are correctly installed. Make sure battery cover is secured. Remove batteries and put them back in. Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	 Clean battery contacts per above instructions. Install new batteries.









