



Deco Gear Mechanical RGB Gaming Keyboard DGMECHBRD

[View this product on deco-gear.com](http://deco-gear.com)

Thank you for purchasing your new Deco Gear Gaming Keyboard with RGB Lighting (DGMECHHBRD100).

This manual will review product specifications as well as using the RGB light effect functions.

Product Specifications

Features: Mechanical Keyboard with RGB effects, anti-ghost keys

Dimensions: 17.4 x 7.3 x 1.5 in.

Weight: 2.8 lbs (1.25 kg)

Cable Length: 5.9 ft (1.8 m)

Switch Life: 50 million+

Reset to Default Function: FN key + ESC + F1 + F3 + F5

FN Button Combinations

Below is a list of available functions using the FN key:

- FN+F1: Media
- FN+F2: Voice -
- FN+F3: Voice +
- FN+F4: Mute
- FN+F5: Play/Stop
- FN+F6: Play previous
- FN+F7: Play/Pause
- FN+F8: Play next
- FN+F9: Email
- FN+F10: Web home
- FN+F11: Calculator
- FN+F12: Search

- FN+Insert: backlight effect switch, includes 3 different patterns
- FN+Delete: backlight effect switch, includes 3 different patterns
- FN+Home: backlight effect switch, includes 3 different patterns
- FN+End: backlight effect switch, includes 3 different patterns
- FN+PgUp: backlight effect switch, includes 3 different patterns
- FN+PgDn: backlight effect switch, includes 3 different patterns
- FN+SPACE: backlight effect switch, SPACE shows colorful effects, other modes show single colors

1. Press SPACE again to switch RGB effect

2. If other key is pressed, corresponding color is chosen

- FN+`~: backlight effect, custom mode, FN+~. start custom, press other keys to change LED color, press FN+~ again to save effect
- FN+UP ARROW: Brightness Increase
- FN+DN ARROW: Brightness Decrease
- FN+LEFT ARROW: Switch Backlight Direction
- FN+RIGHT ARROW: Switch Backlight Direction
- FN+_-: Decrease Speed
- FN+=+: Increase Speed
- FN+WIN L: Win Lock
- FN+ESC: (F1 F3 F5): after FN+ESC, Press F1 F3 F5, reset to default



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817