



Product usage and instructions

40oz Tumbler

Instructions for use:

- Wash before using.
- Lid is top-rack dishwasher safe. Hand washing the cup is recommended to preserve its finish. Do not use harsh chemicals (such as bleach, abrasives, etc.). Use a straw brush to clean the straw. The straw and silicone vent seal and other parts can be removed for cleaning.

Warnings:

Do not microwave, freeze, or boil.

To minimize bacterial growth, do not use to store warm dairy products or baby food or other perishable liquids.

Carbonated drinks, perishable liquids and other contents may build up pressure within the cup when the slider is closed and may unexpectedly leak or spray out if the cup is knocked over or tipped on its side. When using the straw, liquid may leak if the bottle is tipped on its side or knocked over.

USE CAUTION WHEN FILLED WITH HOT LIQUIDS: When using the slider with hot liquids, pressure may build up within the cup when the slider is closed and unexpectedly leak or spray out if the cup is knocked over or tipped on its side. When using the straw, generous amounts of liquid may be suddenly drawn into the mouth from the bottom of the bottle where the temperature of hot liquids is usually higher than it is at the liquid's surface. Always use caution when using this product with hot liquids to avoid accidental injury.

Never use this product with liquids hot enough to scald.