



## PRODUCT USAGE AND INSTRUCTIONS

# 24oz TUMBLER

### INSTRUCTIONS FOR USE:

- Wash before using.
- Lid should be disassembled prior to dishwashing. To disassemble remove the slider from the lid, then remove the gasket from the slider. Lid, slider, and gaskets are top-rack dishwasher safe.
- Hand washing the cup is recommended to preserve its finish.
- Use a straw brush to clean the straw. Do not use harsh chemicals (such as bleach, abrasives, etc.).
- Visit [OwalaLife.com](https://OwalaLife.com) for additional information.

### WARNINGS:

- Do not microwave, freeze, or boil.
- In order to minimize bacterial growth, do not use to store warm dairy products or baby food or other perishable liquids.
- Carbonated drinks, perishable liquids and other contents may build up pressure within the cup when the slider is closed, and may unexpectedly leak or spray out if the cup is knocked over or tipped on its side.
- When using the straw, liquid may leak if the bottle is tipped on its side or knocked over.
- **USE CAUTION WHEN FILLED WITH HOT LIQUIDS:** When using the slider with hot liquids, pressure may build up within the cup when the slider is closed and unexpectedly leak or spray out if the cup is knocked over or tipped on its side.
- When using the straw, generous amounts of liquid may be suddenly drawn into the mouth from the bottom of the bottle where the temperature of hot liquids is usually higher than it is at the liquid's surface.
- Always use caution when using this product with hot liquids to avoid accidental injury.
- Never use this product with liquids hot enough to scald.