



Time indication	NH35	NH36	NH37	NH38	NH39
3Hands (hour, minute, second)	0	0	0	0	0
Date calendar	0	0	0	-	1
Day calendar	-	0	-	-	-
24hour indicator	-	-	0	-	0

## 1. How to set the time

- 1) Pull out the crown to the second click position. ...Cal.NH35 & NH36 & NH37 Pull out the crown to the first click position. ...Cal.NH38 & NH39
- 2) Turn the crown to set hour and minute hands.

(Check that AM / PM is set correctly.)

3) Push the crown back into the normal position.

## 2.How to set the Date ... Cal.NH35 & NH36 & NH37

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting. ... Cal.NH36 only

\*Do not set the date between 9:00 P.M. and 4:00 A.M. as this will cause a malfunction.

3) Push the crown back into the normal position.

## 3.To wind up the mainspring

a) Manual winding ... Rotate the crown clockwise at normal position.

Wind turning the ratchet wheel screw 8 times. It will start to move naturally after shaking slightly.

b) To wind up with winding machine.

Full wind up conditions
•Rotary speed: 30 rpm
•Operating time: 60 minutes