


M-120 Tete-a-Tete Swing Assembly Instructions

NOTE: Please check contents and read directions carefully before assembly. If any items are missing or damaged, *do not take the product back to the store. Call Moon Valley customer service at 313-766-4950 and we will correct the problem as promptly and as efficiently as possible.* Also, checking or cracking of the logs is a *natural* part of the drying aspect of cedar. *This does not affect the structural integrity of the wood.* This natural occurrence enhances the rustic beauty of the product.

Tete-a-Tete Swing Components

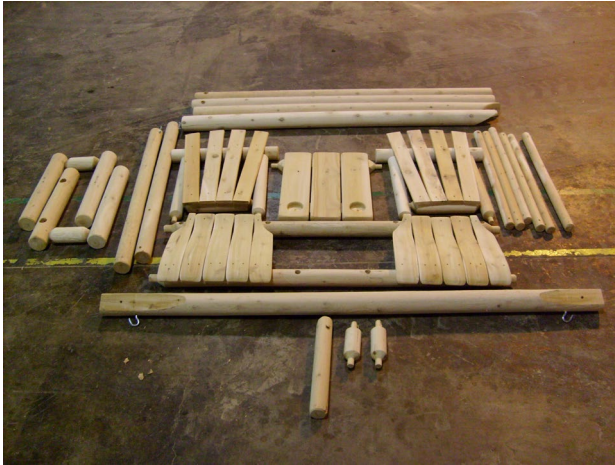

- (1) Pre-Assembled Seat Bottom
- (2) Pre-Assembled Seat Backs
- (4) Swing Legs
- (1) Swing Frame Top Pole (w/ attached hooks)
- (6) 35" Braces
- (2) Swing Arm Assemblies
- (2) Swing Hangers
- (2) 9" Dowels
- (1) Pre-Assembled Table Top
- (1) 18" Table Brace
- (3) 3 1/2" Lag Bolts
- (4) 5" Lag Bolts

- (1) 2 1/2" Lag Bolt
- (12) 4" Lag Bolts
- (2) 7 1/2 x 5/16" Machine Bolts
- (8) 5/16" Washers
- (2) 5/16" Nuts
- (14) 2" Screw
- (16) 1/4" Washers
- (1) Square-Head Bit

Tools Needed: Rubber Mallet or Hammer, 1/2" Socket and Socket Wrench, Drill or Screwdriver



1. Lay pre-assembled seat bottom onto flat surface. Insert pre-assembled seat back into pre-drilled holes. *Note: Each seat back has a pre-drilled hole on one side. Be sure these holes face inward on both seats.*





2. Insert pre-assembled table top into hole on each side of seat back (as shown). Next, repeat Step 1 for the remaining seat. Be sure that the table top is inserted into both seat backs before securing them to seat bottom. Use 2" screws at both insertion points to attach seat back to seat bottom (as shown).



3. Attach angled end of table brace to bottom of table top brace, and be sure to center the brace as much as possible. Use 2 1/2" lag bolt to secure (as shown).

4. Insert 9" dowels into pre-drilled holes in seat bottom. Fold table down and insert braces into pre-drilled holes in table top underlay. Use 2" screws to secure both ends to the table top brace to seat bottom (as shown). *Note: Be sure table brace from Step 3 rests on top of seat bottom when folding table down (see step 5 for visual).*



5. Use 3 3/8" lag bolt to secure angle brace to seat bottom. Use a 5/16" washer when inserting this lag bolt.



6. Attach both swing arm assemblies to swing seat. Align the two doweled ends of swing seat with the two holes in the swing arm assembly. Tap arms into place using rubber mallet or hammer. If using a hammer, be sure to pad impact area to avoid damage to the product.



7. Find a comfortable angle for the seat back, use 3 3/8" lag bolts to secure the arms to the seat backs (as shown). Next, use 2" screws to secure all doweled insertion points. Use a 5/16" washer when inserting each of these lag bolts.



8. Attach swing hangers to arm assemblies using 5" lag bolts. Align pre-drilled holes on swing hanger with pre-drilled holes on swing arm assemblies (both upper and lower arms).



9. Lay swing legs and top pole on ground, with swing hooks facing downward. Using pre-drilled holes, install 7 ½” machine bolts through legs and top pole, using a 5/16” washer at each end of the bolt. *Tighten only with fingers at this point.*



10. From machine bolt, measure 32” down swing leg. At this location, use 4” lag bolts to secure two of the 35” braces to swing legs. Use a ¼” washer when inserting each lag bolt.



11. Stand frame upright and tighten 7 ½” machine bolts *only enough* to allow frame to stand freely. Measure 24” down from top of swing leg, and 24” in from end of top pole. At these points, use 4” lag bolts to secure the 24” braces to the swing (as shown in these two photos). Use ¼” washers on each lag bolt. Now, tighten 7 ½” machine bolts firmly.



9. Make certain that swing hooks (on top pole) open outward (these should be checked periodically for looseness or wear). Hang swing seat onto these hooks and assembly is complete. ***Note: if you have extra hardware left over after assembly, these may be a problem and your swing may not be safe to use. Double-check directions to ensure that all hardware is installed correctly and tightened. If the problem persists, please call Moon Valley customer service at 313-766-4950.***

Thank you for your Moon Valley purchase and we hope that you enjoy your Tete-a-Tete Swing. To view other Moon Valley products, please contact your local dealer or visit us at www.moonvalleyrustics.com.



Moon Valley Rustics 4658 South Custer Rd., Monroe, MI 48161
Phone Number: (313) 766-4950
www.moonvalleyrustics.com