

HANDING GUIDE

Here is a guide on how to choose the side of which your internal steel doors should be hinged.

BEFORE YOU ORDER YOU NEED TO CHOOSE WHICH SIDE YOU WANT YOUR DOOR HINGES ON

Take position just outside the room which you want your door to open into so the steel door opens AWAY from you.

Choose your hinge side

Face the door so that the new door opens away from you, into the room you are facing.

Based on the images on the right determine the correct handing is based on the side of the door the hinges are.

Example:

If you have a living room door that will open into the living room, stand in the hallway facing the living room door. The door should always open away from you.

The handing is the side the hinges are on as marked in the images to the right.



