



ODOR ELIMINATING EGG

USER MANUAL USER MANUAL USER MANUAL USER MANUAL USER MANUAL

On/off button

Turn the device on:

Press and hold the button for two seconds to turn the device on. This is **standard mode**.

Turn on extra-power mode:

Press the button again.

Switch modes:

Pressing the button once will switch the device's state (standard <-> extra-power).

Turn the device off:

Switch the device to standard mode (green light) and hold the button for two seconds.




Indicator light

Standard mode: Flashing green light
Can last up to 2 weeks with one charge



Extra-power mode: Flashing blue light
Can last up to 1 week with one charge

Low battery: Flashing red light
Charging: Constant red light

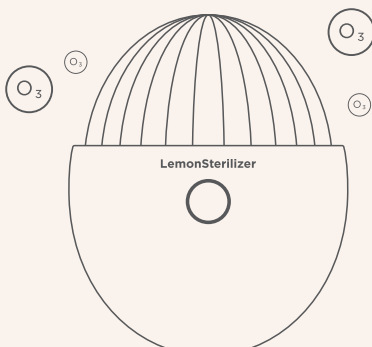

MAINTENANCE AND CLEANING

Avoid contact with water.

Do not place anything on top of the device.

Do not insert anything into any of the device's openings.

Before cleaning, be sure to turn off and unplug the device.

Do not submerge the device in water.

Still have questions?
E-mail us at support@multitasky.com!

 **multitasky**