

# THE LEVORY

## LIGHTER

### INSTRUCTION MANUAL

#### WARNING

KEEP OUT OF REACH OF CHILDREN. RISK OF SHOCKING AND BURNING.

This product can be used for lighting candles, stoves, incense, barbecues etc.

#### HOW TO USE

Push the protective cover upward to uncover the power switch - two poles will emerge.

Press the power switch - a high-temperature electric arc will appear.

Hold the lighter up to the combustible material to ignite.

After use - push the protective cover downward to cover the power switch entirely.

#### WARNING

There is a risk of burns and/or electric shock.


Do not touch the lighter's electric arc area.

Always clean off any remaining soot, ash and debris.

#### NOTE

A quiet buzzing sound can be heard during ignition. This is normal and safe.

The lighter will automatically shut off after 7 seconds of use.

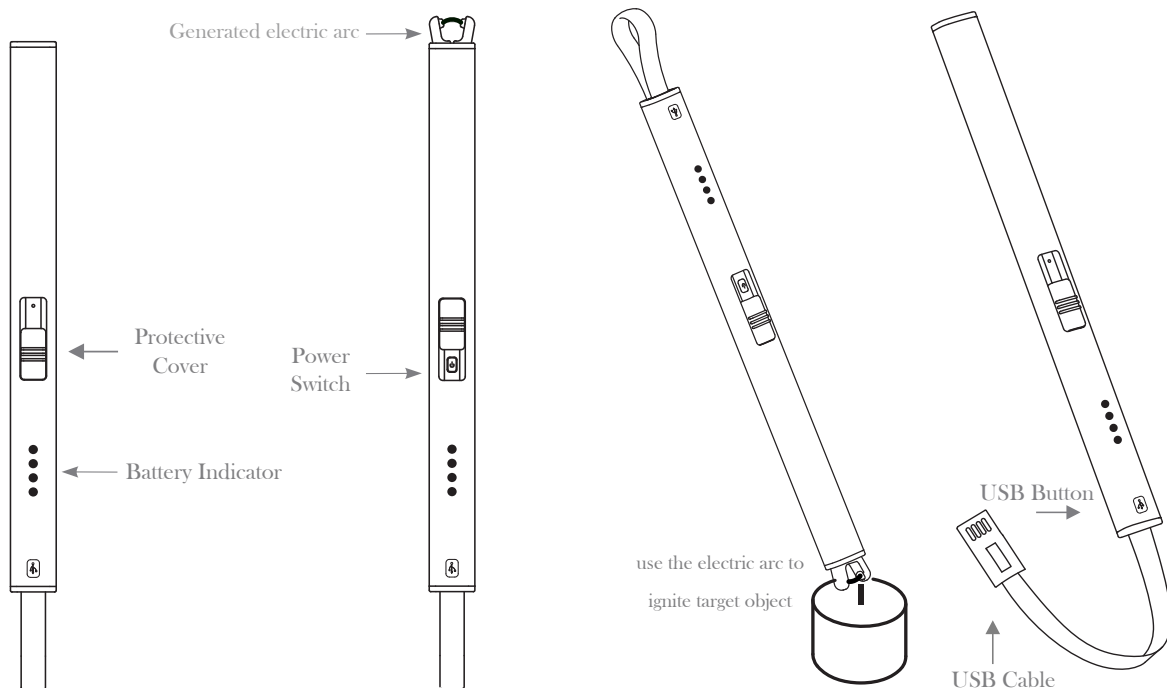

## CHARGING

The lighter needs to be recharges if the bottom blue indicator light begins to flash during use.

1. Press the  button and pull out USB cable; insert USB cable into computer port, cell phone charger or any other compatible charger with a voltage output of 5V (+/-0,5V).

### 2. During charging

The battery indicator lights will be turned on one by one.

#### When fully charged

All of the lights will light up until the charger is removed.

There will be four lights total, each one representing 25% - 100% indicating charge completion.

### 3. Completed charging

Unplug the USB cable from the charger and put it back into its casing on the bottom of the lighter.

Never leave the lighter plugged in for extended periods of time, as this will shorten the battery life.

Do not tear or twist the USB cable.

## ATTENTION

Allow 1 to 2 hours for a full charge.

(To prevent battery damage through deep discharge and maintain 100% battery capacity, the lighter should be charged every 6 months, if it is not recharged regularly)

---

## WARNING

This electronic device is not a toy. Keep out of the reach of children and pets.

### **DANGER: EXTREMELY FLAMMABLE.**

- Never expose to temperatures above 49°C (120°F) or extremely low temperatures.
- Do not touch the electric arc.

### **RISK OF SHOCKING AND BURNING.**

- Do not allow electric arc to come in contact with other people, animals or objects that are not intended to be burned.
  - Keep away from skin, clothing and any other combustible materials.
  - Never puncture or expose to fire.
  - Keep dry. Keep away from water and areas of high humidity.
- Once ignition is achieved, release the power switch and remove the lighter from the open fire.
  - Do not continue to expose the lighter to open fire source.
  - Ensure the flame is not left unsupervised and that it is extinguished after use.
  - Incorrect usage can cause explosions.
- Only have this product opened or serviced by an authorized service technician.
- Do not disassemble the lighter. Damaged batteries can cause chemical burns on skin.
  - Discontinue use if the lighter is damaged.
- Never bring the lighter to security sensitive places like airports, concerts etc. (security control could misinterpret it as a taser; No liability can be accepted for seized items and/or any legal action or personal damage or injury)
  - Please follow regional recycling regulations when disposing of the lighter.

Battery  
Lithium Polymer      Capacity  
DC 3,7V, 180 mAh, 0,67Wh

© All rights reserved. Copies of this manual may only be made with FAVORITY's authorization.

