

Branick®

Spreaders

Passenger & Light Truck



Specifications

	5025	5035	5045	5120
Maximum Bead Diameter	20"	20"	20"	22.5"
Maximum Tire X-Section	12" / 305 mm	13.5" / 343 mm	13.5" / 343 mm	14" / 356 mm
Spread Arm Type	Manual	Manual	Gas Spring Assist	Air Powered
Spread Arm Operation	Hand	Hand	Hand	Foot
Working Height	35"	36.25"	36.25"	36"
Light	No	LED	LED	LED
Roller	No	No	Yes	Yes
Hook Adjustment	Sawtooth	Sawtooth	Sawtooth	Spring Locking Pin
Tool Tray	No	No	No	Yes
Shipping Weight	30	78	80	150
Dimensions	10 W x 10 D x 36 L	22 W X 15 D X 45 L	22 W X 15 D X 45 L	29 W X 27 D X 40 L


Optional Storage Cabinet (available on 5035 & 5045)

Keep your repair and inspection tools where you need them, at the spreader. Our optional storage cabinet attaches directly to either side of the spreader so you won't waste time searching for supplies. Steel construction to take the punishment of a shop environment.



Optional Riser Platform (available on 5035 & 5045)

If you need a little extra height for an ergonomic position, the optional riser platform will do the trick. The platform's 3" lift brings the working surface to 39.25". Bolts directly to the base of the spreader and includes pre-drilled holes for floor mounting.

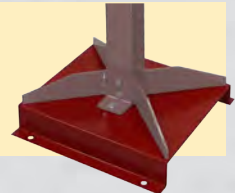

Optional Model 502 Base (available on 5025)

The Model 502 base gives the 5025 the stability to work without bolting to the floor, allowing the spreader to be moved wherever it's needed. Easy four bolt installation.

