



MODEL CH-5, CH-5AL

REPAIR PARTS

No.	Description	Part No.	No.	Description	Part No.
1.	Airtank	N/A	8.	90° NPT	03.104
2.	Pipe Nipple	01.104	9.	Safety Release Valve	05.102
3.*	Discharge Valve (Includes Handle)	02.102	10.	Handle & Nut Only	01.230
4.	Lock Nut	02.107	11.	Ball Valve	04.103
5.	Threaded Barrel	02.103	12.	Rubber Feet	12607
6.	200 PSI Gauge	01.106			
7.	3/4" - 1/4" Bushing	01.107			

Reminder: Always exercise caution when using compressed air.

PCL Connector is NOT INCLUDED must be purchased separately.

Order parts from your distributor or jobber.
When ordering parts always give the following information: Part number, description and serial number of your machine.

