



**MODEL BS-07**

## REPAIR PARTS

No.	Description	Part No.	No.	Description	Part No.
1.	Airtank	N/A	8.	Handle & Nut Only	01.230
2.	Safety Release Valve	05.102	9.	6" Pipe Nipple	02.104
3.	3/4" - 1/4" Bushing	01.107	10.	Pressure Gauge	01.106
4.	Ball Valve	04.103	11.	Rubber Feet	12607
5.	Flared Barrel	6813			
6.	Lock Nut	03.107			
7.	Discharge Valve (Includes Handle)	03.102			

**Order parts from your distributor or jobber.**

When ordering parts always give the following information: Part number, description and serial number of your machine.

**Reminder:** Always exercise caution when using compressed air.

**PCL Connector is NOT INCLUDED** must be purchased separately.