



MiroPure


HAIR STRAIGHTENER S102

USER MANUAL

I Love Me

www.miropure.com/warranty

facebook.com/miropureonline

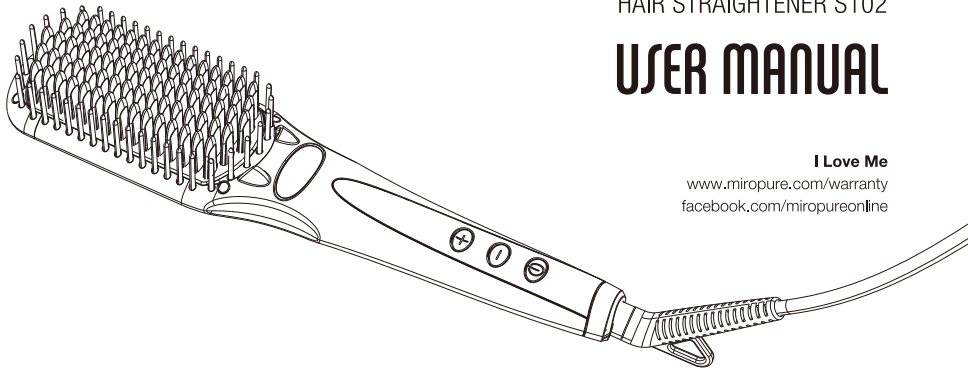

ACTIVATE YOUR 12 MONTH WARRANTY & EXCLUSIVE GIFT

Register within 2 weeks after receiving your new product.

PLEASE VISIT NOW

→ www.miropure.co/warranty

CUSTOMER SERVICE

✉ support@miropure.co **f** @miropureonline



NOTE

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.

A Big Thank You

We're thrilled that you have chosen to purchase the Hair Straightener Brush. At MiroPure, we're committed to providing you with products that enhance your daily life.

We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-449-9888, or by email at support@miropure.co.

MIROPURE 2 IN 1 MCH HEATING IONIC HAIR STRAIGHTENER BRUSH USER MANUAL

Thank you for purchasing our Hair Straightener brush please read the instructions carefully before use. retain the manual in a safe place for future reference or pass the manual onto any subsequent users.

About Ionic Technology:

The built-in ionic generator emits negative ions- negatively-charged atoms and molecules that can interact with the molecular particles in your hair they seal the hair cuticle reducing frizziness, split ends knotting and increasing hair manageability leaving hair silky and lustrous!

⚠ SAFETY WARNINGS:

- Read all of the instructions carefully before use.
- This appliance can be used by juniors aged from 15 years and above and persons lack of experience and knowledge if they have been given supervision or instruction concerning the safety use of the appliance and understand the hazards involved Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 15 years and supervised.

- Keep away from water.
- Unplug the device immediately after use in order to reduce the risk of death in case of an electrical shock.
- Do not put the device in a place where it can slide into a sink or a bath or do not keep the device in such a place.
- Do not use it while you are taking a shower.
- Do not immerse or drop it into water or other liquid. If an appliance falls into water, unplug immediately.
- Never leave the hair straightener device without observation in order to reduce the risk of burn electrical shock fire or damage.
- Close observation is required in case of usage of any electrical devices by a child or a handicapped person Do not let children to play with hair straightener device.
- If the cable or the plug of the hair straightener is damaged not working properly or dropped into water, never use it. If this hair straightener cable or plug is damaged it must be changed by the manufacturer the service agent or similarly qualified persons in order to avoid a hazard.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the electricity cable away from hot surfaces.
- Never operate this appliance if it has a damaged cord or plug. If it is not working properly or if it has been dropped or damaged, or dropped into water, return the appliance to a service center for examination and repair.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- Do not use on sleeping persons.
- Do not use on pets.
- Do not use in open areas, the places where sprays are used or oxygen is given.
- The brush heater can get extremely hot during usage. Do not touch the hot area with exposed skin.
- Only use this appliance on dry, natural hair without any flammable hair products put on.
- This appliance is not suitable for artificial hair.
- This appliance is not intended for commercial or salon use.

POWER CORD SAFETY TIPS:

- ❶ Never pull or yank the cord or the appliance do not use an extension cord with this appliance
- ❷ Insert plug grasp it firmly and guide it into outlet
- ❸ Disconnect appliance grasp plug and remove it from outlet
- ❹ Before each use inspect the power cord for cuts and/ or abrasion marks. if any are found this indicates that the appliance should be serviced and the line cord replaced
- ❺ Never wrap the cord tightly around the appliance as this could place undue stress on the cord where it enters the appliance and cause it to fray and break
- ❻ DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

APPEARANCE AND INFORMATION: MIROPURE 2 IN 1 LONIC HAIR STRAIGHTENER BRUSH

- LED Display(16 Levels)
- Temperature Adjusting/MCH Heater ON/OFF Button
- 360 Degree free Rotatable power Cord
- Nanometer comb tooth
- Built-in heater
- Brush handle
- To Lock the temperature, please hold down two temperature adjusting button t-at the same time for three seconds

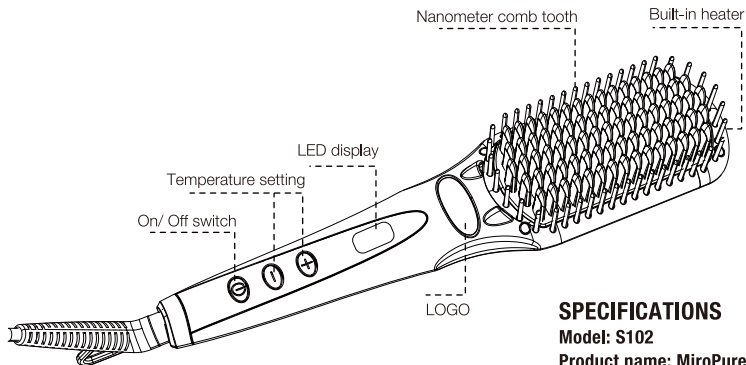

SPECIFICATIONS

Model: S102

Product name: MiroPure Hair Straightener Brush

Model	S102	Product	Hair Straightener Brush
Heater	MCH	Indicate	Digital
Rate Power	50W	Net Weight	EU/US Plug 410g; UK Plug 430g
Rate Frequency	50/60Hz	Dimension	27*6.2*3.5cm
Rate Voltage	120V for US Plug, 100V-240V for EU/UK Plug		

OPERATION INSTRUCTIONS:

Please use it on dry hair.

Step 1: Insert power plug into a wall socket. Press the power button the led light will on and the heater begins to warm up. Press + - button to adjusting temperature according to your fair types.

Step 2: Press + - button to choose different temperature settings according to different fair types. The sixteen different temperature settings available are: 170°F~450°F or 80℃~230℃. To lock the temperature please old down two temperature adjusting button + - at the same time for three seconds.

Step 3: When the brush is heating up, the temperature setting LED light will keep flashing until the set emperature is reached. Once the temperature setting LED light stays on, the brush is ready to use for hair straightening Please hold the brush handle and keep a safe distance from exposed skin and eyes.

Step 4: For felting curly hair or other hard to straighten hair, set the temperature to 230 °C (450°F), For tinted & permed hair or fine blond hair, set to 150 °C 170 °C (300°F~340°F), other ordinary hair, set to 170 °C ~190 °C (340°F~380°F).

Step 5: Hold certain parts of your hair with clips(thickness less than 100MM)from top, middle, back, front and sides in order to make hair styling operation easier.

Step 6: First straightening the lower layers of your hair and then pass to upper layers Take a small part of our hair, disperse it in the middle of the brush and pull tight. Hold the hair straightener in one of your hands and comb your hair starting from the root to the ends in 15 seconds with no stopping. Do not stop for 10 seconds at the same place. Make sure that you are holding the hair straightener from its holder and cold holding places. Repeat this operation until your hair is straightened as much as you want.

Step 7: Once the hair straightening is complete, Press power button and holds it for seconds to power off,unplug it and cool it down before storage.

Note: Please do not comb the hair before it gets cold or the hairstyle can be affected.

AUTOMATIC SECURITY TURNING OFF FUNCTION:

Your hair straightener has an automatic turning off feature for your security. the hair straightener turns off after a usage of 60 minutes. If you want to use it again, you can press the power button to turn on the appliance.

TEMPERATURE SETTING:

The default operating temperature setting is 350°F(180°C). You can short press the temperature adjusting button to adjust the operating temperature. once the temperature is set, the temperature led setting light will start flashing. It will stop flashing and stay on when the set temperature is reached To Lock the emperature, please hold down two temperature adjusting button + - at the same time for three seconds.

WORKING TEMPERATURE ADVICES:

Level 1, around 150°C (300°F), suitable for first time user or user with thin and fine hair, or bleached hair.

Level 2, around 170°C (340°F), suitable for dyed or dark color hair.

Level 3 & Level 4, around 190°C (380°F)to 210°C (410°F), suitable for normal or slightly curled hair.

Level 5, around 230°C (450°F), suitable for thick and very curly hair, or difficult to style hair.

⚠ ATTENTION:

Your hair straightener has an automatic turning off feature for your security. the hair straightener turns off after a usage of 60 minutes. If you want to use it again, you can press the power button to turn on the appliance.

- For the first time usage of the appliance, occasionally there may be a slight burning smell or very light smoke, which is caused by the slight residual oil on the mch heater metal parts burning off when heated It is normal and safe to use. It may only last for a few seconds
- It is important to set the appropriate working temperature for your hair before usage in order to prevent your hair to get damaged.
- When the mch heater is on, the brush can get extremely hot make sure you are keeping it away from eyes nose hands neck and facial areas

MAINTENANCE AND CLEANING:

- Unplug the appliance and allow to cool
- Wipe all the surfaces with a damp cloth
- Do not use harsh or abrasive cleaning agents or solvents
- Store the appliance in dry and cool place

SERVICE AND GUARANTEE:

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded your statutory rights are not affected.

Warranty date: 365 days

ENVIRONMENTAL PROTECTION:



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods appliances marked with this symbol must not be disposed of with unsorted municipal waste but recovered, reused or recycled.

This device complies with Part 15 of the FCC Rules.

ACTIVATE YOUR 12 MONTH WARRANTY & GET EXCLUSIVE GIFT

Register within 2 weeks after receiving your new product.

PLEASE VISIT NOW

→ www.miropure.co/warranty

CUSTOMER SERVICE



support@miropure.co



@miropureonline



NOTE

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.



MiroPure

✉ support@miropure.co

👉 www.miropure.co

☎ 1-855-449-9888 (Mon - Fri 9:00 AM - 5:00 PM EST)



Made in China