


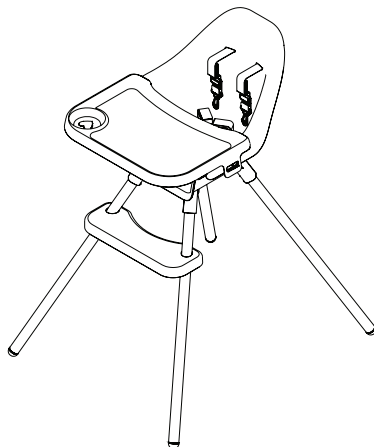

Baby Basics™ High Chair

Model / Modèle / Modelo: 3600



- READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF HIGH CHAIR. KEEP INSTRUCTIONS FOR FUTURE USE.
- LIRE TOUTES LES INSTRUCTIONS AVANT D'ASSEMBLER ET D'UTILISER CHAISE HAUTE. CONSERVER CES INSTRUCTIONS POUR UNE UTILISATION ULTÉRIEURE.
- LEA TODAS LAS INSTRUCCIONES ANTES DE MONTAR Y USAR SILLA. GUÁRDENLAS PARA UTILIZARLAS COMO REFERENCIA.

 www.regalo-baby.com

 Regalo International, LLC.
3200 Corporate Center Drive, Suite 100 / Burnsville, MN 55306, USA / , É.-U. / , EE. UU.


 866.272.5274 (U.S. only / aux États-Unis seulement / solo en EE. UU.) or / ou / o 952.435.1080

Made in Vietnam / Fabriqué en Vietnam / Hecha en Vietnam


Before Assembly

English


A

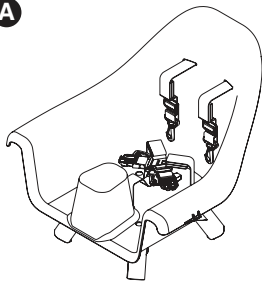


B

 

C

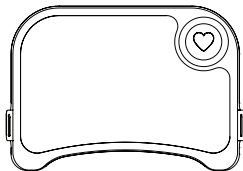

D

 

PLEASE CHECK TO MAKE SURE YOU HAVE THE FOLLOWING PARTS:

A Chair (1)

C Tray (1)

B Legs (4)

D Footrest (1)

BEFORE USING PRODUCT

Read and follow all instructions carefully to ensure that your product is properly installed. Failure to follow these instructions for the assembly or use of your Portable High Chair could result in serious injury or death. The safety of your child is your responsibility. Please keep these instructions for your reference.

CARE AND MAINTENANCE


Periodically check the Portable High Chair for sign of damage, wear or for missing components. Do not use if any part is missing, worn or damaged. Always dry metal parts to avoid the formation of rust.

90 DAYS LIMITED WARRANTY

If, during the first 90 days after consumer purchase of the item, under reasonable and non-commercial use and conditions of maintenance, it fails while owned by the original purchaser because of the quality of materials or workmanship of finish and assembly, Regalo International, LLC, will replace or repair it at Regalo's option. PROOF OF PURCHASE REQUIRED.


Assembling Your High Chair

STEP 1

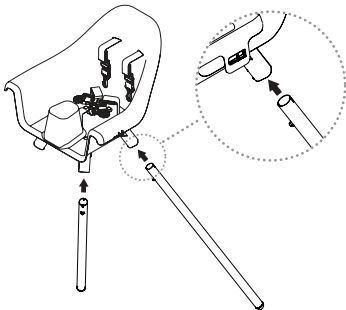

Insert legs into bottom rear base of chair.


STEP 2

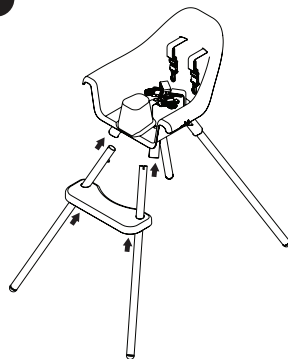

Insert legs into footrest, then into the front base of chair.


NOTE: Do not use without all 4 legs securely attached.

STEP 3

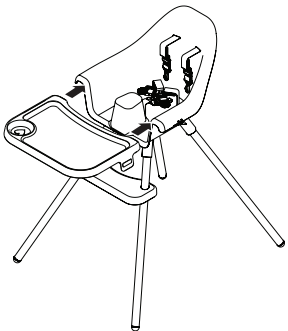

Slide tray into seat base arms until tray tabs and under hooks lock in place.

STEP 4

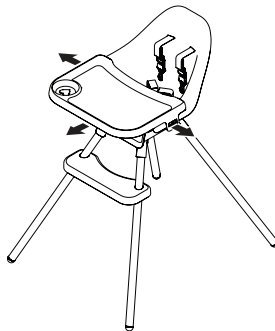

To remove tray, lift up on tray tabs and slide out.

WARNING

FALL HAZARD: CHILDREN HAVE SUFFERED SEVERE HEAD INJURIES INCLUDING SKULL FRACTURES WHEN FALLING FROM HIGH CHAIRS. FALLS CAN HAPPEN SUDDENLY IF CHILD IS NOT RESTRAINED PROPERLY. • FOR USE WITH CHILDREN 6 – 36 MONTHS OR UP TO 45 LBS. • TO PREVENT SERIOUS INJURY OR DEATH FROM SLIDING OUT, FALLS, OR TIPPING OVER, READ ALL INSTRUCTIONS AND LABELS BEFORE USING HIGH CHAIR. • ALWAYS USE RESTRAINTS, AND ADJUST TO FIT SNUGLY. • THE CHILD SHOULD BE SECURED IN THE HIGH CHAIR AT ALL TIMES BY THE RESTRAINING SYSTEM. • THE TRAY IS NOT DESIGNED TO HOLD CHILD IN CHAIR. • STAY NEAR AND WATCH CHILD DURING USE. • ALWAYS USE THREE-POINT SAFETY BELT WHEN CHILD IS IN HIGH CHAIR. • NEVER LEAVE CHILD UNATTENDED. • NEVER ALLOW CHILD TO PUSH AWAY FROM TABLE. • DISCONTINUE USE IF HIGH CHAIR IS BROKEN. CONTACT THE MANUFACTURE IMMEDIATELY FOR REPLACEMENT PARTS OR SERVICE. • IT IS RECOMMENDED THAT THE HIGH CHAIR BE USED ONLY BY CHILDREN CAPABLE OF SITTING UPRIGHT UNASSISTED. • DO NOT USE THIS HIGH CHAIR UNLESS ALL LEGS OF THE HIGH CHAIR ARE SECURELY ON THE FLOOR. • MAKE SURE FULLY ASSEMBLED WITH ALL LEGS ATTACHED. • DO NOT HANG OBJECTS FROM THE HIGH CHAIR. • INSPECT HIGH CHAIR BEFORE USE DO NOT USE IF HIGH CHAIR IS ANY PART IS BROKEN, TORN OR MISSING.