

regalo[®]

3pk
Multi-Purpose
Latch
6132 W



Feature

- Simple to use latch, can be applied to variety of household items.
- Keeps items closed & secure. Such as: toilets, cabinets & small household appliances.

Installation

Step 1: Find best location to install.





Step 2: Wipe and dry surface clean before installation. Peel backing paper.

Step 3: Press firmly onto surface. Wait 24 hours, but could take up to 72 hours to allow adhesive to fully adhere.

Step 4: To open, lift button cover and unhook strap.

Step 5: To close, hook strap onto button catch and close button cover.

Care & Maintenance: Make sure device is securely attached and kept clean using a damp cloth. When device is no longer in use, remove by peeling it away from item and keep out of reach from children.

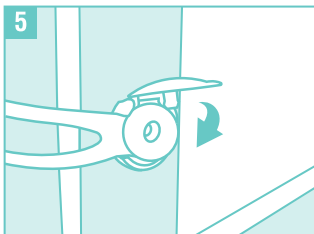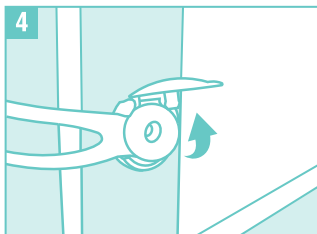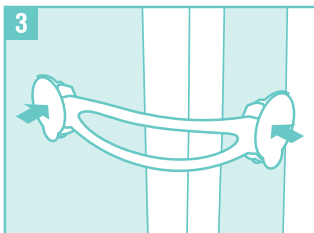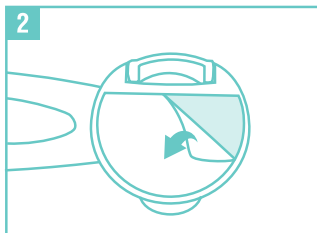

! WARNING

FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN DEATH OR SERIOUS INJURY. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT IS ONLY TO BE USED WITH WOOD CABINET DOORS AND DRAWERS. READ THESE WARNINGS AND THE INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND USING THIS DEVICE. • ADULT INSTALLATION REQUIRED. KEEP SMALL PARTS AWAY FROM CHILDREN DURING INSTALLATION. • PROPERLY STORE ANY EXTRA OR UNUSED COMPONENTS OUT OF REACH OF CHILDREN. • THIS DEVICE IS INTENDED TO RESTRICT ACCESS BY YOUNG CHILDREN TO THE CONTENTS OF A CABINET OR DRAWER, BUT SOME CHILDREN MAY STILL BE ABLE TO DEFEAT IT. • REPLACE THE DEVICE IF IT BECOMES DAMAGED OR BROKEN OR FAILS TO FUNCTION PROPERLY.

CAUTION: Adult supervision is required. This product is used as a deterrent. Discontinue use when child is able to open it. Always keep hazardous items in area inaccessible to children.