



Coupe 2-Seater Amaze 4-Seater

Assembly & Safety Instructions



Please keep this booklet in a safe place for the life of your Rainbow Baby Stroller Wagon

WARNING

**Important - Keep these instructions for future reference.
Avoid serious injury to children from falling or sliding out.
ALWAYS use the included harnesses to secure each child.**

- Never leave children unattended.
- Always set parking brake while loading and unloading children.
- This wagon is not intended for children under 6 months of age.

Avoid serious injury to children:

- Use with caution when using wagon near traffic or in highly congested areas.
- DO NOT use wagon on stairs or escalators.
- Keep children clear when unfolding and folding the wagon.
- DO NOT let your child play with this product.
- DO NOT use the wagon while running, jogging, or skating. The wagon is intended to be used at a brisk walking speed.

Avoid injury from wagon tipping over

- DO NOT allow more children than the wagon is instructed to hold.
- DO NOT exceed the [Coupe 2-seater] per bench limit of 45lbs per seat
- DO NOT exceed the [Amaze 4-seater] per bench limit of 99lbs (49.5lbs per seat)
- The wagon is not intended to carry children taller than 40 inches.
- DO NOT overload the wagon as it may cause instability and/or damage to the product.
- Only manufacturer approved parts and accessories should be placed on the wagon.

Non-compliant parts or accessories, such as hanging items or bags, may cause instability.

- DO NOT place more than 11lbs (5kg) in the storage basket.
- DO NOT place more than 1.1lbs (0.5kg) in each storage pocket.
- ALWAYS distribute weight in the wagon as evenly as possible.

Avoid loss of control of wagon

- ALWAYS ensure that all locking clips, clamps, and buckles are engaged and all accessories are securely fastened before use.
- NEVER leave wagon unattended on a hill or incline even when parking brake is set.
- ALWAYS use caution when the wagon is on uneven terrain or slopes.
- ALWAYS set parking brake when the wagon is stationary.

Avoid pinch injury

- Keep fingers clear of hinged joints when folding and unfolding the wagon.
- ALWAYS keep children clear from moving parts when making adjustments to the wagon.

See Assembly, Operation, and Maintenance & Care sections for additional warnings and usage instructions.

If any parts are either missing, broken, or need assistance while assembling your wagon, please contact customer support at www.RainbowBabyStore.com

Parts checklist 3

Assembly

Unfolding the wagon / assembly of front wheels / assembly of rear wheels 4

Assembly of rear wheels / basemat 5

Assembly of seat / basket 6

Assembly of frame and canopy 7

Operation






 


Securing the harness / assembly & removal of the harness 8

Parking brake operation / folding the wagon / canopy assembly 9

Operation of canopy & handles 10

Cleaning 11

Parts Check List

 <p>1. Wagon body (1pc)</p>	 <p>2. Rear wheels assembly (2pcs)</p>	 <p>3. Front wheels assembly (2pcs)</p>	 <p>4. Bench seats (2pcs)</p>
 <p>5. Canopy (1pc)</p>	 <p>6. Wagon basemat (1pc)</p>	 <p>7. Brake set (1pc) & C-shaped clamp (2pc)</p>	 <p>8. Storage basket (1pc)</p>

Unfolding the wagon

1. Standing on either side of the wagon, push smoothly outward on the upper front and rear frame tubes to unfold the wagon.
2. Ensure the upper lock on the right side of the wagon snaps into place.
3. Flip over the side pocket flaps to the outside on both sides of the wagon to cover the frame joints.



Assembly & removal of front wheels

1. Insert front wheels into the front wheel housings until you hear a click.
2. After attaching the front wheels, pull down on each wheel to confirm that they are securely locked in place.
3. To unlock and release the wheel, use a tool with a narrow point to press the metal buttons at the base of the wagon frame, then pull off the wheel.



Assembly of rear wheels

1. The C-shaped clamp comes pre-installed on the brake assembly. Release the C-shaped clamp by pushing it out from the brake unit.
2. Insert the wheel axle in the brake assembly.
3. Insert the C-shaped clamp back into the rear wheel housing.
4. Pull the rear wheel axle to ensure that the rear wheel assembly is secure.



Assembly of rear wheels

1. Line up and connect the rear wheel assembly to the rear tube joint.
2. Check that the c-clips are in place on both sides of the wheel housing.



Assembly of basemat

1. Place the basemat into the base of the wagon fabric nestled against the frame.
2. Press the basemat with your hands to level and secure it in place.



Seat assembly (Seat is not suitable for children under 6 months)

1. Place the seat into one end of the wagon.
2. Secure the hooks on both sides of the seat onto the wagon frame hand rail. Then secure the hooks and buckle on the back of the seat onto the upper tube of the wagon frame.
3. Completed seat assembly shown in diagram 3.
4. For reclining mode, remove the seat and reposition the side hooks further forward.



Seat Mode



Reclining Mode



4



Basket assembly

1. Slide the basket hooks into the slots on the frames under the handle bar tube.
2. Gently wiggle the basket to level it. Completed assembly shown in diagram 2.



Canopy assembly

1. Take out the canopy fabric from the package. Insert the canopy tubes through the piping of the fabric.
2. Before assembling the canopy, make sure all four plastic clamps at the corners are open.
3. Insert the canopy poles into the frame slots on all four corners at the desired height.
4. Clasp to close all four plastic clamps. Canopy assembly complete.

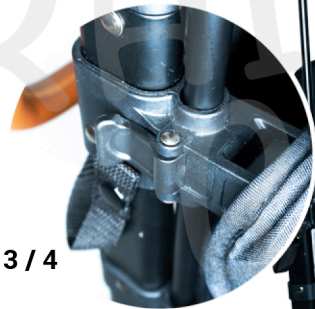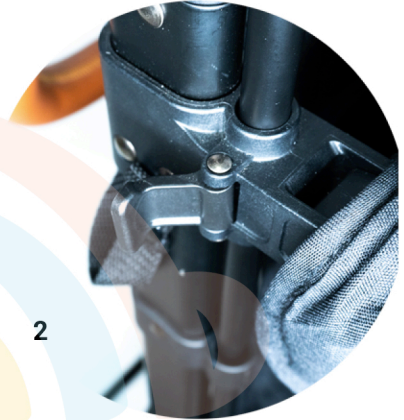


OPERATION

Securing the harness

1. With harness unbuckled, place child in seat.
2. Secure child with harness by placing shoulder and waist belts over shoulders and over thighs.
3. Snap buckle tongues into centre strap buckle.
4. Adjust each strap by pulling on the free end of the strap and move the slide adjuster along strap.

Two Seat Layout



One Seat Layout

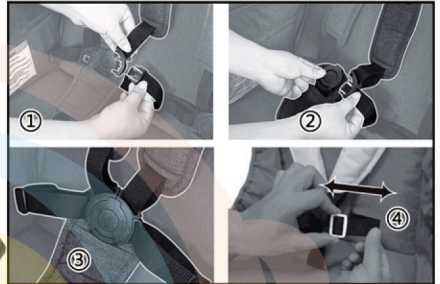

Assembly & removal of the harness

1. Open the velcro strips on the backside / bottom of the seat to access the belt catches.
2. Insert the belt catch perpendicular through the front fabric and internal plastic boards as shown in diagram 2.
3. Rotate the belt catch parallel to the backrest and pull the belt to secure in place as shown in diagram 3.
4. To remove the safety belt, rotate the belt catch perpendicular to the backrest and then pull the belt and catch out.

Note: Refer to "Securing the harness" section above for waist & center strap buckle assembly.

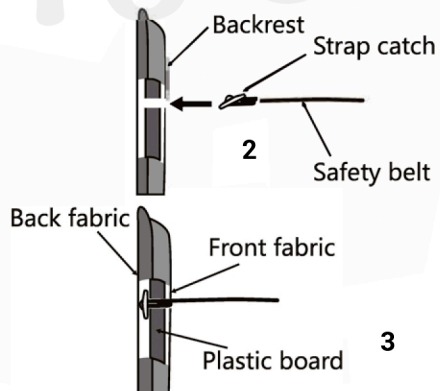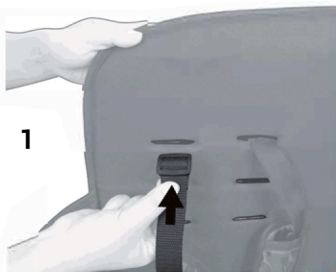

Parking brake operation

1. Step down gently on the parking brake pedal to lock. To test and ensure the brake is engaged, try to push the wagon forward.
2. Lift the parking brake pedal upwards with your foot to release it.



Folding the wagon

1. Flip the side pockets into the wagon.
2. Grasp the folding hinge on both sides.
3. Lift up on the folding hinges with both hands until the wagon is completely folded. Keep fingers clear of hinges to avoid pinching.
4. Secure the lower latch to lock the wagon in the folding position.

Do not use lower latch (4) to lift / hold.



Canopy storage

1. Adjust the handle to the upright direction.
2. Roll up the canopy fabric around the horizontal part of the canopy poles.
3. Insert the combined ends of the canopy poles into the side sleeve compartments.
4. Secure the poles using the straps on the rear leg tubes and snap the fasteners.



Canopy height adjustment

1. Before adjusting the height of canopy, make sure all four plastic clamps at the corners are open.
2. With one hand on each horizontal part of the canopy pole, gently slide the canopy poles up / down to desired height. Be careful not to bend the poles.
3. Secure all four plastic clamps to lock canopy height.



Handle height adjustment

1. Press the adjustable handle button on both sides simultaneously.
2. While the buttons are pressed, position the handle up or down to desired height.



Cleaning the stroller & seat pad.

1. Wash stroller frame with mild soap and warm water solution.
2. For bench fabric, spot clean with mild soap and warm water solution.
3. Rinse and wipe with dry cloth until fully dry.

One Year Limited Warranty

When you purchase a new, unused product from www.rainbowbabystore.com your product is covered under our one year limited manufacturer warranty.

Our warranty covers the original purchaser for any components that affect the use and functionality of the product while using it under it's intended use.

The warranty does not apply to damage caused by product alteration, or customer / user misuse or abuse of the product. Your sales receipt is your only record of the date of purchase. Warranty is subject to change at any time at manufacturer's sole discretion.

For warranty information and claims, please visit customer support at www.RainbowBabyStore.com

Mailing Address

Rainbow Baby
551 Lakeshore Rd E
Unit 10, Suite 125
Mississauga, ON
L5G 1H9
Canada



WWW.RAINBOWBABYSTORE.COM

