



Add or Delete RF Wireless Keyfob

Add WE800EV2 Keyfob

Notice! Learn all WE800EV2 keyfobs via WE800EV2 receiver Learn/Delete button before adding the WE800EV2 keyfobs to the system. Refer WE800EV2 manual for learn/delete fobs.

Notice! Set RF receiver as WE800EV2 Receiver (Value 2 in Location 395)

1

- Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).

2

- Enter the WE800EV2 keyfob number (301 to 332) you want to add (301 = keyfob 1, 302 = keyfob2, etc.), followed by the [#] key. Up to 21 WE800EV2 keyfobs can be added, but only current keyfob number (1 to 16) displays through zone indicators on the ICON codepad

3

- The user number will display on the codepad. Press [#] to continue

4

- When icon numbers (1 to 16) flash, press button 1 or 2 of the keyfob. The panel learns the WE800EV2 Keyfob ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm

5

- Enter [#] key to confirm the operation, or press [*] to cancel

Delete WE800EV2 Keyfob

1

- Enter the Master Code, followed by [1] and the [#] key

2

- Enter the WE800EV2 keyfob number (301 to 332) you want to delete, followed by the [#] key

3

- Press the [*] key to delete the WE800EV2 Keyfob



Add or Delete RF Wireless Keyfob

Add RADION Keyfob

Notice! Solution 2000 does not support RADION keyfobs. Set RF receiver as RADION Receiver B810 (Value 1 in Location 395).

1

- Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).

2

- Enter the RADION keyfob number (301 to 332) you want to add (301 = keyfob 1, 302 = keyfob2, etc.), followed by the [#] key. Up to 32 RADION keyfobs can be added, but only current keyfob number (1 to 16) displays through zone indicators on the ICON codepad.

3

- Use manual mode or auto mode to configure RADION keyfob RFID.
 - In manual mode, enter the 9-digit RF device ID number, followed by the [#] key.
 - Or press [#] key to switch into auto mode. When icon numbers (1 to 16) flash, press button 1 or 2 of the keyfob. The panel learns the RADION Keyfob ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm.

4

- Enter [#] key to confirm the operation, or press [*] to cancel

Delete RADION Keyfob

1

- Enter the Master Code, followed by [1] and the [#] key

2

- Enter the RADION keyfob number (301 to 332) you want to delete, followed by the [#] key.

3

- Press the [*] key to delete the RADION Keyfob.



Add or Delete RF Wireless Keyfob

Add the Keyfob

Notice! Set RF receiver as WE800EV2 or RADION receiver through the menu [3][5][1].

1

- Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).

2

- Choose a user number then press the [#] key

3

- Choose keyfob then press the [#] key.

4

- Keyfob RFID displays. The letter "M" appears in the top right corner of the display indicating it is in manual mode
 - In manual mode, enter the 9-digit RADION keyfob RFID, followed by the [#] key.
 - Or press [*] key to switch into auto mode to configure RADION or RE012EU keyfobs. The letter 'A' should appear in the top right corner of the display indicating it is in automatic mode. Hold button 1 or 2 of the keyfob till codepad displays RFID number. Press [#] key to confirm.

5

- Enter [#] key to confirm the operation, or press [*] to cancel

6

- Press menu [-] to exit

Delete the Keyfob

1

- Enter the Master Code, followed by [1] and the [#] key

2

- Choose a user number then press the [#] key

3

- Choose keyfob then press the [#] key.

4

- Press the [*] key to blank the RFID and then press the [#] to accept

5

- Press menu [-] to exit.

4.18.2

Zone/Device RFID and RF Zone Option

Item	Location	Default	New	RF Zone Option Location	Default	New
RF Zone #01	1820 - 1827	0		1828	0	
RF Zone #02	1830 - 1837	0		1838	0	
RF Zone #03	1840 - 1847	0		1848	0	
RF Zone #04	1850 - 1857	0		1858	0	
RF Zone #05	1860 - 1867	0		1868	0	
RF Zone #06	1870 - 1877	0		1878	0	
RF Zone #07	1880 - 1887	0		1888	0	
RF Zone #08	1890 - 1897	0		1898	0	
RF Zone #09	1900 - 1907	0		1908	0	
RF Zone #10	1910 - 1917	0		1918	0	
RF Zone #11	1920 - 1927	0		1928	0	
RF Zone #13	1940 - 1947	0		1948	0	
RF Zone #14	1950 - 1957	0		1958	0	
RF Zone #15	1960 - 1967	0		1968	0	
RF Zone #16	1970 - 1977	0		1978	0	

Item	Option		
RF Zone Option	0 = All used	1 = Input 1 2 = Input 2	4 = Input 3 8 = Input 4