


Features and Functions

TouchMotion AWD Programmer

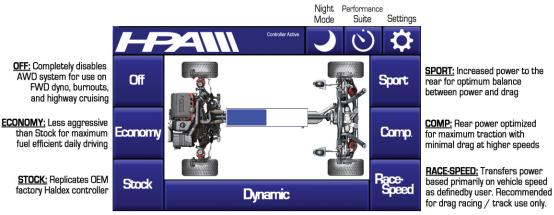

<u>DYNAMIC:</u> Switches between user defined low mode (Eco, Stock, or Sport) and high mode (Stock, Sport, or Comp) based on driver demand, throttle position, and RPM

Race-Speed Settings:

This is used in Race-Speed mode to adjust the torque transfer to the back axle based on speed.		
Engagement None Full at speed:		
0km/h - 0% 💿		
5km/h - 91% ————		
10km/h - 100% ——————————————————————————————————		
25km/h - 70%		
50km/h - 40%		
100km/h - 10% —		
150km/h - 2% 💿		
higher - 0%		

Global Settings:

Units of display				
km/h				
Please select the haldex model installed				
Stock				
What mode should the Haldex default to				
Last used mode				
Force the Haldex to ignore the brake pedal at all times.				
Force the Haldex to ignore the brake pedal while in Competition and Race-Speed modes.				
What level the Haldex should apply at while braking.				
70%				

Dynamic Settings:

,	,			
Minimum and maximum settings the dynamic mode will change between				
Lowest mode:	Economy			
Highest mode:	Competition			
How long will it stay on the higher mode before returning				
1 seconds 💿				
Throttle level to use as the dynamic threshhold. Normally around 40%				
40% ———				
RPM level to use as the dynamic threshhold. Normally around 4000				
800RPM				
How long driving above the threshhold before switching				
5s •				

Troubleshooting:

LED Indicator Light	Status	Action
Solid Green	Unit working correctly. Haldex and Vehicle BUS communicating.	None required
Blinking Green	Firmware issue, vehicle will only function in FWD	Update required
Solid Red	Hardware issue, vehicle will only function in FWD	Contact HPA for support
Single Red Blink	Vehicle BUS issue	Check Communication Cable is properly connected
Double Red Blink	Haldex BUS issue	Check Communication Cable is properly connected
Single Red Blink + Double	Both Vehicle and Haldex BUS	Check Communication Cable is
Red Blink	showing errors	properly connected
No Indicator	Control Unit does not have power	Turn ignition power on / check wiring
On Screen Display	Status	Action
Controller Active	Wifi system is communicating	None required
Controller Found	Touch Screen Interface is connecting to Control Unit via wifi	Wait for connection
Disconnected	Wifi not connecting Touch Screen Interface to Control Unit	Turn ignition power on / Check wiring / Ensure control unit has power
Continuous cycling through Disconnected / Controller Found / Controller Active	Wifi is working but Haldex is not responding	Check LED indicator on Control Unit
Periodic cycling through Disconnected / Controller Found / Controller Active	Wifi connection cycling to clear intermittent communication errors.	Ignore as long as "Controller Active" is displayed for at least a minute at a time.

Updates:

Periodic updates will be available for download from HPA's website. Copy the update file to a Micro SD Card (not included).

Insert Micro SD Card into the slot on the Touch Screen Interface. Power on TMAP unit and the update procedure will launch automatically. Follow the prompts to install.

Turn on vehicle ignition power and TMAP system for Control Unit to receive update from Touch Screen Interface via wifi.