



## TECHNICAL DATA

VOLTAGE: 12V only


POWER CAPACITY: 96W maximum



## INSTRUCTIONS

These operating instructions are applicable for the  
STANDARD Keis Power Controller only.

 **KEIS**  
**Power Controller**  
W54-37 | 220



For the full range of Keis accessories,  
or further information, please visit the website:

[www.keisapparel.com](http://www.keisapparel.com)

[www.keisapparel.com](http://www.keisapparel.com)





## USING THE POWER CONTROLLER

Locate the Controller Pocket on your Keis heated garment. This is the vertical zipped pocket on the outside of the left front panel, near the waist, of your Keis Heated Jacket, Keis Heated Bodywarmer, or Keis Heated Vest.

Zip open the pocket to expose the Loop Connector cable. The zip moves upwards to open, and downwards to close.


Pull this cable evenly to disconnect the Loop Connector from both its male and female plug connections. Store the disconnected Loop Connector cable carefully, as it will be required for the heated garment to work if you decided to no longer use the Power Controller.


Connect the Power Controller to both the male and female connections within the Power Controller pocket.

---

When the Power Controller is connected to a powered garment for the first time, all the LEDs on the controller will flash for 2 seconds.

### To SWITCH ON:

Press and hold down the  button for one second to switch the controller on. The controller will default to the highest setting (shown by a red LED).

Press the  button again to scroll through the settings - medium (amber), low (green), and back to high (red).

### To SWITCH OFF:

Press and hold the  button for at least 2 seconds to switch off.



## SAFETY AND ENVIRONMENT FIRST

DO NOT dispose of electrical equipment with standard domestic waste. Contact your local authority for disposal information specific to your area.

ONLY OPERATE ON A 12V SYSTEM. The unit will be irreparably damaged if operated at other voltage.

DO NOT adjust the Power Controller while operating a motorcycle, or any other type of vehicle or machinery.

DO NOT allow the unit to be submerged in water.

DO NOT modify or disassemble any part of the system in any way.

DO NOT use if the product is visibly damaged, or feels hot to the touch.

---

This Keis Power Controller is suitable for all Keis Heated Jackets, Bodywarmers, and Vests, and other Keis heated garments that do not feature a built-in power controller.

Do not connect this Power Controller in series to a Keis garment that already has a built-in power controller (like the Keis heated motorcycle gloves), as they will cancel each other.

Always connect this Power Controller to the provided connectors in the Controller Pocket, and not in between a Keis heated garment and a power source (a portable battery or vehicle power lead). This allows for other garments (like gloves) to be connected to a Keis Jacket, Bodywarmer or Vest without the Power Controller conflicting with the glove's built-in controller.