

# PRO-SERIES

## TRAVEL FRIENDLY

Visit <http://www.beachwaver.com/pages/manuals>  
for User Guide and full operating instructions.  
Retain documentation for future reference.



DUAL VOLTAGE  
100 - 240V

## SAVE THESE INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

When using iron, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING

*For tips and tricks on how to use your Beachwaver, visit [Beachwaver.com](http://Beachwaver.com)*

**WARNING:** The Beachwaver® curling iron has a motorized function that, if impaired, could cause serious pain or burns to the scalp. If used improperly or if product malfunctions, discontinue use immediately. If the motor continues to rotate without the control of the Rotation Button, immediately unplug unit, release the clamp and slide hair out. Contact Customer Service for support.

**WARNING: POSSIBLE ELECTRIC SHOCK. DO NOT IMMERSE IN WATER OR USE WHILE BATHING. SUITABLE FOR DRY LOCATIONS ONLY.**

**Avertissement: LA DECHARGE ELECTRIQUE POSSIBLE, N'IMMERGENT PAS OU N'EMPOLOIENT PAS TOUT EN SE BAINANT. UTILISATION AU SEC SEULEMENT.**

**WARNING:** The Beachwaver iron is an electrical appliance and reaches high temperatures. Use of iron requires constant supervision and should be kept away from water.

#### KEEP AWAY FROM WATER!

**DANGER – As with most electrical appliances, parts are live even when the switch is off. To reduce the risk of death by electric shock:**

1. Always unplug it immediately after use. When the appliance is connected to a power supply, never leave it unattended.
2. Do not use while bathing.
3. Do not place or store iron where it can fall or be pulled into a tub, sink or other vessel containing water.
4. Do not place in water or other liquids.
5. If the appliance falls into water, unplug it immediately.

**DO NOT REACH INTO WATER!**

**WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:**

1. This iron should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. This iron is only intended for use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate the iron if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged or dropped into water. Contact [customerservice@beachwaver.com](mailto:customerservice@beachwaver.com) for more information.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Never drop or insert any object into any opening or hose.
9. Do not use an extension cord with this appliance.
10. This curling iron and clip are hot when in use. Do not let eyes and bare skin touch heated surfaces.
11. Do not place the heated curling iron directly on any surface while it is hot or plugged in. Always use the stand provided to place on a heat-resistant, stable, flat surface.
12. Do not use if hair has been treated with flammable products.

13. Iron will be hot when in use.
14. Do not allow children to use.
15. Do not use iron when you are impaired in any way.
16. Iron must be completely cool before storing.
17. Do not attempt to touch the surface of the iron, as it is hot and can cause injury, burns and pain. KEEP AWAY FROM WATER.
18. Do not use without the assistance of a mirror.
19. Do not pull, twist, or wrap cord around the iron.
20. Do not operate with a voltage converter.
21. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Do not use this device in a bathtub, shower, or water-filled reservoir.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.

## WARNING:



- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- Burn Hazard! Keep appliance out of reach from young children, particularly during use and cool down.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance on a stand, if any, on a heat-resistant, stable flat surface.

### Environmentally friendly disposal



The use of this symbol indicates that this product may not be treated as household waste, throughout the EU. To prevent possible harm to the environment or to human health from uncontrolled waste disposal, please recycle this product responsibly to promote the sustainable reuse of material resources. To return your used device please use the return and collection systems, or contact the retailer where the product was purchased who can take it for environmentally safe recycling.

# SAVE THESE INSTRUCTIONS

## SERVICING OF DOUBLE INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED." The symbol (square within a square) may also be marked on the appliance.

**This appliance is for household use.**

**WARRANTY:** Please visit <http://www.beachwaver.com/pages/return-policy> for information on how to register your tool or to make a warranty claim. You may also email [customerservice@beachwaver.com](mailto:customerservice@beachwaver.com).

To get the most from your Beachwaver curling iron, follow [@TheBeachwaver](#) for tutorials and tips.

# OPERATION



## TO TURN ON/OFF

To turn on the Beachwaver, press and hold the ON/OFF button for 1 second. The temperature will illuminate to 350°F. To turn off, press and hold the ON/OFF button until the second beep. Unplug the iron for cooling.

## TO CHANGE TEMPERATURE

To change between °F and °C, press +/- buttons simultaneously for 3 seconds.

To change the temperature, press the ON/OFF button until it beeps and use the +/- buttons to adjust. It is important to always select the proper heat settings for your hair type.

**Fine or damaged hair: 310°F - 350°F (160°C - 180°C)**  
**Medium or normal hair: 370°F - 410°F (190°C - 210°C)**  
**Thick or coarse hair: 430°F - 450°F (220°C - 230°C)**

NOTE: To change from °F to °C, Press +/- buttons simultaneously for 3 seconds.

## ROTATION

Press the "L" key, the "L" indicator light will light up and beep, then press the "GO" key, and the heating barrel will rotate clockwise.

Press the "R" key, the "R" indicator light will light up and beep, then press the "GO" key, and the heating barrel will rotate counterclockwise.



## HOW TO SET ROTATION SPEED

Press and hold the "L" key for 5 seconds after turning on, the buzzer will make a sound. At this time, the digital display will display LO and flash 3 times at the frequency of 1 second, then the display will enter the real-time setting temperature. At this time, press the "GO" key to enter the low speed rotation state.

Press and hold the "R" key for 5 seconds after turning on, the buzzer will make a sound. At this time, the digital display will display HI and flash 3 times at the frequency of 1 second, then the display will enter the real-time setting temperature. At this time, press the "GO" key to enter the high speed rotation state.

NOTE: Plug in the power supply and start at high speed by default.

## USER MAINTENANCE

### CARING FOR YOUR BEACHWAVER

The Beachwaver is virtually maintenance-free. If surface becomes dirty, unplug iron and, when it is cool, wipe the exterior with a cloth. If anything abnormal occurs, contact [Customerservice@beachwaver.com](mailto:Customerservice@beachwaver.com) for support. Do not attempt to repair iron yourself.

Attempting to repair iron yourself voids warranty.

## STORAGE

### WHEN NOT IN USE

Turn off and unplug the curling iron. Allow the iron to cool, and store out of reach of children in a safe, dry location.

Never wrap the cord around the iron, as this may cause premature wear of the cord and may lead to cord damage that is not covered under manufacturer's warranty.

Handle the cord carefully to extend cord life, and avoid jerking, bending or twisting the cord, especially at the plug connection.

## Regulatory Information and Plug type provided by Country of Sale

Australia: Type I Plug



**TRAVEL-FRIENDLY:** 100-240VAC, 50-60Hz

BW3636AU, BW3636AUA, BW3636AUB, BW3636AUC, BW3636AUD, BW3636AUE, BW3636AUF, BW3636AUG, BW3636AUH, BW3636AUI, BW3636AUJ, BW3636AUK, BW3636AUL, BW3636AUM, BW3636AUN, BW3636AUO, BW3636AUP, BW3636AUQ, BW3636AUR, BW3636AUS, BW3636AUT, BW3636AUU, BW3636AUV, BW3636AUW, BW3636AUX, BW3636AUZ :

73W

BW3434AU, BW3434AUA, BW3434AUB, BW3434AUC, BW3434AUD, BW3434AUE, BW3434AUF, BW3434AUG, BW3434AUH, BW3434AUI, BW3434AUJ, BW3434AUK, BW3434AUL, BW3434AUM, BW3434AUN, BW3434AUO, BW3434AUP, BW3434AUQ, BW3434AUR, BW3434AUS, BW3434AUT, BW3434AUU, BW3434AUV, BW3434AUW, BW3434AUX, BW3434AUZ :

90W