

PORCH ~ extend your living area outside - Made in 4m + 5m size, fits all models

In your bag you will find...

1x fibreglass pole


1x nylon rain catcher



2x straight steel poles + 1x curved steel pole

6x smooth pegs

1. Open out fibreglass pole, slide through sleeve at rear of porch canvas (identifiable by wooden toggles).

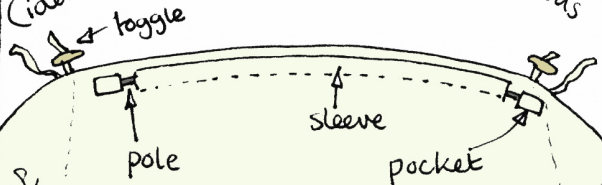


Slot the ends of the pole in to the canvas pockets at either end.

2. Attach the porch to your tent by slotting the toggles through the loops above the door (on the tent roof)

Use the ties if necessary to secure in place.

loops here

porch.

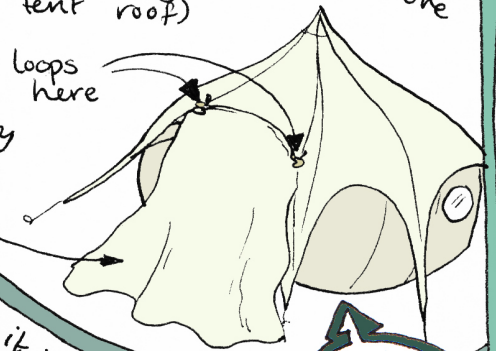

3. Connect the curved steel pole together:




4. ... And slide it in to the sleeve at the front of the porch.



clip black strap together to adjust curve of pole

5. Open out the two straight steel poles...

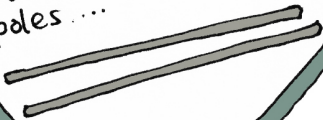


6. ... And connect them to either side of the bent pole.



7. Secure the straight steel poles in place using the velcro straps, 2 on each side of the porch.



8. Insert the latch-pegs at the base of the walls of the porch up in to the hollow end of the steel pole:

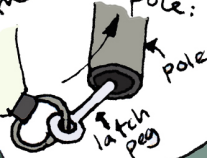

10. That funny shaped piece of nylon???

- open the velcro between the roof + wall of your tent, fix the velcro squares on your nylon between it so that it hangs down in front of the wall, and behind the roof.
- Attach the two black hooks on your nylon to the loops above the doorway.
- Pull the guy lines down and attach to the pegs used for the roof guys.

use the black strap across the base to help position the poles

9. Peg down through loops, adjust as necessary.

